


OPERATING AND SERVICE MANUAL

FREQUENCY CONVERTER

5253B

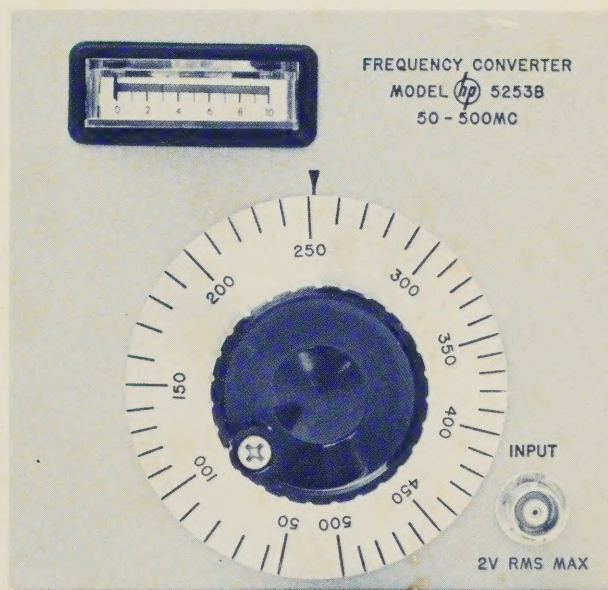

HEWLETT **hp** PACKARD

CERTIFICATION

The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.

WARRANTY AND ASSISTANCE

All Hewlett-Packard products are warranted against defects in materials and workmanship. This warranty applies for one year from the date of delivery, or, in the case of certain major components listed in the operating manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period provided they are returned to Hewlett-Packard. No other warranty is expressed or implied. We are not liable for consequential damages.

Service contracts or customer assistance agreements are available for Hewlett-Packard products that require maintenance and repair on-site.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

FREQUENCY CONVERTER

5253B

SERIAL PREFIX: 828-

This manual applies directly to HP Model 5253B Frequency Converters having serial number prefix 828-.

OLDER INSTRUMENTS

This manual with changes provided in Appendix I also applies to models having serial prefix numbers 716, 513, 450, 321, and 311.

MODEL 5253A

This manual with information provided in Appendix II also applies to Model 5253A Frequency Converters having serial prefix numbers 238 and 226.

Copyright HEWLETT-PACKARD COMPANY 1963
1501 PAGE MILL ROAD, PALO ALTO, CALIFORNIA, U.S.A.

01874-6

Printed: OCT 1968

HEWLETT  PACKARD

TABLE OF CONTENTS

Section	Page	Section	Page
I GENERAL	1-1	V MAINTENANCE (cont'd)	
1-1. Description	1-1	5-10. Repair and Replacement	5-1
1-5. Specifications	1-1	5-12. Printed Circuit Component	
1-7. Accessory	1-1	Replacement	5-3
1-9. Instrument Identification	1-1	5-14. Video Amplifier Assembly	
1-11. Cooling	1-1	Replacement	5-3
II PREPARATION FOR USE	2-1	5-16. Mixer Diode Replacement	5-3
2-1. Unpacking and Mechanical Inspection	2-1	5-18. Meter Replacement Procedure	5-3
2-3. Electrical Inspection	2-1	5-20. Harmonic Generator Adjustment	5-4
2-5. Storage and Reshipment	2-1	5-22. Low Pass Filter Adjustment	5-4
2-8. Installation	2-1	5-25. Mechanical Adjustment of Meter	
2-11. Power Requirements	2-1	Zero	5-5
2-13. Electrical Connections	2-1	5-28. Sensitivity Check	5-5
III OPERATION	3-1	5-29. Meter Accuracy Check	5-5
3-1. Front Panel	3-1	5-30. Low Pass Filter Check	5-5
3-3. Maximum Input Voltages	3-1	5-31. In-Cabinet Performance Check	5-6
3-5. Operating Procedures	3-1	VI REPLACEABLE PARTS	6-1
3-6. Normal Range Measurements	3-1	6-1. Introduction	6-1
3-8. Extended Range Measurements	3-1	6-4. Ordering Information	6-1
3-12. Double-Checking Frequency		APPENDIX I - Manual Changes	IA-1
Measurement Result	3-1	APPENDIX II - Model 5253A	IIA-1
3-14. Aid to Rapid Tuning	3-3	IIA-1. Introduction	IIA-1
IV PRINCIPLES OF OPERATION	4-1	IIA-3. Description	IIA-1
4-1. General	4-1	IIA-7. Operating Procedure	IIA-1
4-5. Harmonic Generator (A2, A3), and		IIA-8. Normal Range Measurements	IIA-1
Harmonic Selector Cavity	4-1	IIA-10. Extended Range Measurements	IIA-1
4-7. Mixer (A4)	4-2	IIA-14. Video Amplifier Assembly (A1)	IIA-3
4-9. Video Amplifier Assembly (A1)	4-2	IIA-16. Level Indicator Meter	IIA-3
4-11. Level Indicator Meter	4-2	IIA-18. Harmonic Generator Adjustment	IIA-3
V MAINTENANCE	5-1	IIA-20. Low Pass Filter Adjustment	IIA-3
5-1. General	5-1	IIA-22. Meter Adjustment	IIA-3
5-2. Introduction	5-1	IIA-23. Mechanical Adjustment of	
5-4. Periodic Maintenance	5-1	Meter Zero	IIA-5
5-6. Test Equipment	5-1	IIA-26. Sensitivity Check	IIA-5
5-8. Troubleshooting	5-1	IIA-27. Meter Accuracy Check	IIA-5
		IIA-28. Low Pass Filter Check	IIA-5
		IIA-29. In-Cabinet Performance Check	IIA-6

LIST OF ILLUSTRATIONS

Figure	Page	Figure	Page
1-1. Model 5253B	1-0	5-4. Top View - Test Points	5-9
3-1. Front Panel	3-0	5-5. Schematic Diagram	5-9
3-2. Frequency Measurement Procedure	3-2	6-1. Mechanical Parts Location - 5253B	6-2
3-3. Typical Frequency Measurements	3-3	6-2. Mechanical Parts Location - 5253B	6-3
4-1. Block Diagram	4-0	APPENDIX	
4-2. Harmonic Generator (A2, A3)	4-0	IA-1. Schematic Diagram	IA-2
4-3. Harmonic Selector Cavity	4-1	IIA-1. Frequency Measurement Procedure	IIA-2
4-4. Balanced Mixer (A4)	4-2	IIA-2. Video Amplifier (A6)	IIA-4
4-5. Video Amplifier (A1)	4-3	IIA-3. Level Indicator Meter Circuit	IIA-4
4-6. Level Indicator Meter Circuit	4-3	IIA-4. Top View	IIA-6
5-1. A1 Video Amplifier Component Location	5-6	IIA-5. Left Side View	IIA-7
5-2. Left Side View	5-7	IIA-6. Right Side View	IIA-8
5-3. Right Side View	5-8	IIA-7. Top View - Test Points	IIA-9
		IIA-8. Schematic Diagram	IIA-11

LIST OF TABLES

Table	Page	Table	Page
1-1. Specifications	1-1	6-2. Replaceable Parts	6-7
3-1. Frequency Resolution	3-1	APPENDIX	
5-1. Recommended Test Equipment	5-1	IA-1. Reference Designation Index	IA-3
5-2. Resistance Troubleshooting Aid	5-1	IIA-1. Specifications	IIA-1
5-3. Troubleshooting Procedure	5-2	IIA-2. Troubleshooting Procedure	IIA-10
5-4. Adjustments after Repair	5-4	IIA-3. Reference Designation Index	IIA-12
6-1. Reference Designation Index	6-4	IIA-4. Replaceable Parts	IIA-14

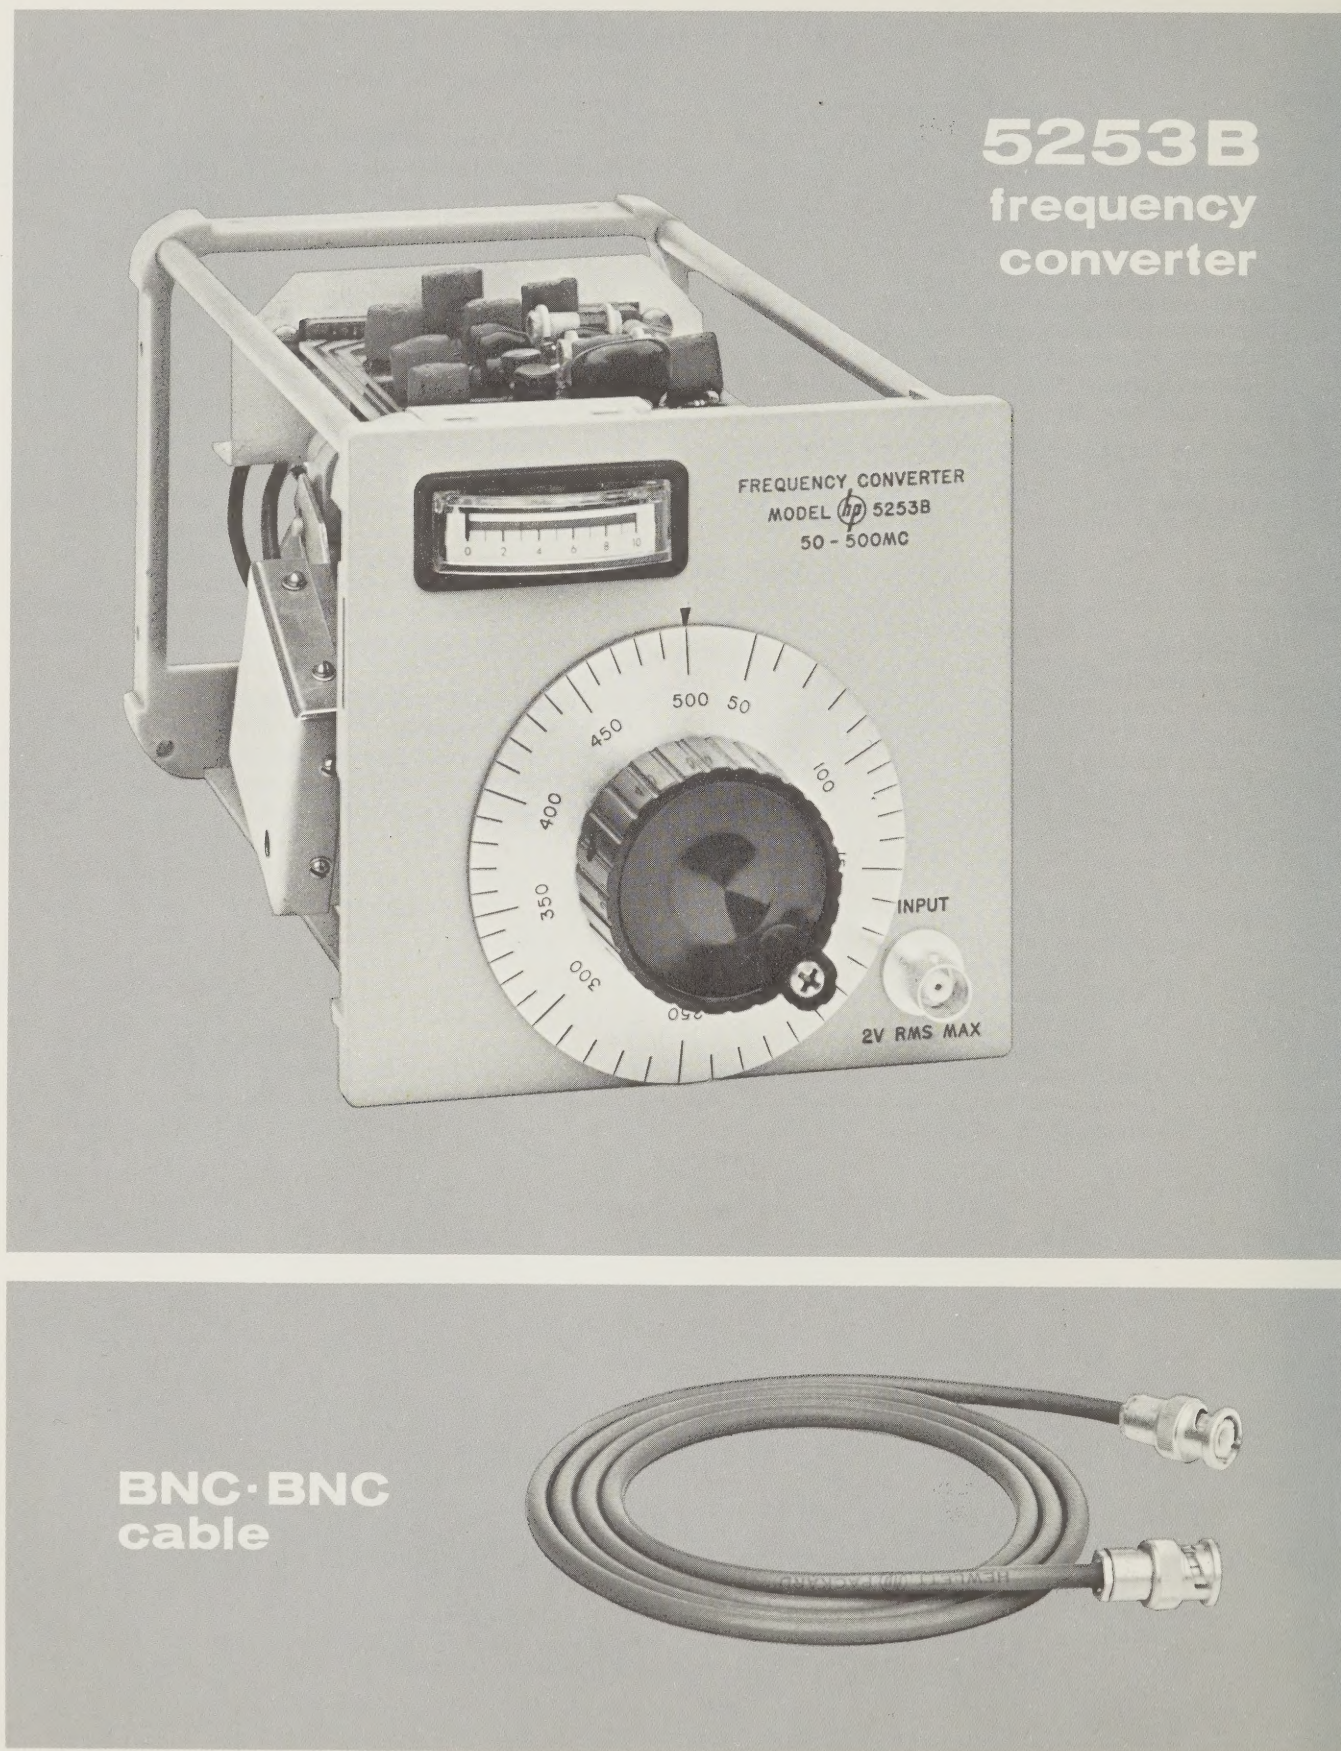


Figure 1-1. Model 5253B and Accessory

SECTION I

GENERAL

1-1. DESCRIPTION.

1-2. The Hewlett-Packard Model 5253B Frequency Converter is a plug-in unit which converts a Hewlett-Packard Model 5245L or 5246L Electronic Counter into a direct reading counter from 50 to 512 Mc.

1-3. The stability and accuracy of the basic counter are retained by multiplying a 10-Mc signal, derived from the 1-Mc internal time base of the counter, to a selectable harmonic frequency between 50 and 500 Mc. This known harmonic of 10 Mc is then heterodyned with the INPUT signal. If the resulting difference frequency is between 100 kc and 12 Mc (bandwidth of amplifier in plug-in), it is counted and displayed by the counter. The frequency of the INPUT signal is then indicated by the combination of the MIXING FREQUENCY control (in megacycles; front panel of plug-in) and the digital display of the counter (in megacycles).

1-4. A front panel meter, by monitoring the difference-frequency output of the plug-in to the counter, aids in selecting the desired MIXING FREQUENCY and also in determining if INPUT signal amplitude is adequate for accurate frequency measurement.

1-5. SPECIFICATIONS.

1-6. Table 1-1 contains all technical specifications for the Model 5253B when operated in the Model 5245L

or Model 5246L Electronic Counter. Test specifications given in the Maintenance Section (Section V) of this manual, for the purposes of troubleshooting and adjustment, do not represent the technical specifications of the instrument.

1-7. ACCESSORY.

1-8. A 50-ohm coaxial cable, 48 inches long, male BNC to male BNC, is furnished with the Model 5253B.

1-9. INSTRUMENT IDENTIFICATION.

1-10. Hewlett-Packard identifies each Model 5253B with a two-section, eight-digit serial number. If the first three digits of the serial number of your instrument do not agree with those on the title page of this manual, change sheets supplied with the manual will define the differences between your instrument and the Model 5253B described in this manual.

1-11. COOLING.

1-12. The Model 5253B is cooled by the ventilation system of the counter in which it is installed. See operating and service manual of counter for cooling system maintenance instructions.

Table 1-1. Specifications*

RANGE: As converter for 5245L or 5246L counter, 50 Mc to 512 Mc, using mixing frequencies of 50 Mc to 500 Mc in 10 Mc steps.

ACCURACY: Retains accuracy of 5245L or 5246L counter

INPUT VOLTAGE RANGE: 50 mv to 1 v RMS

MAXIMUM INPUT: 2 v RMS or 100 vdc will not damage the instrument

INPUT IMPEDANCE: Approximately 50 ohms

LEVEL INDICATOR: Meter aids frequency selection; indicates output voltage level to counter

REGISTRATION: Counter display is added to the converter dial reading

WEIGHT: Net 5-1/2 lbs, shipping 9 lbs

ACCESSORY FURNISHED: ϕ 10503A (AC-16K) Cable, 4 feet long, male BNC connectors

*When installed in Hewlett-Packard Model 5245L or Model 5246L Electronic Counter.

SECTION II

PREPARATION FOR USE

2-1. UNPACKING AND INSPECTION.

2-2. If the shipping carton is damaged, ask that the carrier's agent be present when the instrument is unpacked. Inspect the instrument for damage (scratches, dents, broken knobs, etc). If the instrument is damaged or fails to meet specifications, notify the carrier and the nearest Hewlett-Packard field office immediately (field offices are listed at the back of this manual). Retain the shipping carton and the padding material for the carrier's inspection. The field office will arrange for the repair or replacement of your instrument without waiting for the claim against the carrier to be settled.

2-3. ELECTRICAL INSPECTION.

2-4. The performance check procedure (Paragraph 5-31) may be used to verify proper electrical operation as part of an incoming quality control inspection.

2-5. STORAGE AND RESHIPMENT.

2-6. **PACKAGING.** To protect valuable electronic equipment during storage or reshipment, always use the best packaging methods available. Your Hewlett-Packard field engineer can provide packing materials similar to those used for original factory packaging. Here are two recommended packing methods:

a. Original. Place instrument in original container. Replace each packing pad and filler in the exact position that it originally occupied.

b. Alternate. Cover panel with soft wrapping paper. Wrap corrugated cardboard completely around instrument and place in strong corrugated cardboard container (350 lb/sq in. bursting test). Insert filler material between wrapped instrument and container to obtain a snug fit on all surfaces. Filler should be rubberized hair (2 in. thick), excelsior (6 in. thick), or equivalent.

2-7. **ENVIRONMENT.** Conditions during storage and shipment should normally be limited as follows:

a. Maximum altitude 20,000 feet (6,096 meters).

b. Minimum temperature -40°F (-40°C).

c. Maximum temperature 167°F (75°C).

CAUTION

TURN COUNTER POWER OFF BEFORE
INSTALLING OR REMOVING FREQUENCY
CONVERTER.

2-8. INSTALLATION.

2-9. The Model 5253B plugs into the rectangular compartment at the right-hand side of the front panel of the Model 5243L or 5245L Electronic Counter. To install unit in counter, first check that retaining screw (see Figure 3-1) is turned fully counterclockwise, then push unit firmly into compartment until front panel of plug-in is flush with front panel of counter. Then turn retaining screw clockwise until it is tight.


2-10. To remove unit from counter, turn retaining screw counterclockwise to its stop. Then grasp mixing frequency selector (see Figure 3-1) and firmly pull unit from counter. If any difficulty is encountered with installation or removal, check that retaining screw is fully counterclockwise.

2-11. POWER REQUIREMENTS.

2-12. All electrical power required to operate the Model 5253B is supplied by the counter in which the unit is installed.

2-13. ELECTRICAL CONNECTIONS.

2-14. INPUT connector on front panel of plug-in (see Figure 3-1) is the only external electrical connection to the unit. All other connections are made through the 50-pin connector at the rear of plug-in when installed in counter.

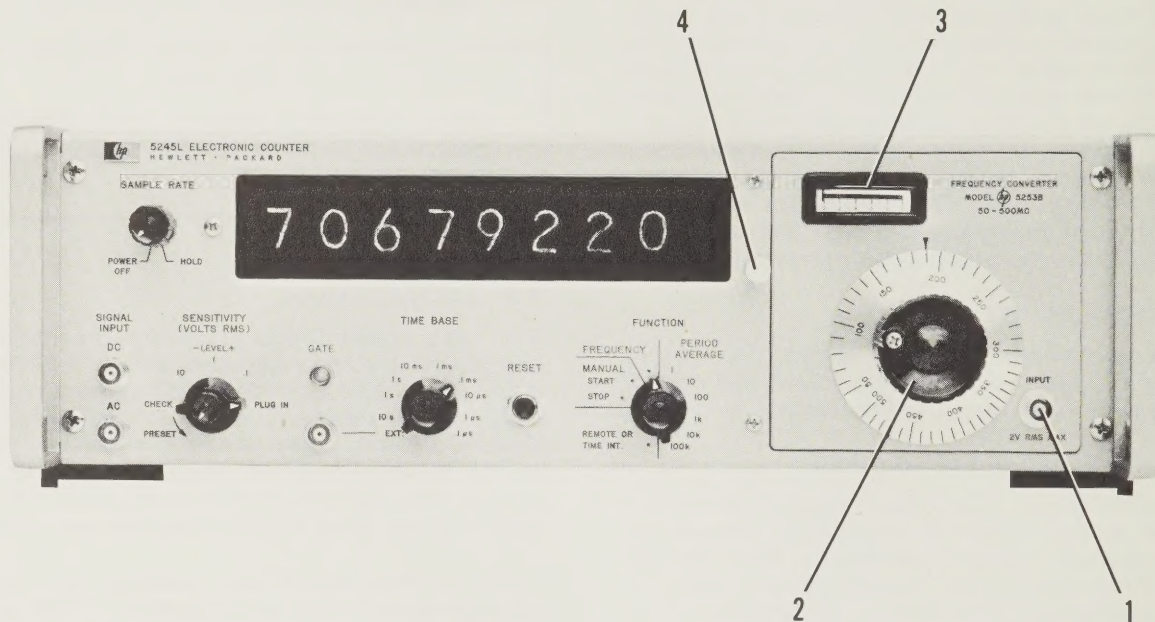

1. INPUT signal connector.
2. MIXING FREQUENCY SELECTOR. Calibrated in mc, this control tunes the internal cavity to select a harmonic of 10 mc to be heterodyned with the INPUT signal.
3. LEVEL INDICATOR METER. The meter circuit continuously monitors the level of the

difference-frequency output of converter to counter. When meter reads in the green portion of its scale, INPUT signal amplitude is adequate for accurate frequency measurement.

4. RETAINING SCREW. The screw which holds the converter in place is located on the front panel of the counter. To tighten, turn fully clockwise. To loosen, turn fully counter-clockwise.

Figure 3-1. Front Panel

SECTION III

OPERATION

3-1. FRONT PANEL.

3-2. The functions of the front panel control, meter, connector, and retaining screws are given in Figure 3-1.

3-3. MAXIMUM INPUT VOLTAGES.

3-4. Damage to the converter may result if an AC signal greater than 2 v RMS or a DC voltage greater than 100 v is applied to converter INPUT connector.

3-5. OPERATING PROCEDURES.

3-6. NORMAL RANGE MEASUREMENTS.

3-7. Figure 3-2 is the procedure to be used for measurement of frequencies from 50.1 to 512 Mc with INPUT signal amplitudes from 50 mv to 1 v RMS.

3-8. EXTENDED RANGE MEASUREMENTS.

3-9. The frequency of signals not within the normal range of 50.1 to 512Mc, 50 mv to 1 v RMS, may be measured using the following procedures:

3-10. 50 TO 50.1 MC, 50 MV TO 1 V RMS. Perform steps 1 through 5 of Figure 3-2. Then:

a. Set mixing frequency control to slightly more than 60 Mc.

b. Turn mixing frequency control slowly clockwise until level indicator meter first reaches a maximum reading in the green portion of its scale.

c. Subtract counter display (in Mc) from reading of mixing frequency control (in Mc) for frequency of INPUT signal.

3-11. 50 TO 512 MC, AMPLITUDE LESS THAN 50 MV RMS. The front panel level indicator meter indicates in the green portion of its scale only when converter is properly tuned and amplitude of INPUT signal is adequate for accurate frequency measurement. However, because of conservative specifications of both the converter and counter, frequencies may often be accurately measured when meter reads in the red portion of its scale. To make these extended range measurements:

a. Follow normal procedure (Figure 3-2 or Paragraph 3-10, depending upon frequency range) except that mixing frequency control should be tuned for first maximum reading on the level indicator meter, regardless of the color of region maximum.

b. Check frequency measurement result as described in Paragraph 3-12, or


c. Insert an external variable attenuator (such as Hewlett-Packard Model 355A or 355C) in the transmission line between the converter and the source of INPUT signal. Vary attenuation from 0 to 1 db during final step of frequency measurement procedure. If counter display does not change more than momentarily (during switching of attenuator), INPUT signal is above noise threshold and frequency measurement result is valid.

3-12. DOUBLE-CHECKING FREQUENCY MEASUREMENT RESULT.

3-13. Because of the heterodyne action of the converter, frequency measurement results obtained at any one setting of the mixing frequency control may be checked at other settings. See Figure 3-3 for examples.

Table 3-1. Frequency Resolution

INPUT SIGNAL FREQUENCY = 151.1223344 Mc MIXING FREQUENCY CONTROL set to 140 Mc		
Time Base Setting	Counter Display	Measurement Resolution
.1 μ s	* (no display)	
1 μ s	1 1. Mc	1 5 1. Mc
10 μ s	1 1.1 Mc	1 5 1.1 Mc
.1 ms	1 1.1 2 Mc	1 5 1.1 2 Mc
1 ms	1 1 1 2 2. kc	1 5 1.1 2 2 2 Mc
10 ms	1 1 1 2 2.3 kc	1 5 1.1 2 2 3 Mc
.1 s	1 1 1 2 2.3 3 kc	1 5 1.1 2 2 3 3 Mc
1 s	1 1 1 2 2.3 3 4 kc	1 5 1.1 2 2 3 3 4 Mc
10 s	1 1 2 2.3 3 4 4 kc	1 5 1.1 2 2 3 3 4 4 Mc

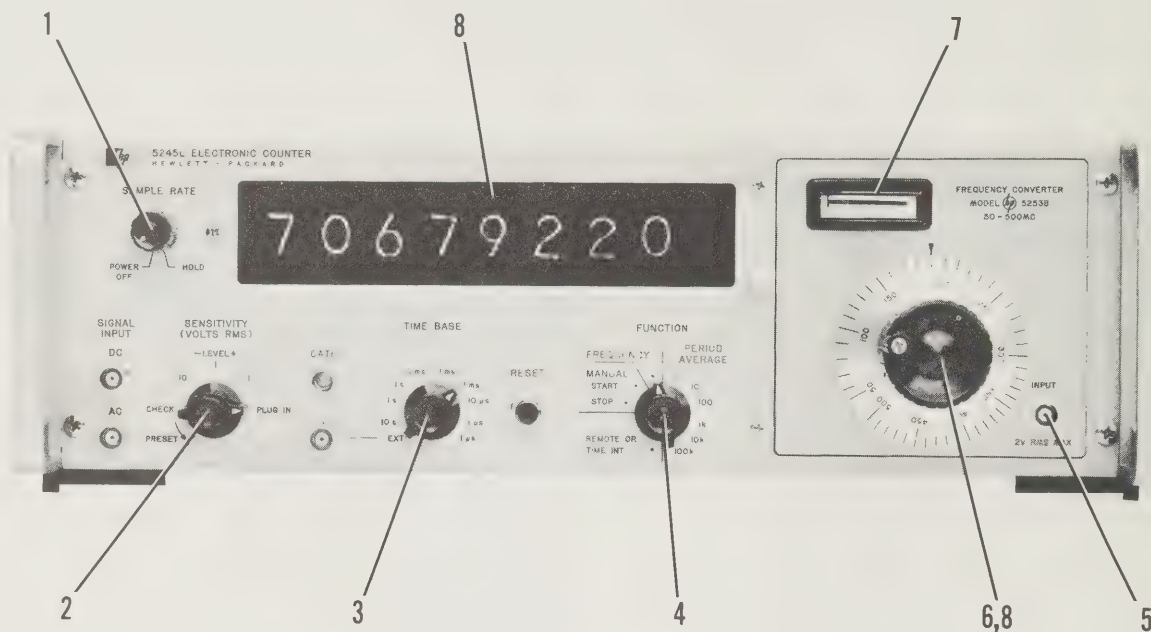

1. Turn SAMPLE RATE control slightly out of POWER OFF position.
2. Set SENSITIVITY to PLUG IN.
3. Set TIME BASE to .1 ms.*
4. Set FUNCTION to FREQUENCY.
5. Connect signal whose frequency is to be measured to INPUT of converter.
6. Set mixing frequency control to read slightly less than 50 Mc.

7. Slowly turn mixing frequency control counter-clockwise until level indicator meter first reaches a maximum reading in the green portion of its scale.
8. Add counter display (in Mc) to mixing frequency control reading (in Mc) for frequency of INPUT signal.

* TIME BASE setting may vary, depending on desired resolution of INPUT signal frequency. See Table 3-1.

Figure 3-2. Frequency Measurement Procedure

3-14. AID TO RAPID TUNING

3-15. To easily obtain an indication of the proper MIXING FREQUENCY when rapidly tuning the Model 5253B through its frequency range in search of an unknown INPUT frequency, set counter FUNCTION control to MANUAL START. This allows the counter to

totalize each cycle of any difference frequency produced during rapid tuning. When counter display changes, indicating that the MIXING FREQUENCY is heterodyning with the INPUT frequency and producing a difference frequency within the frequency range of the basic counter, set counter FUNCTION control to FREQUENCY and proceed with measurement.

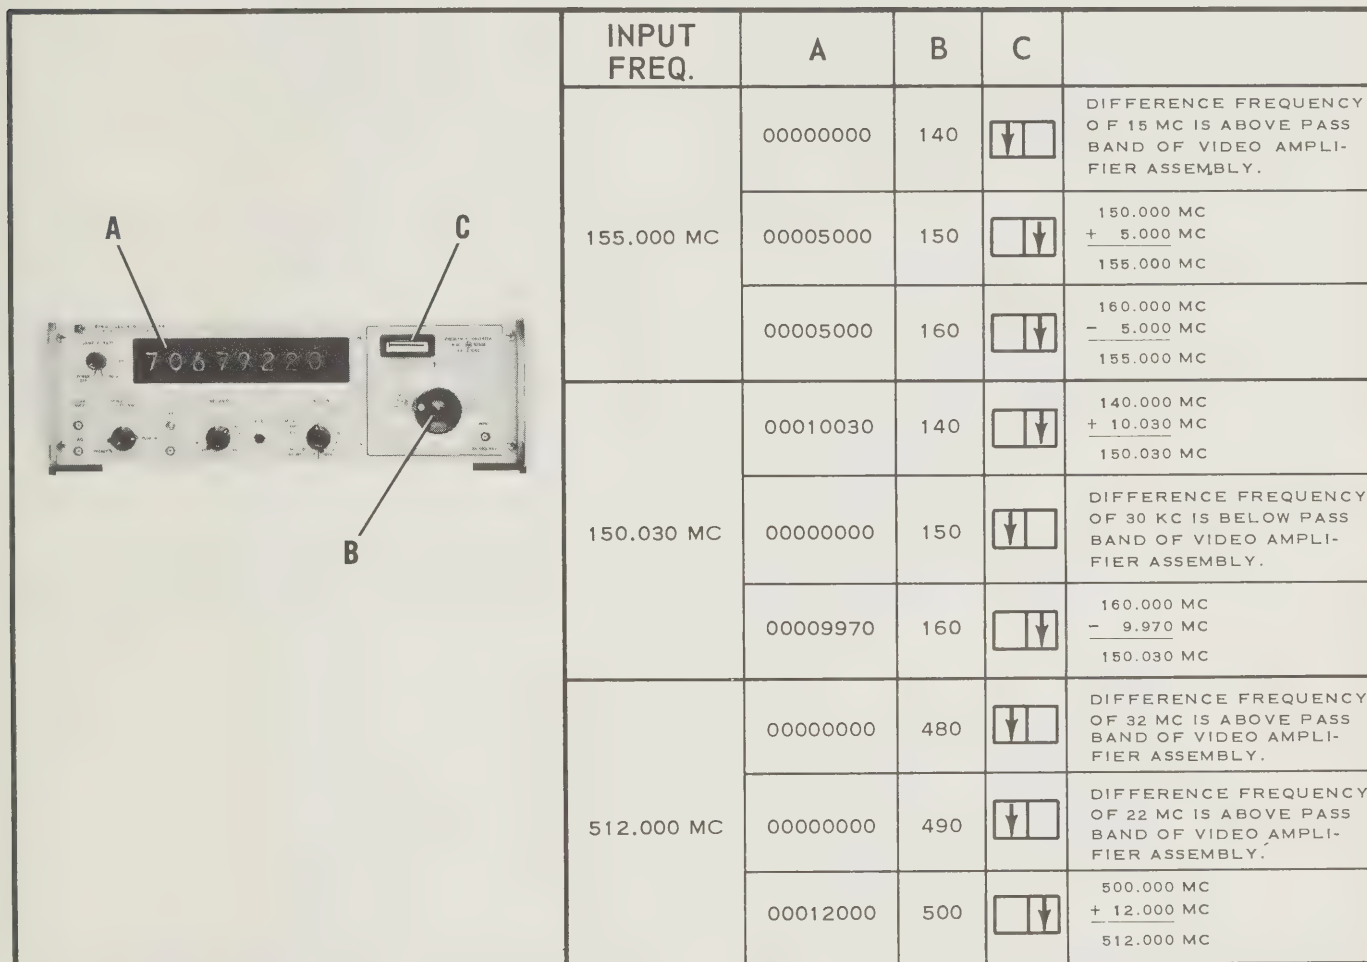


Figure 3-3. Typical Frequency Measurements

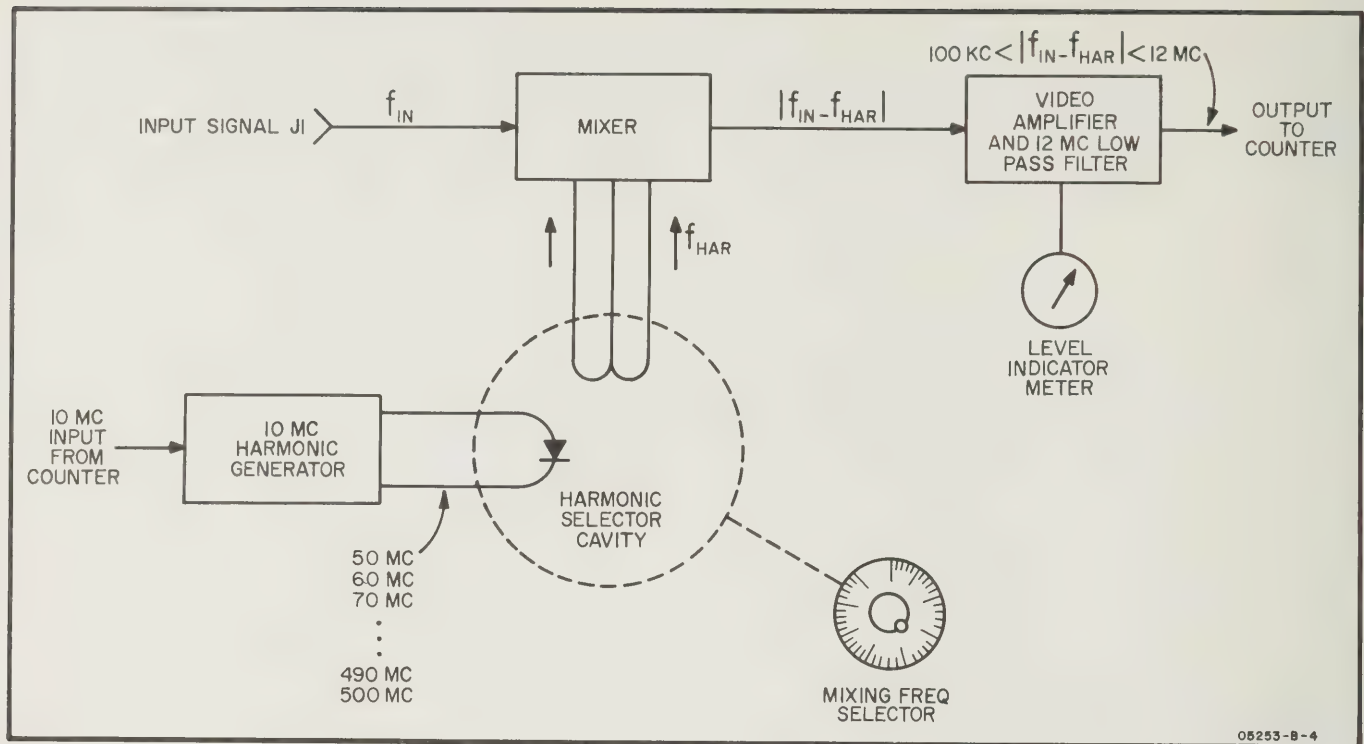


Figure 4-1. Block Diagram

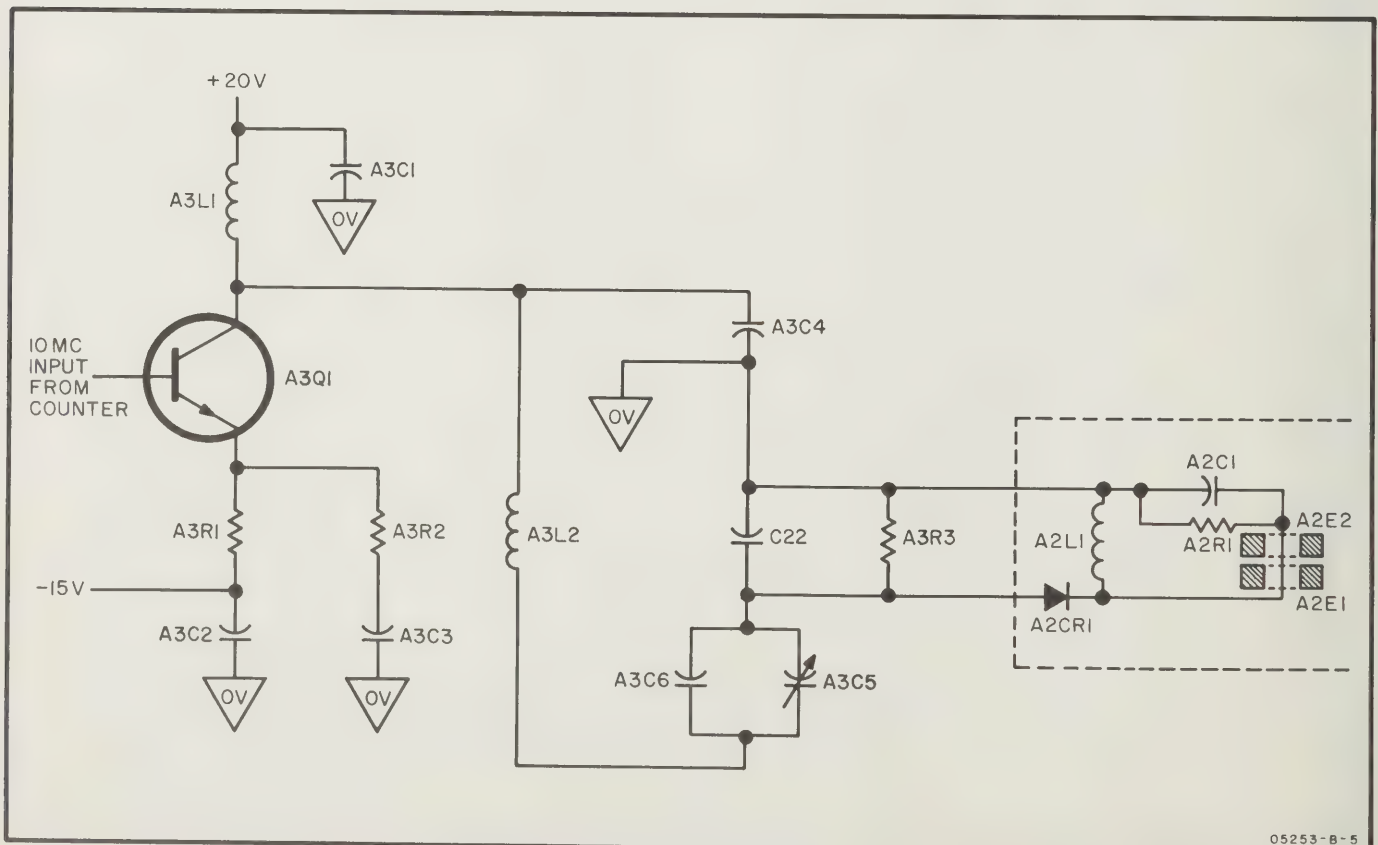


Figure 4-2. Harmonic Generator (A2, A3)

SECTION IV

PRINCIPLES OF OPERATION

4-1. GENERAL

4-2. The Model 5253B is a heterodyne frequency converter designed to extend the range of frequency measurement of the Model 5243L and 5245L Electronic Counters to 512 Mc.

4-3. The converter contains four basic functional sections: harmonic generator, harmonic selector cavity, mixer, and video amplifier (see Figure 4-1).

4-4. In normal operation, the harmonic generator produces all of the harmonics of 10 Mc between 50 and 500 Mc. The harmonic selector cavity is tuned to select one of these harmonics to be supplied to the mixer. The mixer output is the difference frequency produced by the mixing of the INPUT frequency and the frequency supplied by the harmonic selector cavity. This difference frequency is amplified by the video amplifier and supplied to the counter input circuit. A low-pass filter within the video amplifier prevents all difference frequency signals above approximately 12 Mc from reaching the counter input circuit. The output of the video amplifier is monitored by a meter circuit which indicates when difference frequency output amplitude is greater than minimum signal required by counter input circuit.

4-5. HARMONIC GENERATOR (A2,A3), AND HARMONIC SELECTOR CAVITY

4-6. A 10-Mc signal, supplied by the Counter, is amplified by A3Q1 to cause a tuned circuit, composed of A3L2, A3C4, A3C5, A3C6, and C22, to oscillate at 10-Mc (Fig. 4-2). Step-recovery diode*, A2CR1, takes energy from this tuned circuit during a portion of each cycle of the 10-Mc oscillation and produces a sharp step in the current following in the input loop of the harmonic selector cavity. This current step makes available, inside the cavity, all harmonics of 10 Mc from 10 Mc (fundamental) to over 500 Mc (fiftieth harmonic). The remaining components of the step-recovery diode network (Assembly A2) are used to maintain the sensitivity of the counter across its frequency range. The harmonic selector cavity is tuned to resonate at a particular harmonic of 10 Mc between 50 and 500 Mc so that energy at that frequency is coupled from the input loop to the output loops providing one of the two inputs to the mixer circuit (Fig. 4-4).

*-hpa- Application Note #1 (The Step Recovery Diode; Circuit Design and Performance), -hpa- Application Note #2 (Harmonic Generation, Rectification, and Lifetime Evaluation with the Step Recovery Diode; reprinted from the PROCEEDINGS OF THE IRE, VOL. 50, NO. 7, JULY 1962); available from -hp associates-, 620 Page Mill Road, , Palo Alto, California.

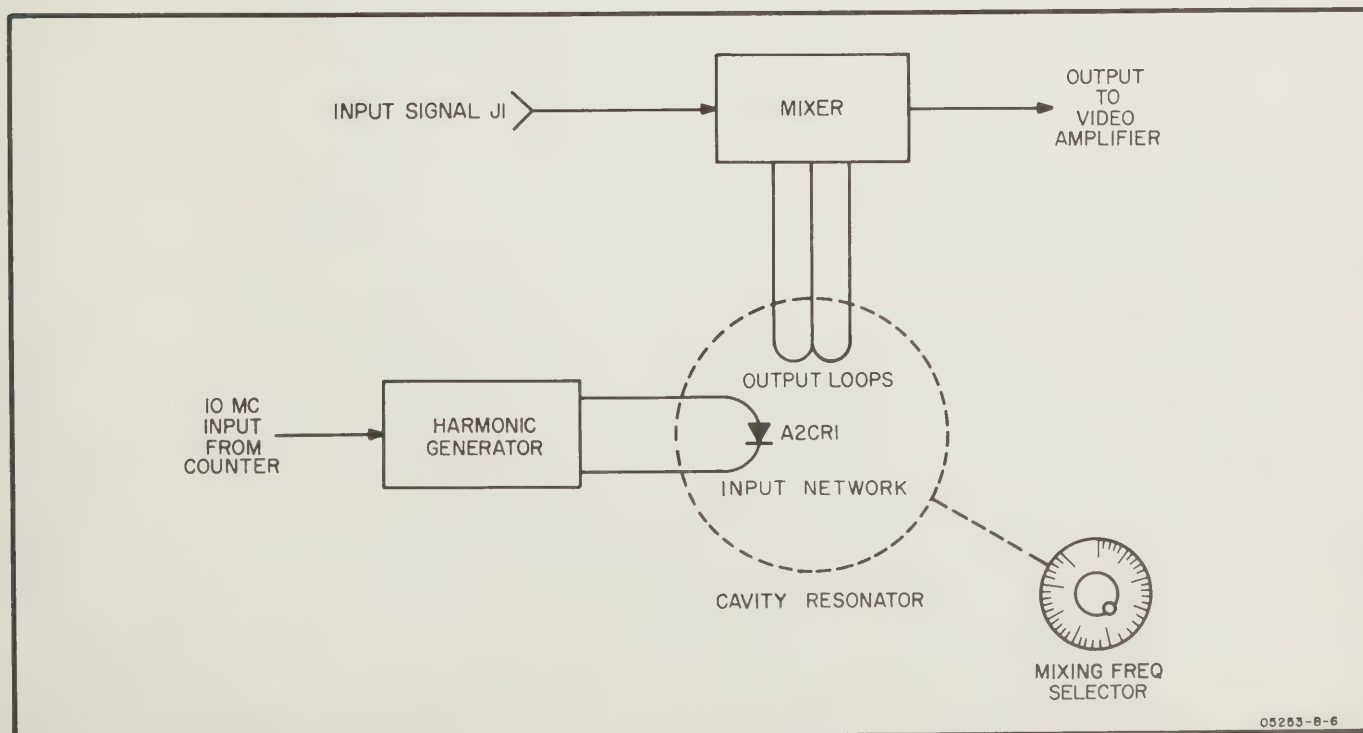


Figure 4-3. Harmonic Selector Cavity

4-7. MIXER (A4)

4-8. Matched diodes are used in a balanced mixer circuit in order to minimize the generation of even-order harmonics of both the INPUT signal and the selected mixing frequency. The balanced input signal required by the circuit is accomplished by grounding the junction of the two resistors of equal value, A4R1 and A4R2, and installing ferrite rings (E1, E2, and E3) around the input coaxial cable (see Figure 4-4). Both sides of resistor A4R1 are returned to common for DC currents. However, for AC currents in the frequency range of 50 to 512 Mc, the impedance of the input signal path is large, due to the inductance provided by the ferrite rings E1, E2, and E3, causing a balanced AC signal condition at the mixer diodes. Limiting diode A4CR2 prevents INPUT signals of high amplitude from overloading the mixer circuit. The output of the mixer diodes, during normal operation when the converter is properly tuned, is a complex signal containing the INPUT signal frequency, the frequency of the harmonic of 10 Mc to which the harmonic selector cavity is tuned, the frequency that is the sum of these two frequencies, and the frequency that is the difference between these two frequencies. Inductor A4L1 reduces the amplitude of any signal with a frequency above approximately 15 Mc before the signal reaches the input to the video amplifier. The output of the mixer circuit is then essentially composed of the difference frequency signal.

4-9. VIDEO AMPLIFIER ASSEMBLY (A1)

4-10. The output of the mixer circuit is amplified by transistors A1Q1 and A1Q2 and is fed to the 12-Mc low-pass filter network (see Figure 4-5). This filter passes any signal frequency below approximately 12 Mc and attenuates all higher frequency signals. The lowpass filter output is amplified by A1Q3 and A1Q4 and fed to the last transistor amplifier, A1Q5, which provides both the output to the counter and the drive for the level indicator meter. The limiter diode, A1CR1, prevents the amplitude of the video amplifier output signal from exceeding approximately 300 mv RMS so that counter input circuits will not be overloaded. The low frequency limit of the video amplifier, determined by the bypass and interstage coupling networks, is approximately 100 kc. The converter output signal to the counter, when converter is properly tuned, will be between approximately 100kc and 12 Mc and will have an amplitude that is less than approximately 300 mv RMS.

4-11. LEVEL INDICATOR METER

4-12. The DC current supply for the meter is produced by metering detector A1CR3 and smoothed by capacitor A1C16 (see Figure 4-6). The value of shunt resistor A1R20 is selected to make level indicator meter M1 read at red-green border when amplitude of converter output to counter is in excess of the 100-mv RMS minimum signal amplitude normally required by the counter for accurate frequency measurement.

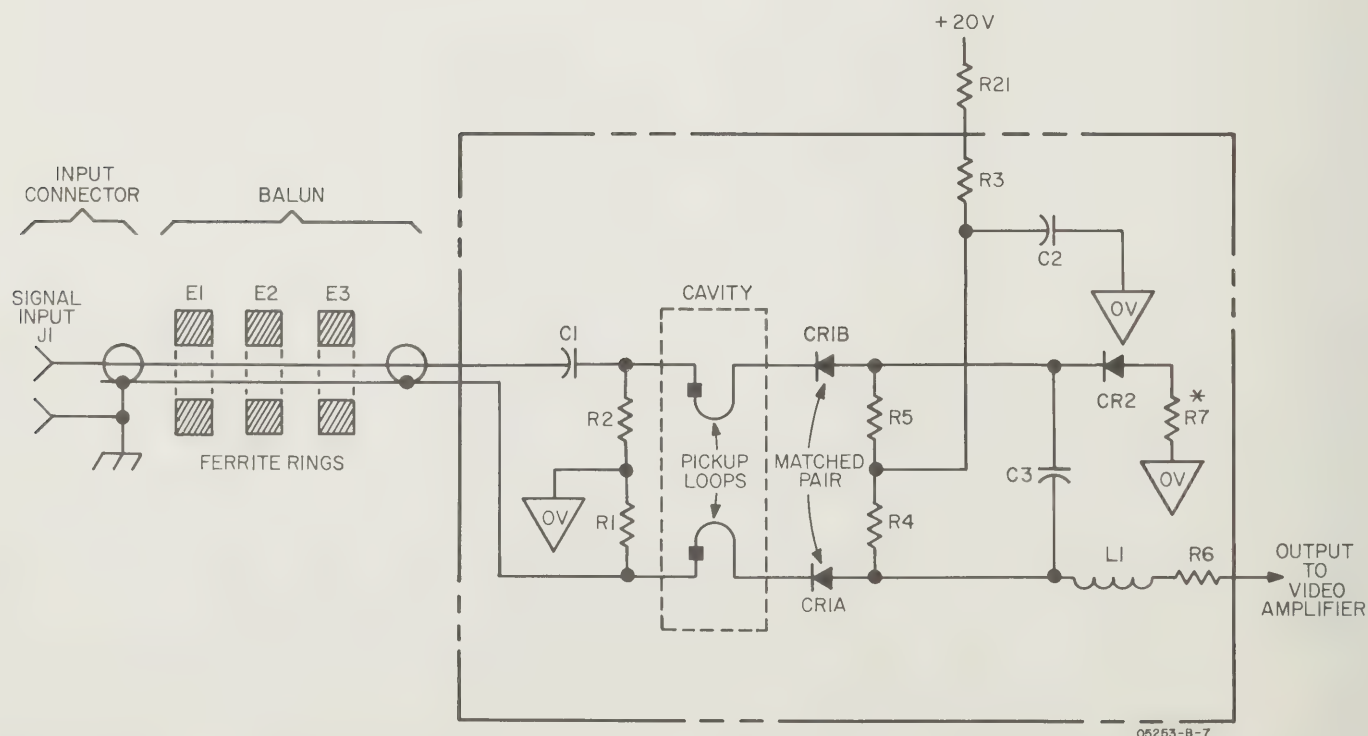


Figure 4-4. Balanced Mixer (A4)

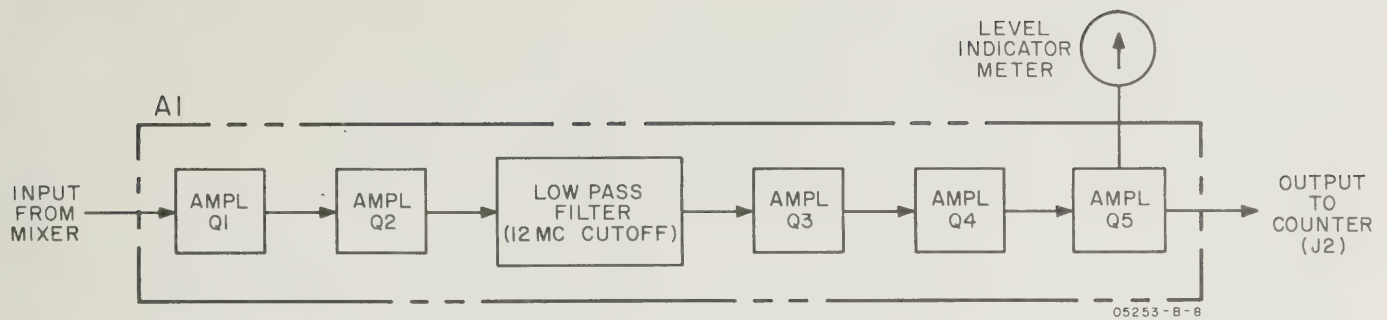


Figure 4-5. Video Amplifier (A1)

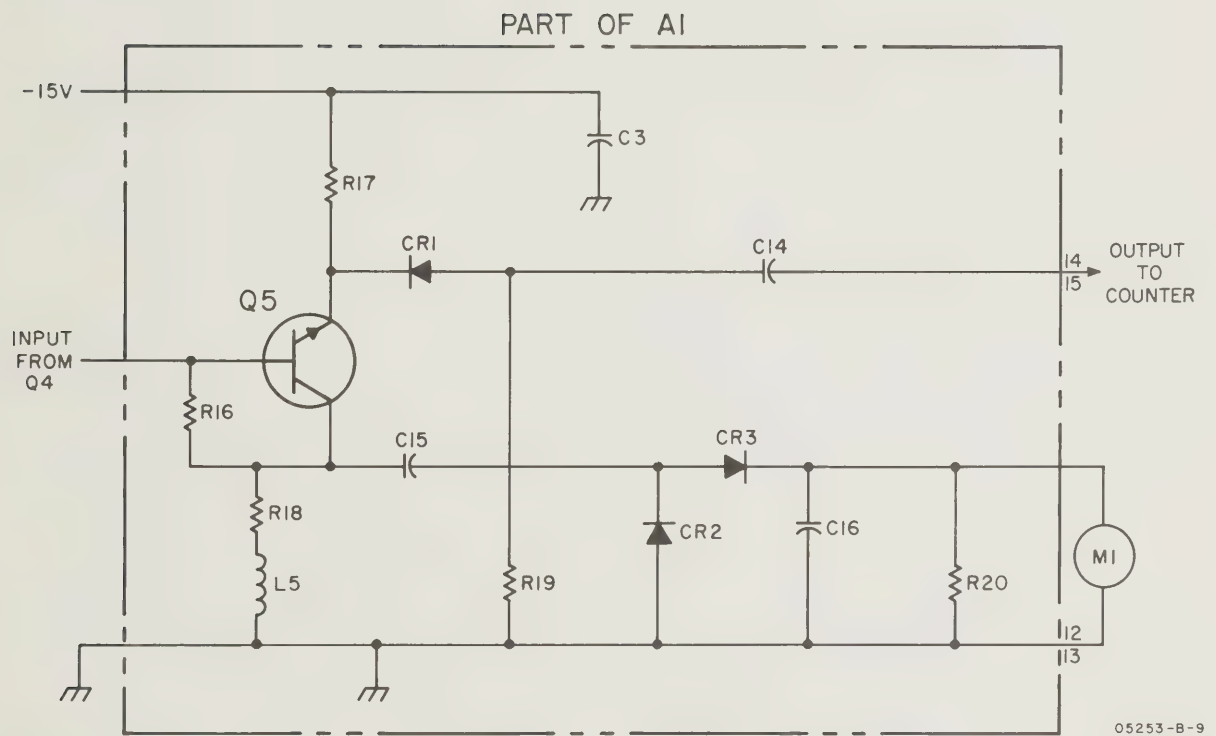


Figure 4-6. Level Indicator Meter Circuit

SECTION V

MAINTENANCE

5-1. GENERAL.

5-2. INTRODUCTION.

5-3. This section contains information concerning periodic maintenance, troubleshooting and recommended test equipment, repair, circuit adjustments, and performance testing. A complete schematic diagram of the converter is at the rear of this section (Figure 5-5).

5-4. PERIODIC MAINTENANCE.

5-5. No special maintenance procedures are required when the converter is operated in normal environments. However, if unit is subjected to operation in extremely dusty environments, periodically clean all gears with a lint-free cloth and apply a coating of light, petroleum base, open-gear grease to all gear teeth.

5-6. TEST EQUIPMENT.

5-7. All test instruments required for performance testing, troubleshooting, and circuit adjustment after repair are listed in Table 5-1. Instruments having equivalent specifications may be substituted for the specific instruments recommended.

5-8. TROUBLESHOOTING.

5-9. Table 5-2 lists resistances from connecting pins on connector J1 to chassis (when unit is not connected to counter) to aid in troubleshooting. Table 5-3 is a suggested troubleshooting procedure which lists circuit conditions at Test Points throughout the converter. These Test Points are keyed to the component

location drawings, Figures 5-1, 5-2, 5-3 and 5-4, and also to the schematic diagram, Figure 5-5. Voltages listed in Table 5-3 are approximate and may vary widely between instruments, due to variations in component values. Table 5-4 lists recommended adjustments to be made after repair of any section of the converter.

Table 5-2. Resistance Troubleshooting Aid

Location	Resistance (to Chassis)*
J2 - Pin 1	> 100 megohms
J2 - Pin 15	1 K ohms $\pm 20\%$
J2 - Pin 20	140 K ohms $\pm 20\%$
J2 - Pin 25	125 K ohms $\pm 20\%$

*Unit not connected to counter.

5-10. REPAIR AND REPLACEMENT.

5-11. Paragraphs 5-12 through 5-19 are replacement procedures to aid in repair of the converter. Detailed procedures for replacement of all the individual components of the unit are beyond the scope of this manual. In-field repair is, for the most part, simple and straightforward. However, do not attempt adjustment of the gearing arrangement, the harmonic selector cavity or the step-recovery diode. Should gear, cavity, or step recovery diode problems arise, please contact your Hewlett-Packard field office to arrange for repair.

Table 5-1. Recommended Test Equipment

Instrument	Required Characteristics	Use	Instrument Recommended
Electronic Counter		Supply Power, Visual Operational Indicator	Ⓢ Model 5243L or Ⓢ Model 5245L
RF Millivoltmeter	1 Mc to 20 Mc 10 mv to 10 vdc 10 mv resolution	Circuit Adjustment, Troubleshooting	Ⓢ Model 411A with Pen Type Probe Tip, Ⓢ 11022A (formerly Ⓢ 411A-21B)
DC VTVM and Ohmmeter	0 to +25 vdc 0.1 v resolution 0 to 100 M ohms	Circuit Adjustment, Troubleshooting	Ⓢ Model 412A
VHF Signal Generator	50 Mc to 480 Mc 10 mv to 1 v	Circuit Adjustment, Troubleshooting	Ⓢ Model 608C
Oscilloscope	15 Mc bandwidth	Circuit Adjustment, Troubleshooting	Ⓢ Model 175A with Ⓢ Model 1752A High Gain Amplifier and Ⓢ Model 1780A Aux Unit
Extension Cable	50 pin straight-thru connections	Circuit Adjustment, Troubleshooting	Ⓢ 10506A (formerly Ⓢ AC-16Y)

Table 5-3. Troubleshooting Procedure

All voltages given are approximate and may vary from instrument to instrument because of variations in component characteristics.

TEST EQUIPMENT: Φ Model 411A RF Millivoltmeter with Φ 11022A (formerly 411A-21B) Pen Type Probe Tip,
 Φ Model 412A DC VTVM

REMOVE Φ 5253B FROM COUNTER; SELF-CHECK COUNTER	See counter manual for self-check procedure.
CONNECT Φ 5253B TO COUNTER WITH EXTENSION CABLE, Φ 10506A (formerly AC-16Y)	Extension cable available from Φ ; see parts list.
1 +20 VDC 2 -15 VDC	Checks power supplied to plug-in from counter; see counter manual for power supply adjustment procedure.
3 + 6 VDC 2 VAC	Checks 10-Mc drive of harmonic generator.
4 + 2 VDC - 2 VAC	Checks generator diode drive. Voltages vary widely because of both the detuning effect of voltmeter probe and the variable value of A3R3. DC voltage may be either + or -, depending upon factory determined generator diode orientation.
5 +100 MV DC 6 +100 MV DC	Voltages vary widely because of diode characteristics. Voltages are 0 VDC when diode shorted, and +20 VDC when diode open. Voltages should be approximately equal because of matched characteristics.

CONNECT SIGNAL GENERATOR TO Φ 5253B.
SET GENERATOR TO 52 MC, CW, 100 MV.
SET COUNTER CONTROLS AND 5253B TO
MEASURE FREQUENCY OF INPUT SIGNAL.

7 5 MV RMS	This voltage is total harmonic energy output of mixer and varies widely.
8 -11.3 VDC 30 MV RMS	Checks bias and amplification of A1Q2 and A1Q1.
9 -12.3 VDC 17 MV RMS	General check of low pass filter section
10 -9.3 VDC 360 MV RMS	Checks bias and amplification of A1Q3 and A1Q4
11 -7.1 VDC 300 MV RMS	Checks operation of A1Q5
12 0 VDC 190 MV RMS	Checks operation of limiter, A1CR1
13 0 MV DC WHEN METER READS AT LEFT END OF SCALE; 50 MV DC WHEN METER READS FULL SCALE; 15 MV DC WHEN TEST POINT #12 IS 100 MV RMS, AND METER READS AT RED-GREEN BORDER.	Checks accuracy of meter circuit in relation to output to counter

5-12. PRINTED CIRCUIT COMPONENT REPLACEMENT.

5-13. Component lead-holes in the Model 5253B circuit boards have plated walls to insure good electrical contact between conductors on the opposite sides of the board. To prevent damage to this plating and also to the replacement component, apply heat sparingly and work carefully. The following replacement procedure is recommended:

a. Remove defective component.

b. Melt solder in component lead-holes. Use clean, "dry" soldering iron to remove excess solder. Clean holes with toothpick or wooden splinter. Do not use metal tool for cleaning as this may damage the through-hole plating.

c. Bend leads of replacement component to the correct shape and insert component leads in component lead-holes. Using heat and solder sparingly, solder leads in place. Heat may be applied to either side of board as is convenient. A heat sink (long-nose pliers, commercial heat-sink tweezers, etc.) should be used when replacing transistors and diodes in order to prevent excessive heat from being conducted by the leads from the soldering iron to the component.

d. Through-hole plating breaks are indicated by the separation from the board of the round conductor-pad on either side of the board. To repair breaks, press conductor-pads against board and solder replacement component lead to conductor-pad on both sides of the board.

5-14. VIDEO AMPLIFIER ASSEMBLY REPLACEMENT.

5-15. If video amplifier printed circuit board requires replacement, follow this procedure:

a. Remove the converter from counter.

b. Unscrew and remove small screw (MP1; see Figure 5-4) which holds video amplifier A1 in place. Remove screws which secure supporting bracket to front panel. Remove supporting bracket.

c. Firmly grasp assembly at component-free end and pull out of socket using a slight back-and-forth sideways movement.

d. Check that the connecting terminals of replacement assembly are clean. Push replacement assembly firmly into socket and check for proper seating. Replace supporting bracket and all screws.

e. All replacement video amplifier assemblies are adjusted and inspected at the factory for optimum performance. However, if a general operational check is desired, perform the in-cabinet performance check given in Paragraph 5-31.

5-16. MIXER DIODE REPLACEMENT.

5-17. If either of the matched pair of mixer diodes (A4CR1A or A4CR1B) is found to be defective, both

diodes should be replaced. The recommended replacement procedure is as follows:

a. Remove mixer-assembly shield cover (see Figure 5-3).

b. Remove diodes from spring clips, noting orientation.

c. Install replacement diodes with same orientation.

d. Replace mixer-assembly shield cover.

e. Perform the sensitivity check (Paragraph 5-28) to insure that converter operation is within specifications.

5-18. METER REPLACEMENT PROCEDURE.

5-19. If the level indicator meter requires replacement, follow this procedure:

a. Remove converter from counter.

b. Unscrew and remove small retaining screw (MP1; see Figure 5-4) which holds video amplifier board A1 in place. Remove screws which secure supporting bracket to front panel. Remove supporting bracket.

c. Firmly grasp video amplifier board at the component-free end and pull board out of socket using a slight back-and-forth sideways movement.

d. Place converter on bench with bottom plate resting on bench surface and with the front panel facing to the rear of the bench.

e. Remove screw (MP2) which holds aluminum spacer-rod (MP3) to plastic rear-support (MP4; see Figure 5-2). Grasp spacer-rod and turn counterclockwise to remove rod from front support.

f. Cut connecting wires at meter terminals.

g. Remove screws (MP5, 6; see Figure 5-4) from meter bezel at sides of meter. Push bezel forward as far as possible.

h. Remove screws (MP7, 8) on top of meter bracket.

i. Grasp meter and gently pull meter (and bracket) backwards out of front panel hole, at the same time twisting rear of meter slightly sideways to the right and pulling up.

j. Remove bracket and hardware from meter and install in identical manner on replacement meter. Hardware which may come from the manufacturer with the replacement meter may be discarded.

k. Place meter (with bracket) in unit by reversing removal procedure.

m. Replace screws on top of meter bracket.

n. Replace meter bezel at sides of meter.

p. Check that meter terminals are not close to front bearing-block. Bend terminals away from block if necessary.

q. Strip 1/4-inch insulation from ends of each connecting wire and solder to meter terminals. Black wire goes to inside terminal and white wire goes to outside terminal.

r. Replace aluminum spacer-rod. Tighten only "finger-tight" as excessive torque may break end of rod.

s. Replace screw which holds spacer-rod to rear-support.

t. Replace video amplifier assembly, supporting bracket, and all screws.

5-20. HARMONIC GENERATOR ADJUSTMENT.

5-21. To adjust the harmonic generator assembly, proceed as follows:

a. Remove converter from counter and reconnect to counter with Extension Cable, Φ 10506A.

b. Connect VHF Signal Generator to converter INPUT and set to 472 Mc, CW, at 100 mv.

c. Connect RF Millivoltmeter to Test Point #12 (see Figure 5-4).

d. Set converter mixing frequency control to 470 Mc, and tune for maximum reading on RF Millivoltmeter.

e. Vary output of VHF Signal Generator to make converter level indicator meter read at red-green border.

f. Using plastic tuning tool, tune A3C5 (see Figure 5-2) for maximum reading on RF Millivoltmeter. Tune A3C5 through hole in harmonic generator assembly shield cover.

5-22. LOW PASS FILTER ADJUSTMENT.

5-23. To adjust the low pass filter in the video amplifier assembly, proceed as follows:

a. Remove converter from counter and reconnect to counter with Extension Cable, Φ 10506A.

b. Connect VHF Signal Generator to converter INPUT and set to 110 Mc, CW, at 50 mv.

c. Connect RF Millivoltmeter to Test Point #12 (see Figures 5-4 and 5-5).

d. Set converter mixing frequency control to 100 Mc and tune for maximum reading on RF Millivoltmeter.

e. Set Signal Generator to 116.2 Mc, CW, at 1 v.

f. Using plastic tool, adjust variable inductor A1L4 (see Figures 5-1 and 5-5) for minimum reading of RF Millivoltmeter.

g. Set Signal Generator to 120.2 Mc, CW, at 1 v.

h. Using plastic tool, adjust variable inductor A1L3 (see Figures 5-1 and 5-5) for minimum reading of RF Millivoltmeter.

i. Set Signal Generator to 115 Mc, CW, at 1 v.

j. Reading of RF Millivoltmeter should be less than 100 mv. If reading is above 100 mv, troubleshoot video amplifier assembly.

Table 5-4. Adjustments after Repair

AFTER REPLACING COMPONENT IN THIS SECTION:	PERFORM:
Harmonic generator (A3)	Harmonic generator adjustment (Paragraph 5-20)
Mixer (A4)	Sensitivity check (Paragraph 5-28)
A1Q1	Sensitivity check (Paragraph 5-28)
A1Q2	Sensitivity check (Paragraph 5-28), and Low pass filter adjustment (Paragraph 5-22)
Low Pass Filter	Sensitivity check (Paragraph 5-28), and Low pass filter adjustment (Paragraph 5-22)
A1Q3	Sensitivity check (Paragraph 5-28), and Low pass filter adjustment (Paragraph 5-22)
A1Q4	Sensitivity check (Paragraph 5-28), and Low pass filter adjustment (Paragraph 5-22)
Meter circuit	Meter accuracy check (Paragraph 5-29)

5-24. METER CALIBRATION ADJUSTMENT. (pri.)

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, $\text{CP}10506\text{A}$.

b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set counter controls as shown in Figure 3-2. Counter should display approximately 2 Mc.

d. Vary VHF Generator output to make level indicator meter read at red-green border.

e. Using RF Millivoltmeter, measure voltage at Test Point #12. Voltage should be between 100 mv and 130 mv. If not, change value of resistor A1R20 to change voltage to between 100 mv and 130 mv. If voltage is too high, increase value of A1R20. If voltage is too low, decrease value of A1R20. Repeat steps d and e after changing value of A1R20.

5-25. MECHANICAL ADJUSTMENT OF METER ZERO.

5-26. TRUE SIGNAL LEVEL INDICATION. Level indicator meter is adjusted at the factory for proper mechanical zero. However, normal aging of meter components may change indicated zero level. To insure accuracy of input signal level indication, periodic adjustment of meter zero may be necessary.

5-27. ZERO-SET. When meter is properly zero-set, pointer rests over the zero calibration mark at the left-hand end of meter scale when converter is (1) at normal operating temperature, (2) in normal operating position, and (3) without power. Proceed as follows:

a. Allow counter and converter to operate for one hour to permit meter movement to reach normal operating temperature.

b. Turn counter off and allow one minute for all capacitors to discharge.

c. Remove converter from counter to enable access to rear of meter.

d. Remove adhesive-backed-paper cover from meter zero-adjustment access hole on top-rear of meter.

e. Carefully insert small tool in access hole and engage adjustment fork.

f. Vary setting of adjustment fork until meter reads zero.

g. Remove tool and replace adhesive-backed-paper cover on access hole. This completes meter zero adjustment procedure.

5-28. SENSITIVITY CHECK.

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, $\text{CP}10506\text{A}$.

b. Set VHF Signal Generator to 52 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Adjust controls as shown in Figure 3-2.

d. Set converter mixing frequency control to 50 Mc. Counter should display approximately 2 Mc.

e. Using RF Millivoltmeter, measure output of converter at Test Point #12 (see Figures 5-4 and 5-5). Voltage should be at least 100 mv.

f. Repeat above steps c, d, and e with VHF Generator frequency of 472 Mc and converter mixing frequency control set to 470 Mc. Converter output to counter, as measured by RF Millivoltmeter, should be at least 100 mv.

g. A similar check may be made at any frequency within the range of the Model 5253B. Converter output to counter should be at least 100 mv when difference frequency is between 100 kc and 12 Mc and converter is properly tuned.

5-29. METER ACCURACY CHECK.

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, $\text{CP}10506\text{A}$.

b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure 3-2. Set converter mixing frequency control to 100 Mc. Counter should display approximately 2 Mc.

d. Vary output of VHF Signal Generator for converter level indicator to make meter read at red-green border.

e. Using RF Millivoltmeter, measure converter output to counter at Test Point #12. Voltage should be between 100 mv and 130 mv. If not, see Paragraph 5-24 for meter calibration adjustment procedure.

5-30. LOW PASS FILTER CHECK.

a. Turn counter power off, remove converter from counter and reconnect to counter with Extension Cable, $\text{CP}10506\text{A}$.

b. Set VHF Signal Generator to 110 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure 3-2. Set converter mixing frequency control to 100 Mc. Counter should display approximately 10 Mc.

d. Connect RF Millivoltmeter to Test Point #12. Vary output of VHF Signal Generator for RF Millivoltmeter reading of 100 mv. Note output level of VHF Signal Generator.

e. Set VHF Signal Generator to 115 Mc at same output level as noted in step d above. Converter output to counter, as shown on RF Millivoltmeter, should not exceed 50 mv. If converter output to counter is greater than 50 mv, see Paragraph 5-23 for low pass filter adjustment procedure.

5-31. IN-CABINET PERFORMANCE CHECK.

a. Turn counter power off and install converter.

b. Set VHF Signal Generator to 52 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure 3-2. Counter should display approximately 2 Mc.

d. Set VHF Signal Generator to any frequency between 50 Mc and 512 Mc with output of 50 mv. Counter should display correct frequency at any frequency within this range.



05253-A-12

Figure 5-1. Video Amplifier Assembly A1 Component Location

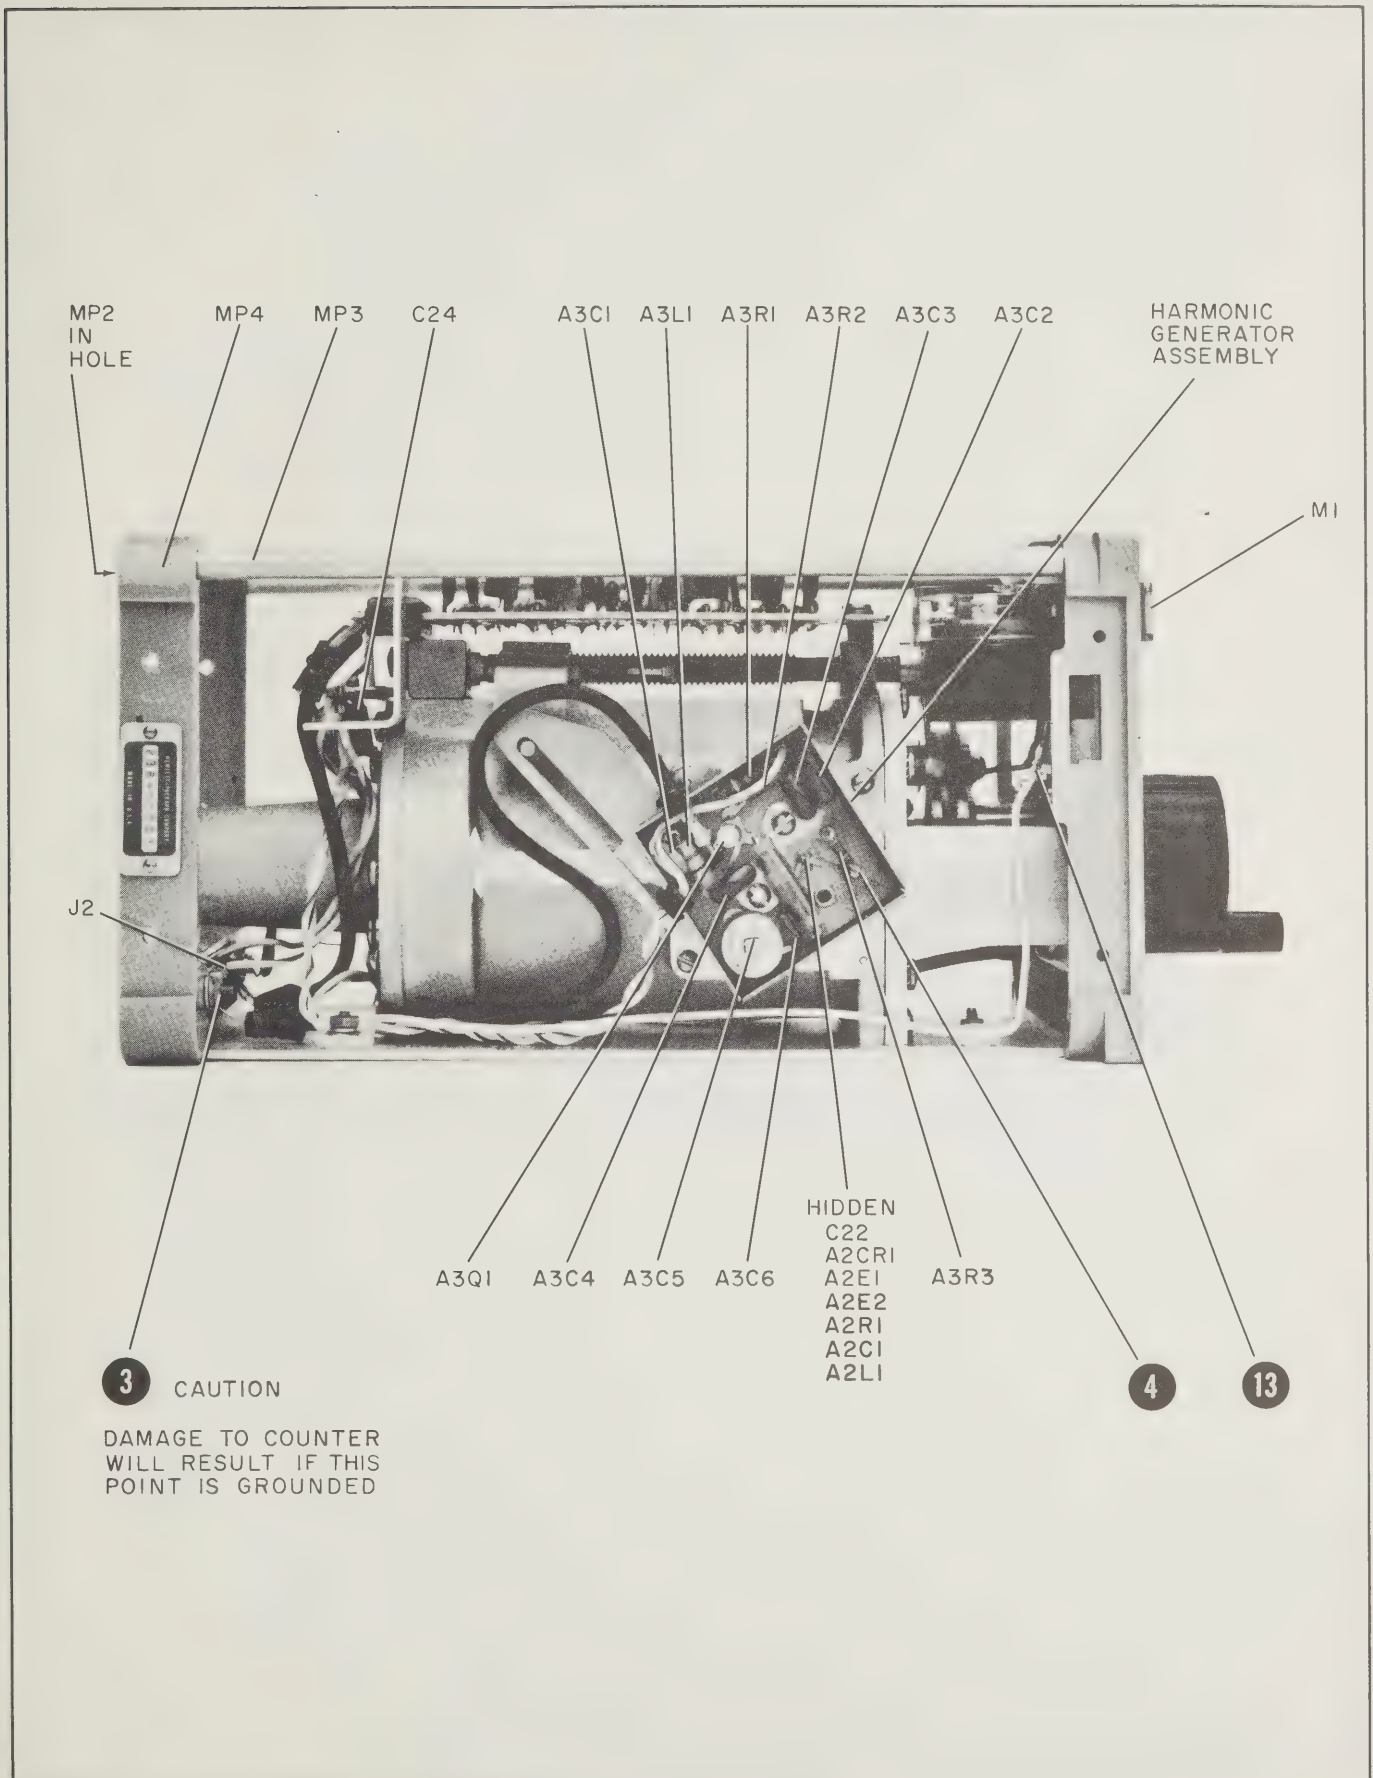


Figure 5-2. Left Side View

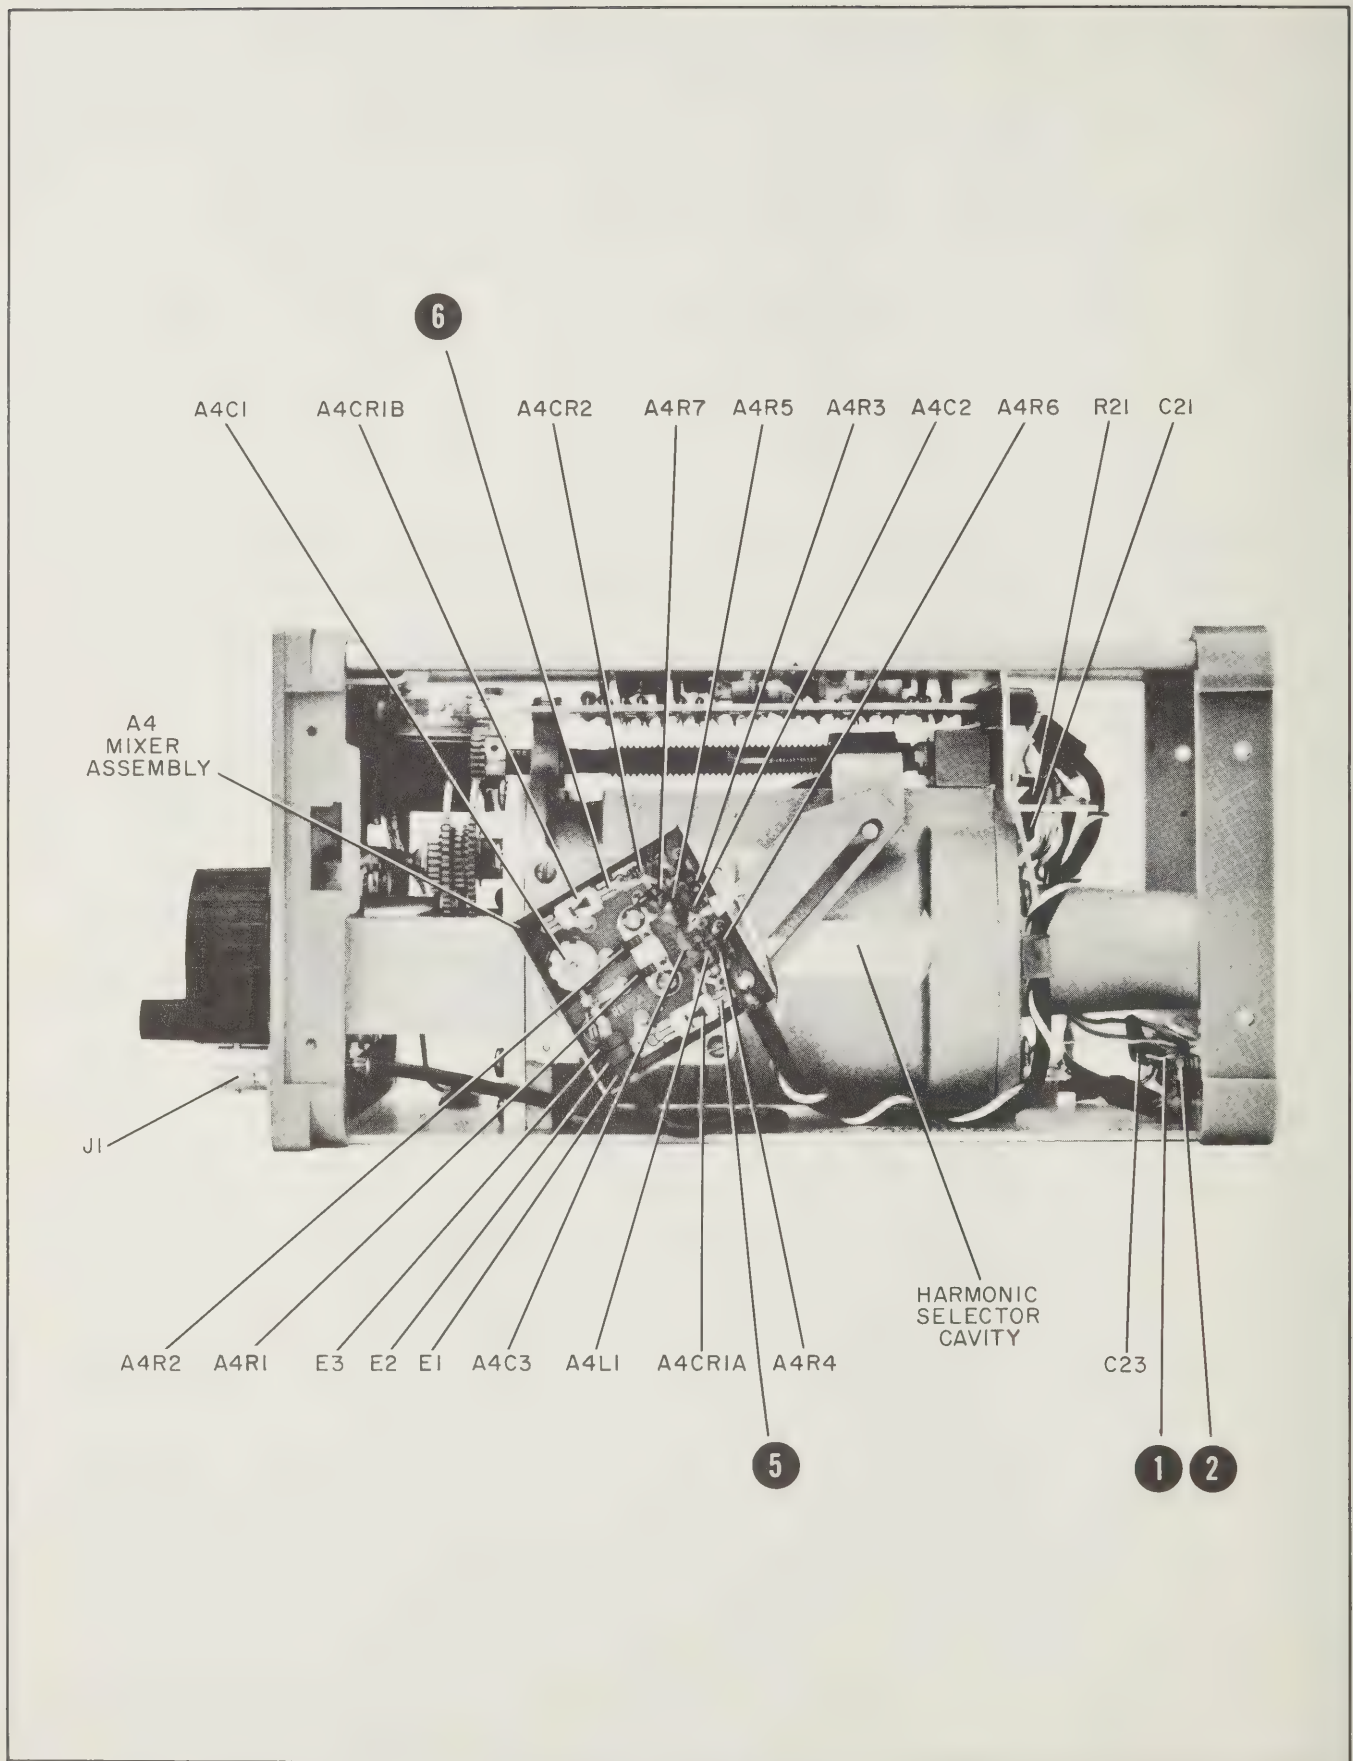


Figure 5-3. Right Side View



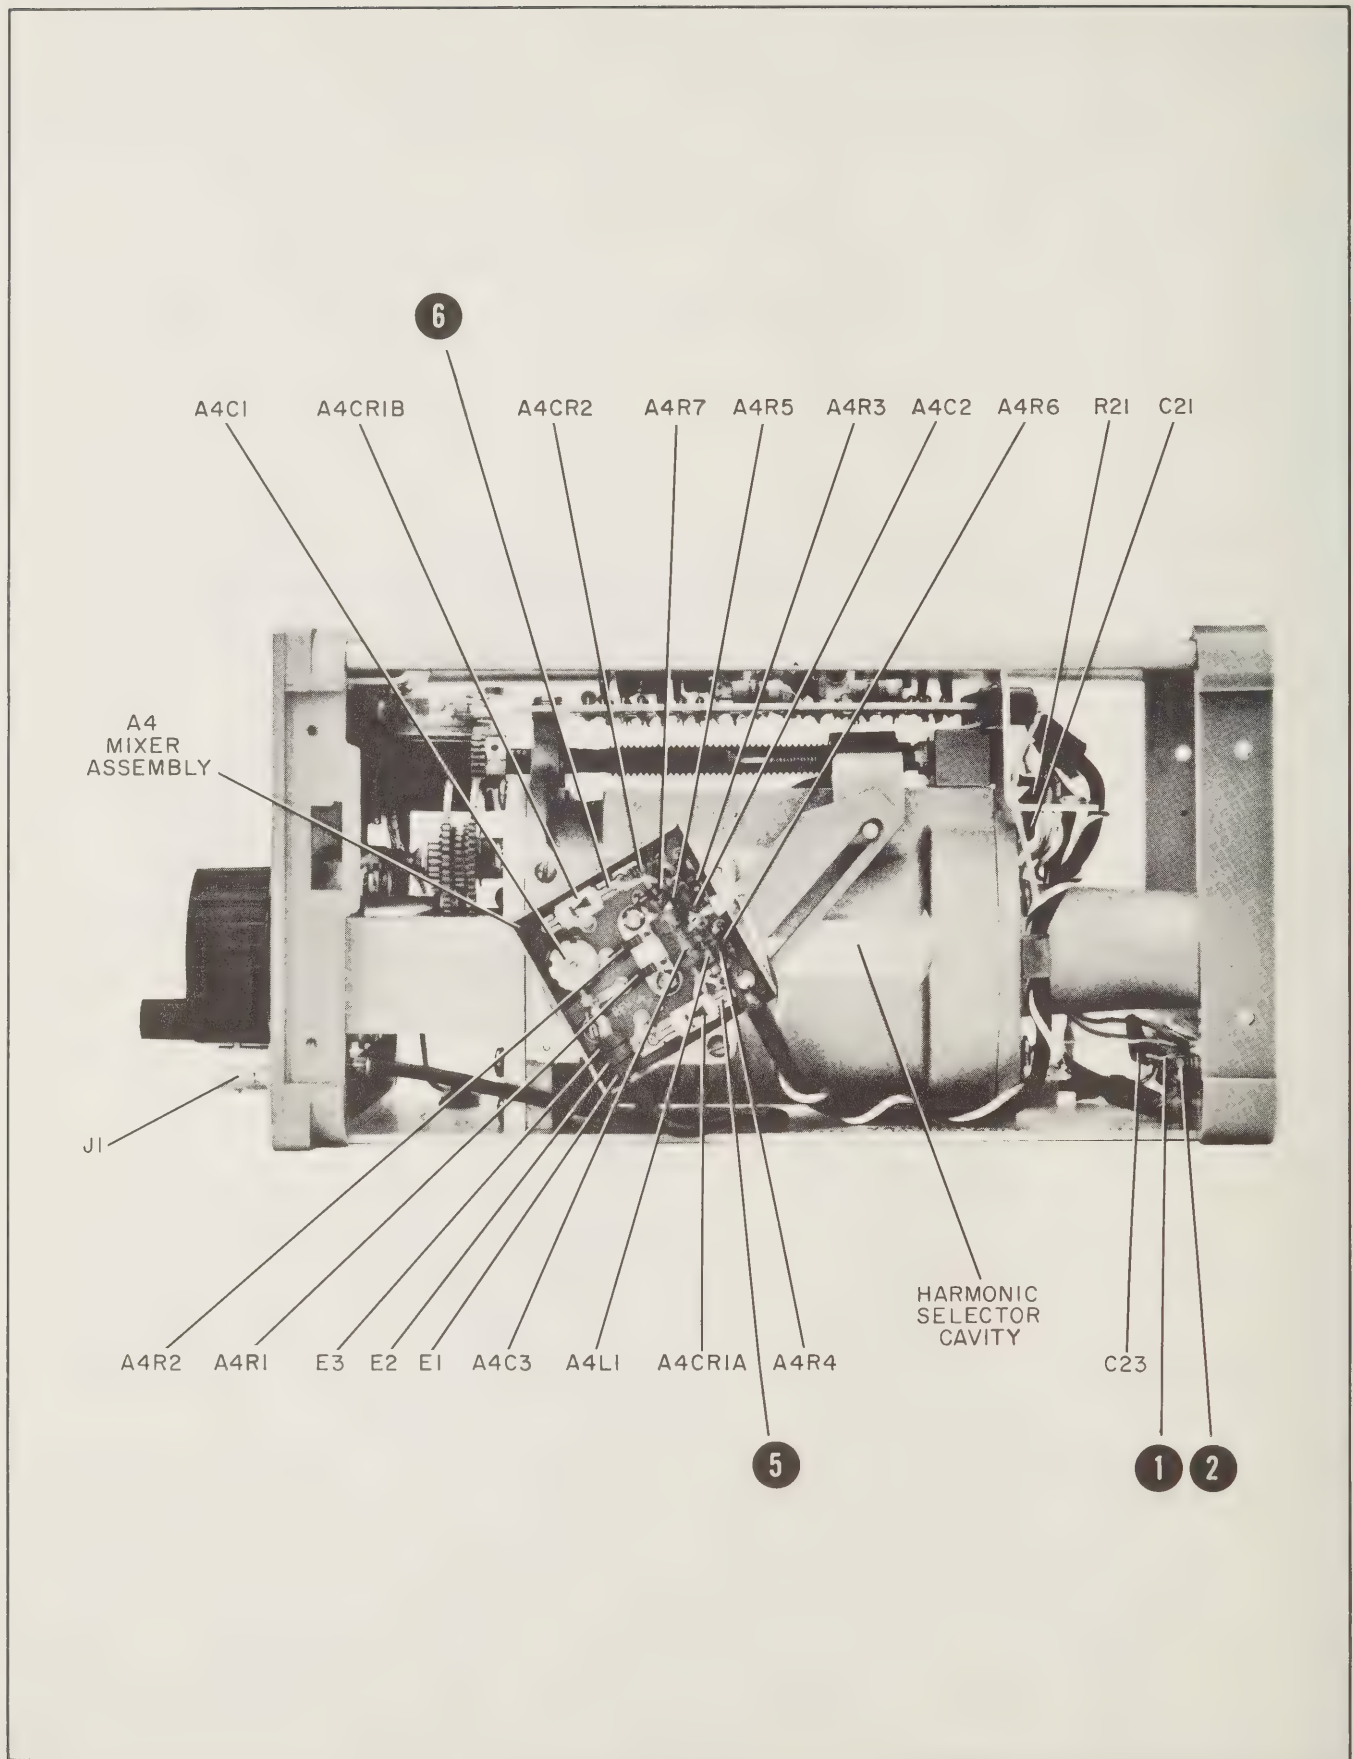


Figure 5-3. Right Side View

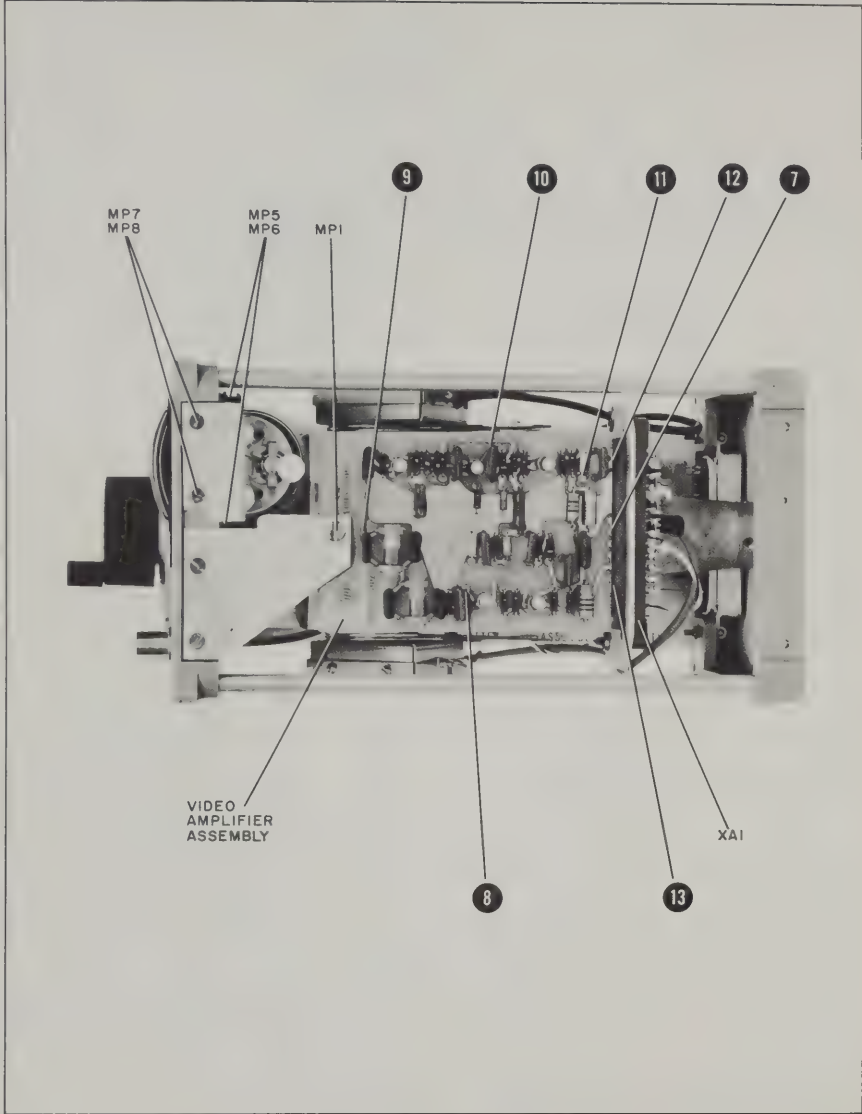


Figure 5-4. Top View - Test Points

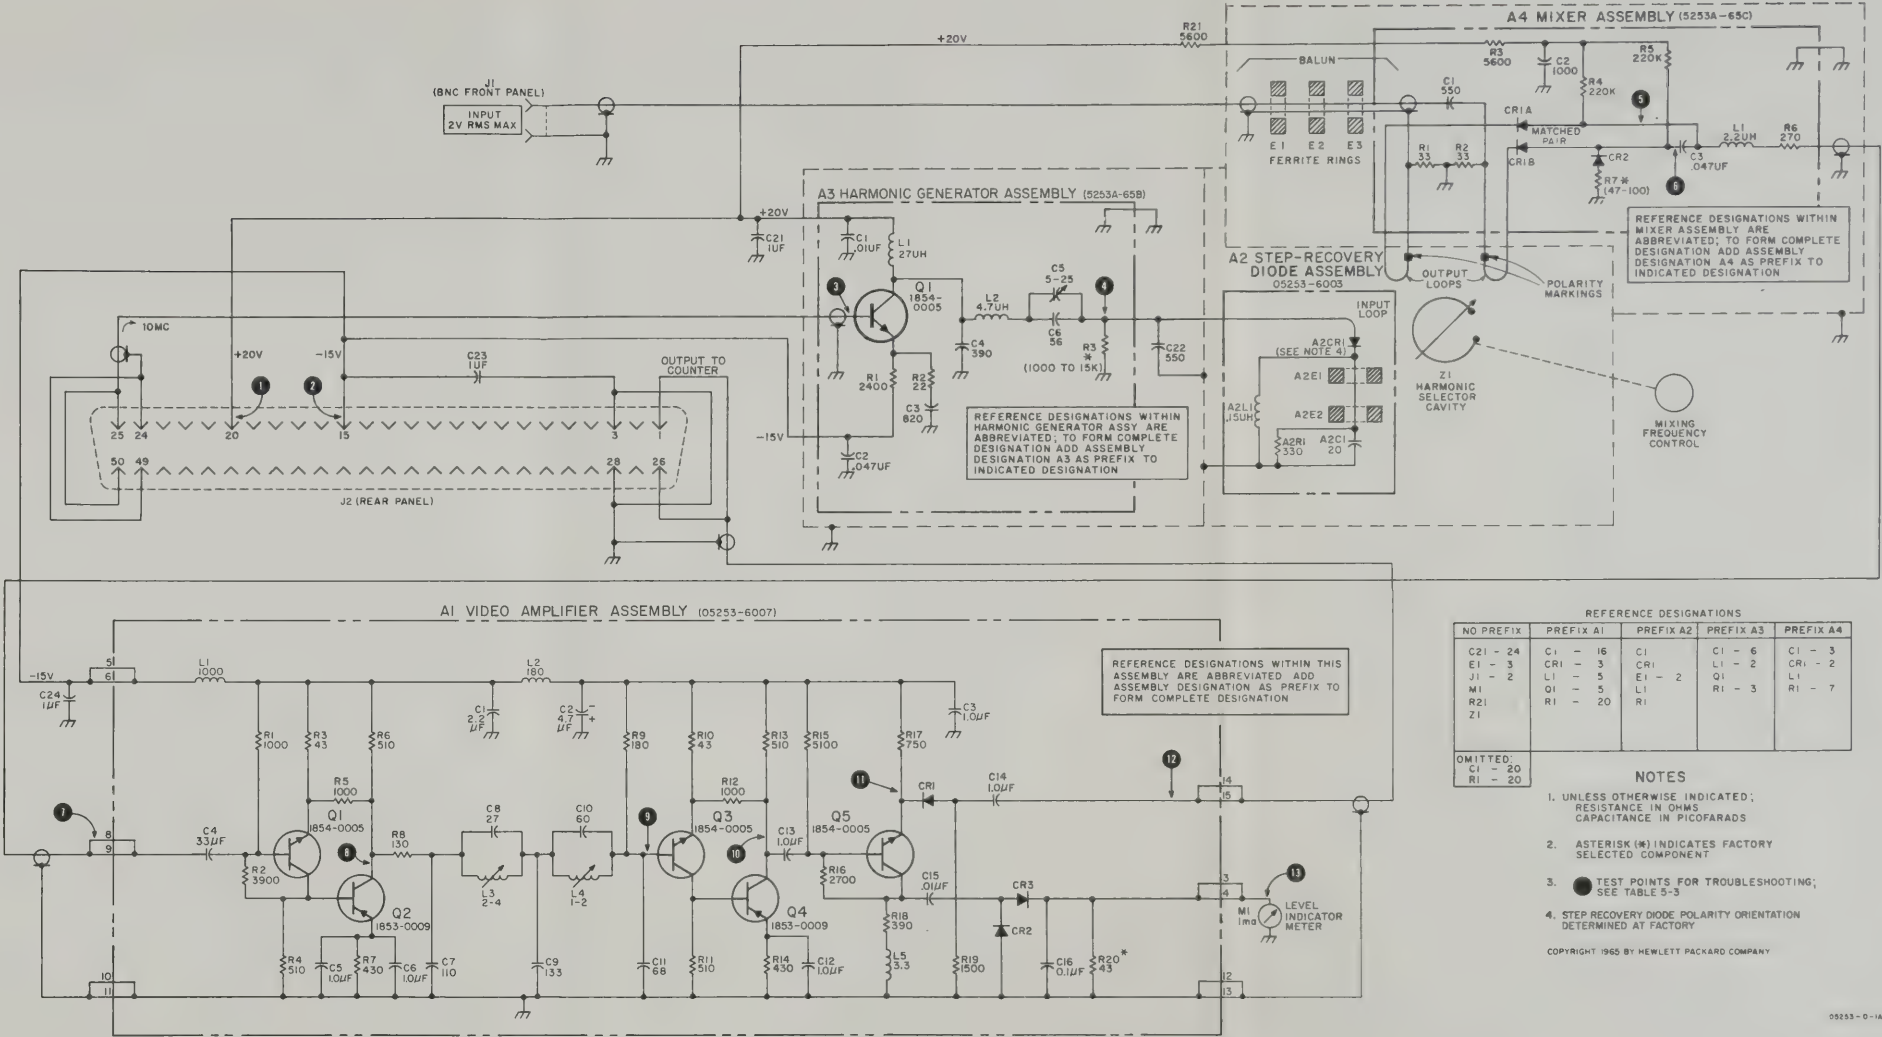


Figure 5-5. Schematic Diagram

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alpha-numerical order of their reference designators and indicates the description and ϕ stock number of each part, together with any applicable notes. Table 6-2 lists parts in alpha-numerical order of their ϕ stock number and provides the following information on each part:

- a. Description of the part (see list of abbreviations below).
- b. Typical manufacturer of the part in a five-digit code; see list of manufacturers in Table 6-3.
- c. Manufacturer's part number.
- d. Total quantity used in the instrument (TQ column).

6-3. Miscellaneous parts are listed at the end of Table 6-1.

6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Field Office (see lists at rear of this manual for addresses). Identify parts by their Hewlett-Packard stock numbers.

6-6. To obtain a part that is not listed, include:


- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.

REFERENCE DESIGNATORS

A = assembly	E = misc electronic part	MP = mechanical part	TB = terminal board
B = motor	F = fuse	P = plug	TP = test point
C = capacitor	FL = filter	Q = transistor	V = vacuum tube, neon bulb, photocell, etc.
CP = coupling	J = jack	R = resistor	W = cable
CR = diode	K = relay	RT = thermistor	X = socket
DL = delay line	L = inductor	S = switch	Y = crystal
DS = device signaling (lamp)	M = meter	T = transformer	

ABBREVIATIONS

A = amperes	GE = germanium	N/C = normally closed	RMO = rack mount only
A.F.C = automatic frequency control	GL = glass	NE = neon	RMS = root-mean-square
AMPL = amplifier	GRD = ground(ed)	NI PL = nickel plate	
		N/O = normally open	S-B = slow-blow
B. F. O. = beat frequency oscillator	H = henries	NPO = negative positive zero (zero temperature coefficient)	SCR = screw
BE CU = beryllium copper	HEX = hexagonal	NRFR = not recommended for field replacement	SE = selenium
BH = binder head	HG = mercury	NSR = not separately replaceable	SECT = section(s)
BP = bandpass	HR = hour(s)		SEMICON = semiconductor
BRS = brass			SI = silicon
BWO = backward wave oscillator	IF = intermediate freq		SIL = silver
	IMPG = impregnated		SL = slide
CCW = counter-clockwise	INCD = incandescent		SPL = special
CER = ceramic	INCL = include(s)	OBD = order by description	SST = stainless steel
CMO = cabinet mount only	INS = insulation(ed)	OH = oval head	SR = split ring
COEF = coefficient	INT = internal	OX = oxide	STL = steel
COM = common			
COMP = composition	K = kilo = 1000	P = peak	TA = tantalum
CONN = connector		PC = printed circuit	TD = time delay
CP = cadmium plate	LIN = linear taper	PF = picofarads = 10 ⁻¹² farads	TGL = toggle
CRT = cathode-ray tube	LK WASH = lock washer	PH BRZ = phosphor bronze	TI = titanium
CW = clockwise	LOG = logarithmic taper	PHL = Phillips	TOL = tolerance
	LPF = low pass filter	PIV = peak inverse voltage	TRIM = trimmer
DEPC = deposited carbon		P/O = part of	TWT = traveling wave tube
DR = drive	M = milli = 10 ⁻³	POLY = polystyrene	
	MEG = meg = 10 ⁶	PORC = porcelain	U = micro = 10 ⁻⁶
ELECT = electrolytic	METFLM = metal film	POS = position(s)	
ENCAP = encapsulated	MFR = manufacturer	POT = potentiometer	VAR = variable
EXT = external	MINAT = miniature	PP = peak-to-peak	VDCW = dc working volts
	MOM = momentary	PT = point	
F = farads	MTG = mounting	RECT = rectifier	W/ = with
FH = flat head	MY = "mylar"	RF = radio frequency	W = watts
FIL H = fillister head		RH = round head	WW = wirewound
FXD = fixed	N = nano (10 ⁻⁹)		W/O = without

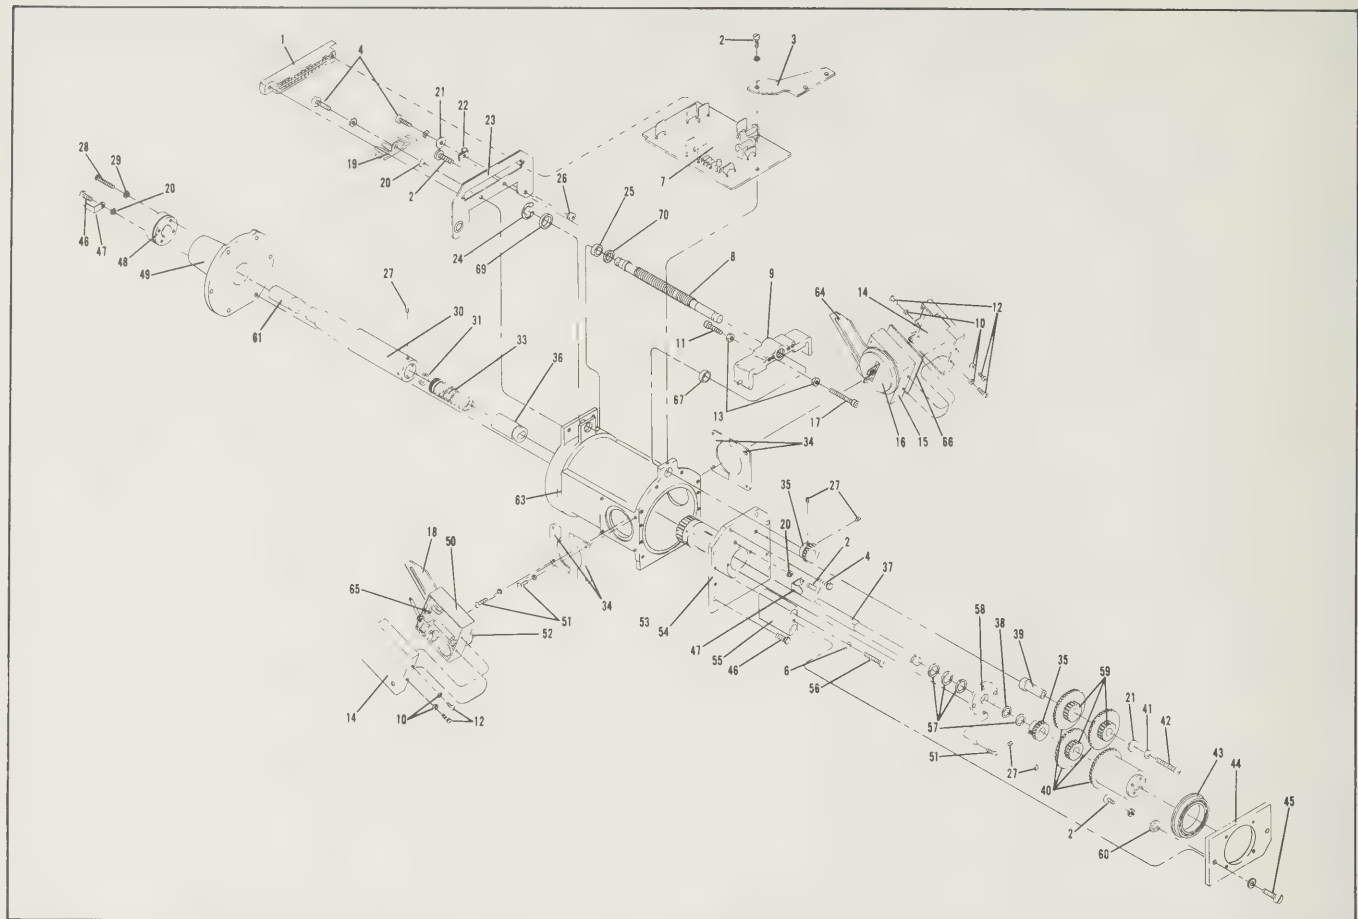

REF.	STOCK NO.	DESCRIPTION	QTY.	REF.	STOCK NO.	DESCRIPTION	QTY.	REF.	STOCK NO.	DESCRIPTION	QTY.
1	1251-0135	Connector, Printed Crt. 15	1	21	3050-0066	Washer Brass .375 OD .147 ID	2	42	2360-0013	Screw RH SS 6-32 x 1	1
2	2390-0007	Screw BH SS 6-32 x .312 with Lock	7	22	1400-0053	Clamp Cable for .188 Dia. Cable	1	43	1410-0021	Bearing Ball 1.5 OD 1.063 Bore	1
3	05253-0006	Bracket, Panel	1	23	5253A-12D	Bracket, Connector	1	44	5253A-17D	Holder	1
4	2390-0009	Screw BH SS 6-32 x .375 with Lock	4	24	0510-0083	Ring Retain Ext .025 Thk	1	45	2550-0009	Screw Mach BH SS 8-32 x .5 with Lock	2
5	2380-0003	Not Assigned		25	1410-0724	Bushing .252 ID	1	46	2390-0001	Screw BH SS 6-32 x .5	12
6	2190-0046	Washer Lock Split No. 6, 141 ID	4	26	0510-0001	Fastener Steel .281 Dia. .063 Thk	1	47	0360-0042	Solder Lug - Brs .144 Mtg Hole 90 Deg Bend	2
7	05253-6007	Ass'y, Vidio Amplifier	1	27	3030-0022	Screw-Set Stl 6-32 x 1/8 HD LSS Hex Drive	8	48	05253-2002	Collar, Rear	1
8	525C-37A	Shaft, Loop Drive	1	28	2200-0009	Screw Mach RH SS 4-40 .5 LG	4	49	05253-2011	Flange, Cavity	1
9	5253A-12A	Yoke, Loop Drive	1	29	2190-0004	Washer Lock Internal No. 4	4	50	5253A-55B	Shield	1
10	2190-0014	Washer Lock Internal No. 2	6	30	05253-2004	Probe	1	51	2200-0004	Screw Mach RH SS 4-40 with Lock .250 LG	8
11	3030-0003	Screw Cap 6-32 x .375	2	31		Collar, Spring P/O MP68		52	05253-6004	Generator Bushing Ass'y	1
12	0520-0025	Screw Mach RH 2-56 .125 LG	6	32		Not Assigned		53	05253-2015	Cavity	1
13	2500-0001	Nuts - Hex BRS 6-32 x 1/4 x 3/32 In.	4	33		Spring Comp 1.5 LG .484 OD P/O MP68		54	05253-6001	Ass'y, Probe Positioning	1
14	5253A-41B	Cover	2	34	5253A-12B	Retainer	4	55	5253A-47B	Support	2
15	5253A-55A	Shield	1	35	525C-24B	Gear, Drive	2	56	2380-0004	Screw Fil H SS 6-32 x .750	4
16	5253A-17C	Bushing	1	36		P/O MP68		57	3050-0028	Washer Brass .4375 OD .25 ID	4
17	3030-0078	Screw Cap Hex Dr 6-32 x 1.125	2	37	5253A-37A	Shaft	1	58	05253-2009	Bushing, Probe Support	1
18	525C-108- AL	Left Cam	1	38	3050-0017	Washer Phos Br .375 OD .26 ID	1	59	525C-24C	Gear, Idler	3
19	0360-0018	Board-Terminal 4 Ins. 1 GRD	1	39	5253A-37B	Shaft	1	60	565A-17A	Retainer, Bearing	4
		Term A1A1GA1A1		40	05253- 6010	Gear Assy, w/hub	4	61	05253-6009	Support Cap P/O MP68	
20	2190-0008	Washer Lock External No. 6	3	41	2190-0006	Washer Lock Split Ring No. 6	1	62		Not Assigned	
								63	1480-0061	Pin Cross .06 ID .312 LG	4
								64	525C-108- AR	Right Cam	1
								65	5253A-65B	Board Ass'y, Circuit	1
								66	5253A-65C	Board Ass'y, Circuit	1
								67	1410-0088	Bushing .252 ID	1
								68	05253-6005	Probe Assy	1
								69	2190-0390	Washer Nylon .26 ID .562 OD	1
								70	3050-0180	Washer .27 ID .375 OD	1

Figure 6-1. Mechanical Parts Location - 5253B

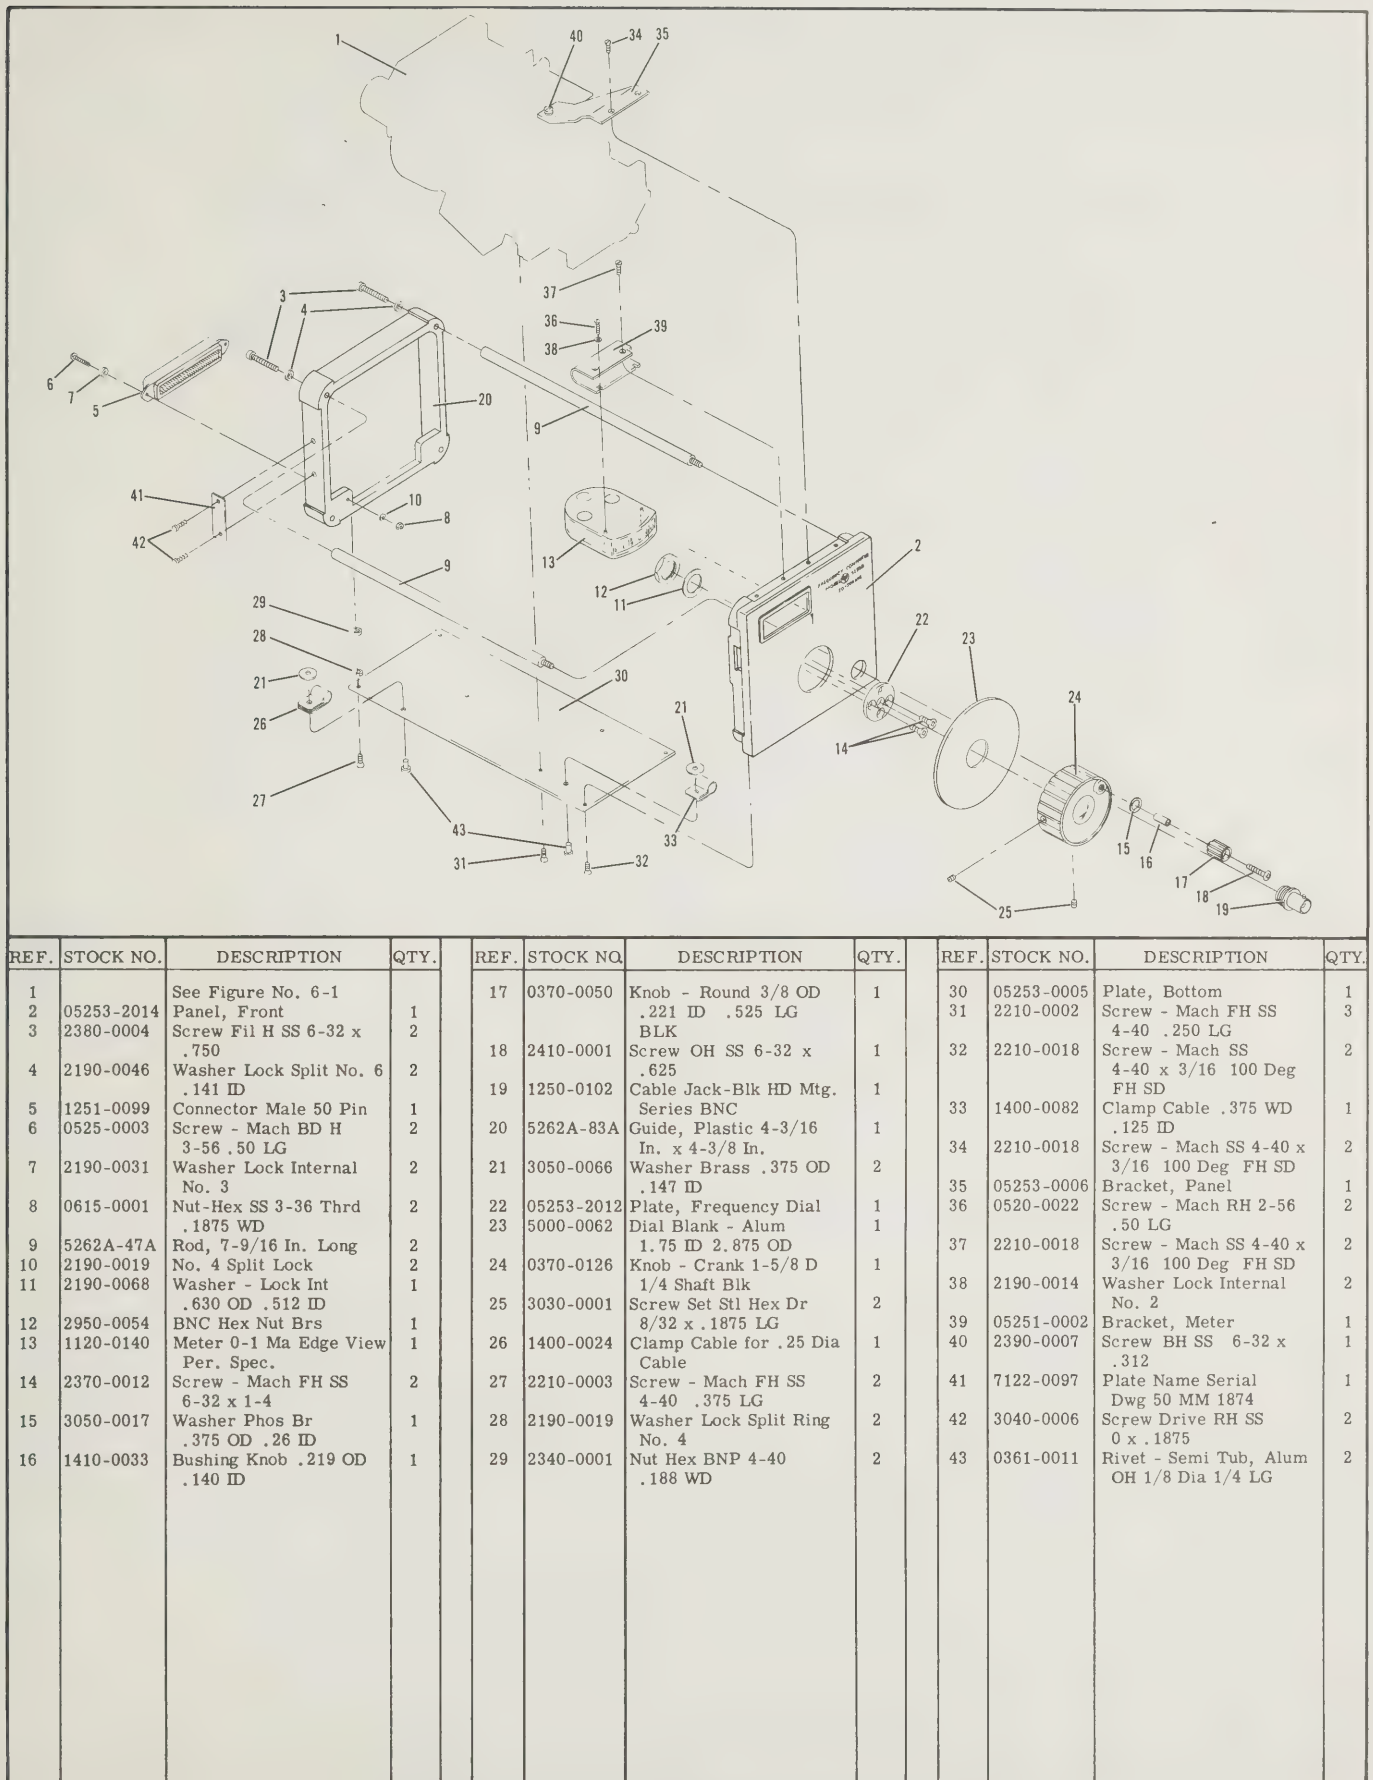


Figure 6-2. Mechanical Parts Location - 5253B

Table 6-1. Reference Designation Index

Reference Designation	Stock No.	Description #	Note
A1	05253-6007 05253-2007	ASSY:AMPLIFIER BOARD:BLANK P.C.	
A1C1	0160-0128	C:FXD CER 2.2UF 20% 25VDCW	
A1C2	0180-0100	C:FXD ELECT TA 4.7UF 10% 35VDCW	
A1C3	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C4	0160-0137	C:FXD CER 0.33UF 20% 25VDCW	
A1C5	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C6	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C7	0140-0194	C:FXD MICA 110 PF 5% 300 VDCW	
A1C8	0160-0178	C:FXD MICA 27PF 5% 300VDCW	
A1C9	0160-0332	C:FXD MICA 133PF 1%	
A1C10	0140-0214	C:FXD MICA 60PF 5% 300VDCW	
A1C11	0140-0192	C:FXD MICA 68PF 5% 300VDCW	
A1C12	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C13	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C14	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C15	0160-0161	C:FXD MY 0.01 UF 10% 200VDCW	
A1C16	0150-0121	C:FXD CER 0.1UF +80%-20% 50VDCW	
A1CR1	1910-0022	SEMICON DEVICE:DIODE GE 100MA 6PIV 3.5NS	
A1CR2	1910-0022	SEMICON DEVICE:DIODE GE 100MA 6PIV 3.5NS	
A1CR3	1910-0022	SEMICON DEVICE:DIODE GE 100MA 6PIV 3.5NS	
A1L1	9140-0137	COIL:FXD RF 1000UH	
A1L2	9140-0138	COIL:FXD RF 180UH 5%	
A1L3	9140-0126	COIL:VAR 1.76-4.02	
A1L4	9140-0125	COIL:VAR 0.9-1.9 UH	
A1L5	9140-0143	COIL:FXD RF 3.3 UH	
A1Q1	1854-0005	TRANSISTOR:2N708 NPN SILICON	
A1Q2	1853-0009	TRANSISTOR:SILICON PNP	
A1Q3	1854-0005	TRANSISTOR:2N708 NPN SILICON	
A1Q4	1853-0009	TRANSISTOR:SILICON PNP	
A1Q5	1854-0005	TRANSISTOR:2N708. NPN SILICON	
A1R1	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R2	0683-3925	R:FXD COMP 3900 OHM 5% 1/4W	
A1R3	0683-4305	R:FXD COMP 43 OHM 5% .25W	
A1R4	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R5	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R6	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R7	0683-4315	R:FXD COMP 430 OHM 5% 1/4W	
A1R8	0683-1315	R:FXD COMP 130 OHM 5% 1/4W	
A1R9	0683-1815	R:FXD COMP 180 OHM 5% 1/4W	
A1R10	0683-4305	R:FXD COMP 43 OHM 5% .25W	
A1R11	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R12	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R13	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R14	0683-4315	R:FXD COMP 430 OHM 5% 1/4W	
A1R15	0683-5125	R:FXD COMP 5100 OHM 5% 1/4W	
A1R16	0683-2725	R:FXD COMP 2700 OHM 5% 1/4W	
A1R17	0683-7515	R:FXD COMP 750 OHM 5% 1/4W	

See list of abbreviations in introduction to this section

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
A1R18 A1R19 A1R20	0683-3915 0683-1525 0683-4305	R:FXD COMP 390 OHM 5% 1/4W R:FXD COMP 1500 OHM 5% 1/4W R:FXD COMP 43 OHM 5% .25W FACTORY SELECTED COMP:TYPICAL VALUE GIVEN	
A2	05253-6003	ASSY:STEP RECOVERY DIODE	
A2C1 A2CR1	0150-0061	C:FXD CER 20 PF 100 VDCW SPECIALLY SELECTED PART NOT RECOMMENDED FOR FIELD REPLACEMENT	
A2E1 A2E2	9170-0029 9170-0029	CORE: FERRITE BEAD CORE: FERRITE BEAD	
A2L1	9140-0170	COIL-FXD .15 UH 20% 350 MA	
A2R1	0683-3315	R:FXD COMP 330 OHM 5% 1/4W FACTORY SELECTED PART:TYPICAL VALUE GIVEN	
A3	5253A-65B	ASSY:HARMONIC GENERATOR	
A3C1 A3C2 A3C3 A3C4 A3C5	0150-0093 0170-0094 0140-0151 0140-0200 0130-0016	C:FXD CER 0.01UF +80-20% 100VDCW C:FXD MY 0.047UF 20% 50VDCW C:FXD MICA 820PF 2% 300VDCW C:FXD MICA 390PF 5% 300VDCW C:VAR CER 5-25 PF NPO	
A3C6	0140-0191	C:FXD MICA 56 PF 5% 300 VDCW	
A3L1 A3L2 A3Q1 A3R1 A3R2 A3R3	9140-0107 9140-0025 1854-0005 0686-2425 0683-2205 0683-5625	COIL:FXD RF 27 UH COIL:FXD RF 4.7 UHY TRANSISTOR:SILICON NPN 2N708 R:FXD COMP 2400 OHM 5% 1/2W R:FXD COMP 22 OHM 5% 1/4W R:FXD COMP 5600 OHM 5% 1/4W FACTORY SELECTED PART:TYPICAL VALUE GIVEN	
A4	5253A-65C	ASSY:MIXER	
A4C1 A4C2 A4C3	0140-0069 0150-0050 0170-0040	C:FXD MICA 550 PF 10% 500 VDCW C:FXD CER 1000PF 600 VDCW C:FXD MY .047 UF 10% 200VDCW	
A4CR1 A4CR2	1901-0347 1910-0016	SEMICON DEVICE:DIODE 1N416BM MATCH PAIR DIODE,GERMANIUM:100MA ATO.85V 60PIV	
A4L1	9140-0142	COIL:FXD RF 2.2 UH	
A4R1 A4R2 A4R3 A4R4 A4R5	0683-3305 0683-3305 0684-5621 0683-2245 0683-2245	R:FXD COMP 33 OHM 5% 1/4W R:FXD COMP 33 OHM 5% 1/4W R:FXD COMP 5.6K OHM 10% 1/4W R:FXD COMP 220K OHM 5% 1/4W R:FXD COMP 220K OHM 5% 1/4W	
A4R6 A4R7	0683-2715 0683-6205	R:FXD COMP 270 OHM 5% 1/4W R:FXD COMP 62 OHM 5% 1/4W FACTORY SELECTED PART:TYPICAL VALUE GIVEN	
C21 C22	0160-0127 0140-0069	C:FXD CER 1UF 20% 25VDCW C:FXD MICA 550 PF 10% 500 VDCW NOT RECOMMENDED FOR FIELD REPLACEMENT	

See list of abbreviations in introduction to this section

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
C23	0160-0127	C:FXD CER 1UF 20% 25VDCW	
C24	0160-0127	C:FXD CER 1UF 20% 25VDCW	
E1	9170-0059	MAGNETIC CORE:TOROID FERRITE	
E2	9170-0059	MAGNETIC CORE:TOROID FERRITE	
E3	9170-0059	MAGNETIC CORE:TOROID FERRITE	
J1	1250-0102	CONNECTOR:BNC	
J2	1251-0099	CONNECTOR:50 PIN MINAT	
M1	1120-0140	METER:0-1 MILLIAMPERE EDGE-VIEW	
R21	0684-5621	R:FXD COMP 5.6K OHM 10% 1/4W	
XA1	1251-0135	CONNECTOR:PRINTED CIRCUIT 15 CONTACTS	
		MISCELLANEOUS	
	05251-0002	BRACKET:METER	
	05253-0006	BRACKET:PANEL	
	05253-2014	PANEL:FRONT	
	05253-0005	PLATE:BOTTOM	
	5040-0185	BEZEL:METER	

See list of abbreviations in introduction to this section

Table 6-2. Replaceable Parts

Stock No.	Description #	Mfr.	Mfr. Part No.	TQ
0130-0016	C:VAR CER 5-25 PF NPO	28480	0130-0016	1
0140-0069	C:FXD MICA 550 PF 10% 500 VDCW	00853	TYPE M 100 E10	2
0140-0151	C:FXD MICA 820PF 2% 300VDCW	04062	RDM15F821G35	1
0140-0191	C:FXD MICA 56 PF 5% 300 VDCW	04062	RDM15E560J3C	1
0140-0192	C:FXD MICA 68PF 5% 300VDCW	04062	RDM15E680J3C	1
0140-0194	C:FXD MICA 110 PF 5% 300 VDCW	04062	RDM15F111J3C	1
0140-0200	C:FXD MICA 390PF 5% 300VDCW	04062	RDM15F391J3C	1
0140-0214	C:FXD MICA 60PF 5% 300VDCW	04062	RDM15E600J3C	1
0150-0050	C:FXD CER 1000PF 600 VDCW	84411	TYPE E	1
0150-0061	C:FXD CER 20 PF 100 VDCW	56289	53C47	1
0150-0093	C:FXD CER 0.01UF +80-20% 100VDCW	91418	TA	1
0150-0121	C:FXD CER 0.1UF +80%-20% 50VDCW	56289	5C50A	1
0160-0127	C:FXD CER 1UF 20% 25VDCW	56289	5C13	6
0160-0128	C:FXD CER 2.2UF 20% 25VDCW	56289	5C15	1
0160-0137	C:FXD CER 0.33UF 20% 25VDCW	56289	5C10	1
0160-0161	C:FXD MY 0.01 UF 10% 200VDCW	28480	0160-0161	1
0160-0178	C:FXD MICA 27PF 5% 300VDCW	04062	RDM15E270J3S	1
0160-0332	C:FXD MICA 133PF 1%	28480	0160-0332	1
0170-0040	C:FXD MY .047 UF 10% 200VDCW	28480	0170-0040	1
0170-0094	C:FXD MY 0.047UF 20% 50VDCW	84411	TYPE 602	1
0180-0100	C:FXD ELECT TA 4.7UF 10% 35VDCW	56289	150D475X9035B2	1
0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	01121	CB 1025	3
0683-1315	R:FXD COMP 130 OHM 5% 1/4W	01121	CB 1315	1
0683-1525	R:FXD COMP 1500 OHM 5% 1/4W	01121	CB 1525	1
0683-1815	R:FXD COMP 180 OHM 5% 1/4W	01121	CB 1815	1
0683-2205	R:FXD COMP 22 OHM 5% 1/4W	01121	CB 2205	1
0683-2245	R:FXD COMP 220K OHM 5% 1/4W	01121	CB 2245	2
0683-2715	R:FXD COMP 270 OHM 5% 1/4W	01121	CB 2715	1
0683-2725	R:FXD COMP 2700 OHM 5% 1/4W	01121	CB-2725	1
0683-3305	R:FXD COMP 33 OHM 5% 1/4W	01121	CB 3305	2
0683-3315	R:FXD COMP 330 OHM 5% 1/4W	01121	CB 3315	1
0683-3915	R:FXD COMP 390 OHM 5% 1/4W	01121	CB 3915	2
0683-3925	R:FXD COMP 3900 OHM 5% 1/4W	01121	CB 3925	1
0683-4305	R:FXD COMP 43 OHM 5% .25W	01121	CB 4305	3
0683-4315	R:FXD COMP 430 OHM 5% 1/4W	01121	CB 4315	2
0683-5115	R:FXD COMP 510 OHM 5% 1/4W	01121	CB 5115	4
0683-5125	R:FXD COMP 5100 OHM 5% 1/4W	01121	CB 5125	1
0683-5625	R:FXD COMP 5600 OHM 5% 1/4W	01121	CB 5625	1
0683-6205	R:FXD COMP 62 OHM 5% 1/4W	01121	CB 6205	1
0683-7515	R:FXD COMP 750 OHM 5% 1/4W	01121	CB 7515	1

See list of abbreviations in introduction to this section

Table 6-2. Replaceable Parts (Cont'd)

Stock No.	Description #	Mfr.	Mfr. Part No.	TQ
0684-5621	R:FXD COMP 5.6K OHM 10% 1/4W	01121	CB 5621	2
0686-2425	R:FXD COMP 2400 OHM 5% 1/2W	01121	EB 2425	1
1120-0140	METER:0-1 MILLIAMPERE EDGE-VIEW	28480	1120-0140	1
1250-0102	CONNECTOR:BNC	91737	7011	1
1251-0099	CONNECTOR:50 PIN MINAT	28480	1251-0099	1
1251-0135	CONNECTOR:PRINTED CIRCUIT 15 CONTACTS	95354	SD-615UR	1
1853-0009	TRANSISTOR:SILICON PNP	28480	1853-0009	2
1854-0005	TRANSISTOR:2N708 NPN SILICON	07263	2N708	4
1901-0347	SEMICON DEVICE:DIODE 1N4168M MATCH PAIR	93332	1N4168M	1
1910-0016	DIODE:GERMANIUM:100MA ATO.85V 60PIV	28480	1901-0040	1
1910-0022	SEMICON DEVICE:DIODE GE 100MA 6PIV 3.5NS	28480	1910-0016	3
9140-0025	COIL:FXD RF 4.7 UH	28480	1910-0022	1
9140-0107	COIL:FXD RF 27 UH	99800	9140-0025	1
		28480	1840-38	
9140-0125	COIL:VAR 0.9-1.9 UH	99800	9140 0111	1
9140-0126	COIL:VAR 1.76-4.02	28480	2500-14	1
9140-0137	COIL:FXD RF 1000UH	28480	9140-0125	1
		28480	9140-0126	1
		28480	9140-0137	1
9140-0138	COIL:FXD RF 180UH 5%	99800	9140-0138	1
9140-0142	COIL:FXD RF 2.2 UH	28480	9140-0142	1
9140-0143	COIL:FXD RF 3.3 UH	28480	9140-0143	1
9140-0170	COIL-FXD .15 UH 20% 350 MA	78526	11503M	1
9170-0029	CORE: FERRITE BEAD	02114	56-590-65/4A	2
9170-0059	MAGNETIC CORE:TOROID FERRITE	02114	396T125-3D3	3
05253-2007	BOARD:BLANK P.C. AMPLIFIER	28480	05253-2007	1
05253-6003	ASSY:STEP RECOVERY DIODE	28480	05253-6003	1
05253-6007	ASSY:AMPLIFIER	28480	05253-6007	1
5253A-65B	ASSY:HARMONIC GENERATOR	28480	5253A-65B	1
5253A-65C	ASSY:MIXER	28480	5253A-65C	1
05251-0002	BRACKET:METER	28480	05251-0002	1
05253-0005	PLATE:BOTTOM	28480	05253-0005	1
05253-0006	BRACKET:PANEL	28480	05253-0006	1
05253-2014	PANEL:FRONT	28480	05253-2014	1

See list of abbreviations in introduction to this section

Table 6-3. Manufacturer's Code

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 handbooks.

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
00000	U.S.A. Common	Any supplier of U.S.	07115	Corning Glass Works	Bradford, Pa.	24655	General Radio Co.	West Concord, Mass.	73293	Hughes Products Division of	Newport Beach, Calif.
00136	McCoy Electronics	Mount Holly Springs, Pa.		Electronic Components Dept.	Pasadena, Calif.	26365	Gries Reproductor Corp.	New Rochelle, N.Y.	73445	Amperex Electronic Co., Inc.	Hicksville, N.Y.
00213	Sage Electronics Corp.	Rochester, N. Y.	07126	Digitran Co.	Minneapolis, Minn.	26462	Grobet File Co. of America, Inc.	Carlstadt, N.J.		American Phillips Co., Inc.	So. Pasadena, Calif.
00334	Humidat Co.	Colton, Calif.	07137	Transistor Electronics Corp.	Elmira, N.Y.	26992	Hamilton Watch Co.	Lancaster, Pa.	73490	Beckman Helipot Corp.	Hamden, Conn.
00335	Westrex Corp.	New York, N.Y.	07138	Westinghouse Electric Corp.	New York, N.Y.	28480	Hewlett-Packard Co.	Palo Alto, Calif.	73506	Bradley Semiconductor Corp.	Hamford, Conn.
00373	Garlock Packing Co.,	Camden, N.J.	07149	Filmohm Corp.	City of Industry, Calif.	33173	G.E. Receiving Tube Dept.	Owensboro, Ky.	73559	Carling Electric, Inc.	Hardford, Conn.
	Electronic Products Div.	New Bedford, Mass.	07233	Cinch-Graphix Co.	Los Angeles, Calif.	36196	Stanwyck Corp.	Hawkesbury, Ontario, Canada	73582	George K. Garrett Co., Inc.	Philadelphia, Pa.
00656	Aerovox Corp.	Burlington, Wis.	07261	Avnet Corp.	Mountain View, Calif.	37942	P.R. Mallory & Co., Inc.	Indianapolis, Ind.	73734	Federal Screw Prod. Co.	Chicago, Ill.
00779	Amp, Inc.	Bloomington, N.J.	07263	Fairchild Semiconductor Corp.	Minneapolis, Minn.	39543	Mechanical Industries Prod. Co.	Akron, Ohio	73743	Fischer Special Mfg. Co.	Cincinnati, Ohio
00815	Aircraft Radio Corp.	Burlington, Wis.	07322	Minnesota Rubber Co.	Los Angeles, Calif.	40920	Miniature Precision Bearings, Inc.	Chicago, Ill.	73793	The General Industries Co.	Elyria, Ohio
	Northern Engineering Laboratories, Inc.	Marion, Ill.	07387	The Birtcher Corp.	Springfield, N.J.	42190	Muter Co.	Skokie, Ill.	73846	Goshen Stamping & Tool Co.	Goshen, Ind.
00853	Sangamo Electric Company,	Los Angeles, Calif.	07900	Technical Wire Products	Hawthorne, Calif.	43990	C.A. Norgren Co.	Englewood, Colo.	73899	JFD Electronics Corp.	Brooklyn, N.Y.
	Ordill Division (Capacitors)	Los Angeles, Calif.	07910	Continental Device Corp.	Mountain View, Calif.	44655	Ohmite Mfg. Co.	Cambridge, Mass.	73905	Jennings Radio Mfg. Co.	San Jose, Calif.
00866	Goe Engineering Co.	Milwaukee, Wis.	07966	Shockley Semi-Conductor Laboratories	Palo Alto, Calif.	47904	Polaroid Corp.	Philadelphia, Pa.	74275	Signalite Inc.	Winchester, Mass.
00891	Carl E. Holmes Corp.	Beverly Hills, Calif.	07980	Bounton Radio Corp.	Bloomington, N.J.	48620	Precision Thermometer and Inst. Co.	Lexington, Mass.	74861	J.H. Winns, and Sons	Chicago, Ill.
01121	Allen Bradley Co.	Lawndale, Calif.	08145	U.S. Engineering Co.	Los Angeles, Calif.	49956	Raytheon Company	Baltimore, Md.	74868	R.F. Products Division of Amphenol	Danbury, Conn.
01255	Litton Industries, Inc.	Dallas, Texas	08289	Blinn, Delbert Co.	Pomona, Calif.	50090	Ronan Controller Co.	Waseca, Minn.	74970	E.F. Johnson Co.	Philadelphia, Pa.
01281	TRW Semiconductors Inc.	Indianapolis, Ind.	08358	Burgess Battery Co.	Niagara Falls, Ontario, Canada.	63743	Ward Leonard Electric	Chicago, Ill.	75042	International Resistance Co.	Chicago, Ill.
01295	Texas Instruments, Inc.	San Francisco, Calif.				54294	Shallcross Mfg. Co., Inc.	Chicago, Ill.	75173	Jones, Howard B., Division of Cinch Mfg. Corp.	Chicago, Ill.
	Transistor Products Div.	San Francisco, Calif.	08717	Sloan Company	Burbank, Calif.	55026	Simpson Electric Co.	Elmsford, N.Y.	75378	James Knights Co.	Sandwich, N.Y.
01349	The Alliance Mfg. Co.	Van Nuys, Calif.	08718	Cannon Electric Co., Phoenix Div.	Phoenix, Ariz.	55933	Sonotone Corp.	So. Norwalk, Conn.	75382	Kulka Electric Corporation	So. Norwalk, Conn.
01561	Chassi-Trak Corp.	Rochford, Ill.	08792	CBS Electronics Semiconductor Operations, Div. of C.B.S., Inc.	Lowell, Mass.	55938	Sorenson & Co., Inc.	Tonawanda, N.Y.	75818	Lenz Electric Mfg. Co.	Des Moines, Ill.
01589	Pacific Relays, Inc.	Santa Clara, Calif.	08894	Mel-Rain	Indianapolis, Ind.	56137	Spaulding Fibre Co., Inc.	North Adams, Mass.	75915	Littelfuse Inc.	Erie, Pa.
01931	Amerock Corp.	Palo Alto, Calif.	09026	Babcock Relays, Inc.	Costa Mesa, Calif.	56289	Spurge Electric Co.	St. Paul, Minn.	76005	Lord Mfg. Co.	San Francisco, Calif.
01961	Pulse Engineering Co.	Chicago, Ill.	09134	Texas Capacitor Co.	Houston, Texas	59446	Telex, Inc.	Elizabeth 1, N.J.	76210	C.W. Marvel	San Francisco, Calif.
02114	Ferroxcube Corp. of America	Chicago, Ill.	09145	Atohm Electronics	Chicago, Ill.	59730	Thomas & Betts Co.	Bluffton, S.C.	76433	Micamold Electronic Mfg. Corp.	Brooklyn, N.Y.
02286	Cole Mfg. Co.	Somerville, N.J.	09520	Electro Assemblies, Inc.	Chicago, Ill.	60741	Tripplett Electrical Inc.	Swissvale, Pa.	76487	James Millen Mfg. Co., Inc.	Malden, Mass.
02660	Amphenol-Borg Electronics Corp.	Old Saybrook, Conn.	09569	Mallory Battery Co. of Canada, Ltd.	Toronto, Ontario, Canada	61775	Union Switch and Signal, Div. of Westinghouse Air Brake Co.	Owosso, Mich.	76493	J.W. Miller Co.	Los Angeles, Calif.
02735	Radio Corp. of America, Semiconductor and Materials Div.	San Fernando, Calif.	09664	The Bristol Co.	Waterbury, Conn.	62119	Universal Electric Co.	So. Norwalk, Conn.	76530	Monadnock Mills	San Leandro, Calif.
02771	Vocaline Co. of America, Inc.	Syracuse, N.Y.	10214	General Transistor Western Corp.	Los Angeles, Calif.	63743	Ward-Leonard Electric Co., Inc.	New York, N.Y.	76545	Muellier Electric Co.	Cleveland, Ohio
						64959	Western Electric Co., Inc.	Chicago, Ill.	76854	Oak Manufacturing Co.	Crystal Lake, Ill.
02777	Hopkins Engineering Co.	Dayton, Ohio	10411	Ti-Tal, Inc.	Berkeley, Calif.	65092	Weston Inst. Div. of Daystrom, Inc.	Chicago, Ill.	77068	Bendix Pacific Division of Bendix Corp.	No. Hollywood, Calif.
03508	G.E. Semiconductor Products Dept.	El Monte, Calif.	10446	Carborundum Co.	Niagara Falls, N.Y.	66295	Wittek Manufacturing Co.	Rochester, N.Y.	77075	Pacific Metals Co.	San Francisco, Calif.
03705	Apex Machine & Tool Co.	Wakefield, Mass.	10641	Carborundum Co.	Niagara Falls, N.Y.	66346	Wollensak Optical Co.	Hartford, Conn.	77221	Phosstron Instrument and Electronic Co.	South Pasadena, Calif.
03797	Edema Corp.	Morrisstown, N.J.	11235	CTS of Berne, Inc.	Berne, Ind.	70276	Allen Mfg. Co.	New York, N.Y.	77250	Phoell Mfg. Co.	Chicago, Ill.
03877	Transitron Electronic Corp.	Los Angeles, Calif.	11237	Chicago Telephone of California, Inc.	So. Pasadena, Calif.	70309	Allen Control Co., Inc.	Garden City, N.Y.	77252	Philadelphia Steel and Wire Corp.	Philadelphia, Pa.
03888	Pyrofilm Resistor Co.	Hartford, Conn.				70313	Almetal Screw Prod. Co., Inc.	Chicago, Ill.			
03954	Air Marine Motors, Inc.	Lambertville, N.J.	11312	Microwave Electronics Corp.	Palo Alto, Calif.	70485	Atlantic India Rubber Works, Inc.	New York, N.Y.	77342	Potter and Brumfield, Div. of American Machine and Foundry	Princeton, Ind.
04009	Arrow, Hart and Hegeman Elect. Co.	Myrtle Beach, S.C.	11534	Duncan Electronic, Inc.	Santa Ana, Calif.	70563	Amperite Co., Inc.	Chicago, Ill.	77638	Radio Condenser Co., Inc.	Brooklyn, N.Y.
			11711	General Instrument Corporation Semiconductor Division	Newark, N.J.	70903	Belden Mfg. Co.	Cleveland, Ohio	77764	Resistance Products Co.	Harrisburg, Pa.
04013	Taurus Corp.	Burbank, Calif.	11717	Imperial Electronic, Inc.	Buena Park, Calif.	71002	Birnbach Radio Co.	New York, N.Y.	77969	Rubbercraft Corp. of Calif.	Torrance, Calif.
04062	Elmenco Products Co.	Chicago, Ill.	11870	Melabs, Inc.	Palo Alto, Calif.	71041	Boston Gear Works Div. of Murray Co. of Texas	Quincy, Mass.	78189	Shakeproof Division of Illinois Tool Works	Elgin, Ill.
04222	Hi-Q Division of Aerovox	Chicago, Ill.	12136	Philadelphia Handle Co.	Dover, N.H.	71218	Bud Radio Inc.	Cleveland, Ohio	78283	Signal Indicator Corp.	New York, N.Y.
04298	Elgin National Watch Co., Electronics Division	Palo Alto, Calif.	12659	Clarostat Mfg. Co.	Tokyo, Japan	71286	Calnet Fastener Corp.	Paramus, N.J.	78452	Stouffer-Bremet & Co.	Chicago, Ill.
04354	Precision Paper Tube Co.	Mountain View, Calif.	12759	Nippon Electric Co., Ltd.	Newport Beach, Calif.	71313	Allen D. Cardwell Electronic Prod. Corp.	Plainville, Conn.	78471	Tilley Mfg. Co.	San Francisco, Calif.
04404	Dymec Division of Hewlett-Packard Co.	Phoenix, Arizona	12830	Delta Semiconductor Inc.	Dallas, Texas	71400	Bussmann Fuse Div. of McGraw-Edison Co.	St. Louis, Mo.	78488	Stackpole Carbon Co.	St. Marys, Pa.
04651	Sylvania Electric Prods., Inc.	Culver City, Calif.	13103	Thermolloy	Hannover, Germany	71436	Chicago Condenser Corp.	Chicago, Ill.	78493	Standard Thomson Corp.	Waltham, Mass.
04713	Motorola, Inc., Semiconductor Prod. Div.	Northlake, Ill.	13335	Midland Mfg. Co.	Newbury Park, Calif.	71450	CTS Corp.	Elkhart, Ind.	78553	Tinnerman Products, Inc.	Cleveland, Ohio
04732	Filtron Co., Inc., Western Div.	Northlake, Ill.	14099	Sem-Tech	Santa Monica, Calif.	71468	Canon Electric Co.	Burbank, Calif.	78790	Transformer Engineers	Pasadena, Calif.
04773	Automatic Electric Co.	Northlake, Ill.	14193	Calli Resistor Corp.	Conshohocken, Pa.	71471	Cinema Engineering Co.	Chicago, Ill.	78947	Ucmite Co.	Newtonville, Mass.
04777	Automatic Electric Sales Corp.	Redwood City, Calif.	14555	Cornell Dubilier Elec. Corp.	So. Plainfield, N.J.	71482	C.P. Clare & Co.	Centralab Div. of Globe Union Inc.	79142	Veeder Root, Inc.	Hartford, Conn.
04796	Sequoia Wire & Cable Co.	El Monte, Calif.	14860	Williams Mfg. Co.	Brooklyn, N.Y.	71590	Commercial Plastics Co.	Chicago, Ill.	79251	Wenco Mfg. Co.	Chicago, Ill.
04811	Precision Coil Spring Co.	Chicago 44, Ill.	15203	Webster Electronics Co. Inc.	N. Hollywood, Calif.	71616	The Cornish Wire Co.	New York, N.Y.	79727	Continental-Witt Electronics Corp.	Philadelphia, Pa.
04870	P. M. Motor Company	Los Angeles, Calif.	15291	Adjustable Bushing Co.	Twentieth Century	71744	Chicago Miniature Lamp Works	Chicago, Ill.	79963	Zierick Mfg. Corp.	New Rochelle, N.Y.
05006	Twentieth Century Plastics, Inc.	Youngwood, Pa.	15772	Coil Spring Co.	Santa Clara, Calif.	71753	A.O. Smith Corp., Crowley Div.	West Orange, N.J.	80031	Mecpo Division of Sessions Clock Co.	Morrisstown, N.J.
05277	Westinghouse Electric Corp., Semi-Conductor Dept.	Sunnyvale, Calif.	15909	The Daven Co.	Livingston, N.J.	71785	Cinch Mfg. Corp.	Midland, Mich.	80120	Schnitzler Alloy Products	New York, N.Y.
05347	Ultratron, Inc.	Sunnyvale, Calif.	16037	Spruce Pine Mica Co.	Spruce Pine, N.C.	71984	Dow Corning Corp.	San Bruno, Calif.	80130	Times Facsimile Corp.	New York, N.Y.
05593	Humilton Engineering Co.	Cleveland, Ohio	16352	Computer Diode Corp.	Lodi, N.J.	72092	Eitel-McClough, Inc.	Willimantic, Conn.	80131	Electronic Industries Association, Any brand tube meeting EIA standards	Washington, D.C.
05616	Cosmo Plastic (c/o Electrical Spec. Co.)	Rockford, Ill.	16688	De Jur-Amsco Corporation	Long Island City 1, N.Y.	72136	Electro Motive Mfg. Co., Inc.	Providence, R.I.	80207	Unimax Switch, Div. of W.L. Maxson Corp.	Wallingford, Conn.
05624	Barber Colman Co.	Rockford, Ill.	16758	Delco Radio Div. of G.M. Corp.	Kokomo, Ind.	71707	Coto Coil Co., Inc.	Chicago, Ill.	80223	Universal Transformer Corp.	New York, N.Y.
05728	Triften Optical Co.	Roslyn Heights, Long Island, N.Y.	17109	Thermometrics Inc.	Canoga Park, Calif.	72354	John E. Fast & Co.	Brooklyn, N.Y.	80248	Oxford Electric Corp.	Chicago, Ill.
05729	Metropolitan Telecommunications Corp., Metro Cap. Division	Brooklyn, N.Y.	17179	Tranex Company	Mountain View, Calif.	72619	Dialight Corp.	Keasbey, N.J.	80294	Bourns Laboratories, Inc.	Riverside, Calif.
05783	Stewart Engineering Co.	Santa Clara, Calif.	18486	Radio Industries	Des Plaines, Ill.	72699	General Instrument Corp., Semiconductor Div.	Newark, N.J.	80411	Acro Div. of Robertshaw Fulton Controls Co.	Columbus 16, Ohio
05820	Wakefield Engineering Inc.	Wakefield, Mass.	18583	Curtis Instrument Inc.	Mt. Kisco, N.Y.	72758	Girard-Hopkins	Oakland, Calif.	80486	All Star Products Inc.	Defiance, Ohio
06004	The Bassick Co.	Bridgeton, Conn.	18673	E.I. DuPont and Co., Inc.	Wilmington, Del.	72765	Drake Mfg. Co.	Chicago, Ill.	80509	Avley Adhesive Label Corp.	Monrovia, Calif.
06175	Bausch and Lomb Optical Co.	Rochester, N.Y.	19315	Eclipse Pioneer, Div. of Bendix Aviation Corp.	Teterboro, N.J.	72825	Hugh H. Eby Inc.	Philadelphia, Pa.	80583	Hammerlund Co., Inc.	New York, N.Y.
06402	E.T.A. Products Co. of America	Chicago, Ill.	19500	Thomas A. Edison Industries, Div. of McGraw-Edison Co.	West Orange, N.J.	72928	Erie Resistor Corp.	Chicago, Ill.	80640	Stevens, Arnold, Co., Inc.	Boston, Mass.
06475	Western Devices, Inc.	Inglewood, Calif.	20183	Electra Manufacturing Co.	West Orange, N.J.	72964	Robert M. Hadley Co.	Erie, Pa.	81030	International Instruments, Inc.	New Haven, Conn.
06540	Amaton Electronic Hardware Co. Inc.	New Rochelle, N.Y.	21226	Electronic Tube Corp.	Philadelphia, Pa.	73051	Hansen Mfg. Co., Inc.	Princeton, Ind.	81073	Grayhill Co.	LaGrange, Ill.
06555	Beede Electrical Instrument Co., Inc.	Peacock, N.H.	21226	Executive, Inc.	New York, N.Y.	73076	H.M. Harper Co.	Chicago, Ill.	81095	Triad Transformer Corp.	Venice, Calif.
06751	U.S. Sensor Division of Nuclear Corp. of America	Phoenix, Arizona	21520	Fansteel Metallurgical Corp.	No. Chicago, Ill.	73138	Helipot Div. of Beckman Instruments, Inc.	Fullerton, Calif.	81312	Winchester Electronics Co., Inc.	Norwalk, Conn.
06812	Torrington Mfg. Co., West Div.	Van Nuys, Calif.	21535	The Fafnir Bearing Co.	New Britain, Conn.						
07088	Kelvin Electric Co.	Van Nuys, Calif.	21964	Fed. Telephone and Radio Corp.	Clifton, N.J.						
			24446	General Electric Co.	Schenectady, N.Y.						
			24455	G.E., Lamp Division	Nela Park, Cleveland, Ohio						

Galley 3 - Hewlett Packard Code List

00015-39
Revised: February, 1965From: FSC. Handbook Supplements
H4-1 Dated DECEMBER 1964
H4-2 Dated MARCH 1962

Table 6-3. Manufacturer's Code (cont'd)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
81349	Military Specification	85474	R.M. Bracamonte & Co.	San Francisco, Calif.	93929	G. V. Controls	Livingston, N. J.	98220	Francis L. Mosley	Pasadena, Calif.
81415	Wilkor Products, Inc.	Cleveland, Ohio	85660	Koiled Kords, Inc.	New Haven, Conn.	93983	Insuline-Van Norman Ind., Inc.	Newark, N. J.	98278	Microdot, Inc.	So. Pasadena, Calif.
81453	Raytheon Mfg. Co., Industrial Components Div., Industr. Tube Operations	Newton, Mass.	85911	Seamless Rubber Co.	Chicago, Ill.		Electronic Division	Manchester, N. H.	98291	Sealectro Corp.	Mamaroneck, N. Y.
81483	International Rectifier Corp.	El Segundo, Calif.	86197	Clifton Precision Products	Clifton Heights, Pa.	94137	General Cable Corp.	Bayonne, N. J.	98405	Carad Corp.	Redwood City, Calif.
81541	The Airpax Products Co.	Cambridge, Mass.	86579	Precision Rubber Products Corp.	Dayton, Ohio	94144	Raytheon Mfg. Co., Industrial Components Div., Receiving Tube Operation	Quincy, Mass.	98731	General Mills	Minneapolis, Minn.
81860	Barry Controls, Inc.	Watertown, Mass.	86684	Radio Corp. of America, RCA Electron Tube Div.	Harrison, N. J.	94145	Raytheon Mfg. Co., Semiconductor Div., California Street Plant	Newton, Mass.	98821	North Hills Electric Co.	Minneapolis, N. Y.
82042	Carter Parts Co.	Skokie, Ill.	87216	Philco Corporation (Lansdale Division)	Lansdale, Pa.	94148	Scientific Radio Products, Inc.	Loveland, Colo.	98925	Clevite Transistor Prod. Div. of Clevite Corp.	Waltham, Mass.
82142	Jeffers Electronics Division of Speer Carbon Co.	Du Bois, Pa.	87473	Western Fibrous Glass Products Co.	San Francisco, Calif.	94154	Tung-Sol Electric, Inc.	Newark, N. J.	98978	International Electronic Research Corp.	Burbank, Calif.
82170	Allen B. DuMont Labs, Inc.	Clifton, N. J.	87664	Van Waters & Rogers Inc.	Seattle, Wash.	94197	Curtiss-Wright Corp., Electronics Div.	East Paterson, N. J.	99109	Columbia Technical Corp.	New York, N. Y.
82209	Magure Industries, Inc.	Greenwich, Conn.	87930	Tower Mfg. Corp	Providence, R. I.	94222	Southco Div. of S. Chester Corp.	Lester, Pa.	99313	Varian Associates	Palo Alto, Calif.
82219	Sylvania Electric Prod. Inc. Electronic Tube Div.	Emporium, Pa.	88140	Cutler-Hammer, Inc.	Lincoln, Ill.	94310	Tru Ohm Prod. Div. of Model Engineering and Mfg. Co.	Chicago, Ill.	99515	Marshall Industries, Electron Products Division	Pasadena, Calif.
82376	Astron Co.	East Newark, N. J.	88220	Gould-National Batteries, Inc.	St. Paul, Minn.	94330	Wire Cloth Products Inc.	Chicago, Ill.	99707	Control Switch Division, Controls Co. of America	El Segundo, Calif.
82389	Switchcraft, Inc.	Chicago, Ill.	88698	General Mills, Inc.	Buffalo, N. Y.	94682	Worcester Pressed Aluminum Corp.	Worcester, Mass.	99800	Delevan Electronics Corp.	East Aurora, N. Y.
82647	Metals and Controls, Inc., Div. of Texas Instruments, Inc., Spencer Prods.	Attleboro, Mass.	89231	Graybar Electric Co.	Oakland, Calif.				99848	Wilco Corporation	Indianapolis, Ind.
82866	Research Products Corp.	Madison, Wis.	89462	Waldes Kohinoor, Inc.	Cambridge, Mass.				99934	Renbrandt, Inc.	Boston, Mass.
82877	Roltron Manufacturing Co., Inc.	Woodstock, N. Y.	89473	General Electric Distributing Corp.	Schenectady, N. Y.				99942	Hoffman Semiconductor Div. of Hoffman Electronics Corp.	Evanston, Ill.
82893	Vector Electronic Co.	Glendale, Calif.	89636	Carter Parts Div. of Economy Baler Co.	Chicago, Ill.				99957	Technology Instrument Corp of Calif.	Newbury Park, Calif.
83053	Western Washer Mfr. Co.	Los Angeles, Calif.	89665	United Transformer Co.	Chicago, Ill.				THE FOLLOWING H-P VENDORS HAVE NO NUMBER ASSIGNED IN THE LATEST SUPPLEMENT TO THE FEDERAL SUPPLY CODE FOR MANUFACTURERS HANDBOOK.		
83058	Carr Fastener Co.	Cambridge, Mass.	90179	U. S. Rubber Co., Mechanical Goods Div.	Passaic, N. J.						
83086	New Hampshire Ball Bearing, Inc.	Peterborough, N. H.	90970	Bearing Engineering Co.	San Francisco, Calif.	95023	Philbrick Researchers, Inc.	Boston, Mass.	J0000	Winchester Electronics, Inc.	Santa Monica, Calif.
83125	Pyramid Electric Co.	Darlington, S. C.	91260	Connor Spring Mfg. Co.	San Francisco, Calif.	95236	Allies Products Corp.	Miami, Fla.	0000F	Malco Tool and Die	Los Angeles, Calif.
83148	Electro Cords Co.	Los Angeles, Calif.	91345	Miller Dial & Nameplate Co.	El Monte, Calif.	95238	Continental Connector Corp.	Woodside, N. Y.	0000M	Western Coil Div. of Automatic Ind., Inc.	Redwood City, Calif.
83186	Victory Engineering Corp.	Springfield, N. J.	91418	Radio Materials Co.	Chicago, Ill.	95263	Leecraft Mfg. Co., Inc.	New York, N. Y.	0000P	Ty-Car Mfg. Co., Inc.	Holliston, Mass.
83298	Bendix Corp., Red Bank Div.	Red Bank, N. J.	91506	Augal Brothers', Inc.	Attleboro, Mass.	95264	Lerco Electronics, Inc.	Burbank, Calif.	0000Z	Willow Leather Products Corp.	Newark, N. J.
83315	Hubbell Corp.	Mundelein, Ill.	91637	Dale Electronics, Inc.	Columbus, Nebr.	95275	National Coil Co.	Sheridan, Wyo.	000AA	British Radio Electronics Ltd.	Washington, D. C.
83330	Smith, Herman H., Inc.	Brooklyn, N. Y.	91662	Elco Corp.	Philadelphia, Pa.	95275	Vitramon, Inc.	Bridgeport, Conn.	000AB	ETA	England
83385	Central Screw Co.	Chicago, Ill.	91737	Gremar Mfg. Co., Inc.	Wakefield, Mass.	95348	Gordas Corp.	Bloomfield, N. J.	000AC	Indiana General Corp., Elect. Div.	Indiana
83501	Gavitt Wire and Cable Co., Div. of Amerace Corp.	Brookfield, Mass.	91827	K F Development Co.	Redwood City, Calif.	95712	Dage Electric Co., Inc.	Franklin, Ind.	000BB	Precision Instrument Components Co.	Van Nuys, Calif.
83594	Burroughs Corp.	Plainfield, N. J.	91929	Minneapolis-Honeywell Regulator Co., Microswitch Div.	Frederic, Ill.	95726	Heckler & Co.	Chicago, Ill.	000MM	Rubber Eng. & Development	Hayward, Calif.
83740	Eveready Battery	New York, N. Y.	91961	Nahm-Bros. Spring Co.	Oakland, Calif.	95807	Huggins Laboratories	Sunnyvale, Calif.	000NN	A "N" D Manufacturing Co.	San Jose 27, Calif.
83777	Model Eng. and Mfg., Inc.	Huntington, Ind.	92180	Tru-Connector Corp.	Peabody, Mass.	96095	Hi-Q Division of Aerovox	Olean, N. Y.	000OQ	Coiltron	Oakland, Calif.
83821	Loyd Scruggs Co.	Festus, Mo.	92196	Universal Metal Prod., Inc.	Bassett Pointe, Calif.	96256	Thordarson-Weissner Div. of Magure Industries, Inc.	Mt. Carmel, Ill.	000SS	Control of Elgin Watch Co.	Burbank, Calif.
84171	Arco Electronics, Inc.	New York, N. Y.	92367	Elgeet Optical Co., Inc.	Rochester, N. Y.				000WW	California Eastern Lab.	Burlingame, Calif.
84396	A. J. Ciesner Co., Inc.	San Francisco, Calif.	92607	Tinsolite Insulated Wire Co.	Tarrytown, N. Y.	97539	Automatic and Precision Mfg. Co.	Yonkers, N. Y.	000YY	S. K. Smith Co.	Los Angeles 45, Calif.
84411	Good All Electric Mfg. Co.	Ogallala, Neb.	93332	Sylvania Electric Prod. Inc., Semiconductor Div.	Woburn, Mass.	97966	CBS Electronics, Div. of C. B. S., Inc.	Danvers, Mass.			
84970	Sarkis Tarzian, Inc.	Bloomington, Ind.	93369	Robbins and Myers, Inc.	New York, N. Y.	97979	Reon Resistor Corp.	Yonkers, N. Y.			
85454	Boonton Molding Company	Boonton, N. J.	93410	Stevens Mfg. Co., Inc.	Mansfield, Ohio	98141	Axel Brothers Inc.	Jamaica, N. Y.			
85471	A. B. Boyd Co.	San Francisco, Calif.	93788	Howard J. Smith Inc.	Port Monmouth, N. J.	98159	Rubber Teck, Inc.	Gardena, Calif.			

APPENDIX I - MANUAL CHANGES

This manual applies directly to the 5253B Frequency Converter having serial prefix 716. This manual with the following changes also applies to the 5253B Frequency Converters having serial prefix numbers 513, 450, 321, and 311.

Instrument Serial Prefix No.	Change No.
311, 321	1, 2, 3
450	2, 3
513	3
716	4

- CHANGE 1: Figure 5-5, Table 6-1:
Change: A1 from 05253-6007 to 5253A-65A
Replace schematic with Figure IA-1.
Replace A1 portion of parts list with Table IA-1
- CHANGE 2: Tables 6-1, Misc., Table 6-2:
Change: Plate: Bottom from 05253-0005 to HP Part No. 5253A-12E.
Bracket: Meter from 05251-0002 to HP Part No. 5253A-12F.
Bracket: Panel from 05253-0006 to HP Part No. 05253-0002.
Panel: Front from 05253-2014 to HP Part No. 05253-2003.
- CHANGE 3: Figure 6-1, Page 6-2:
Change MP5 to HP Part No. 2380-0003, Qty. 4.
Change MP25 to HP Part No. 1410-0047, Qty. 2.
Change MP53 to HP Part No. 5253A-20A.
Delete MP67.
- CHANGE 4: Table 6-1, Page 6-5 and Table 6-2, Page 6-8 Parts List:
HP Part No. for matched diode pair A4CR1 was 1900-0011. New
HP Part No. 1901-0347 is the preferred replacement.

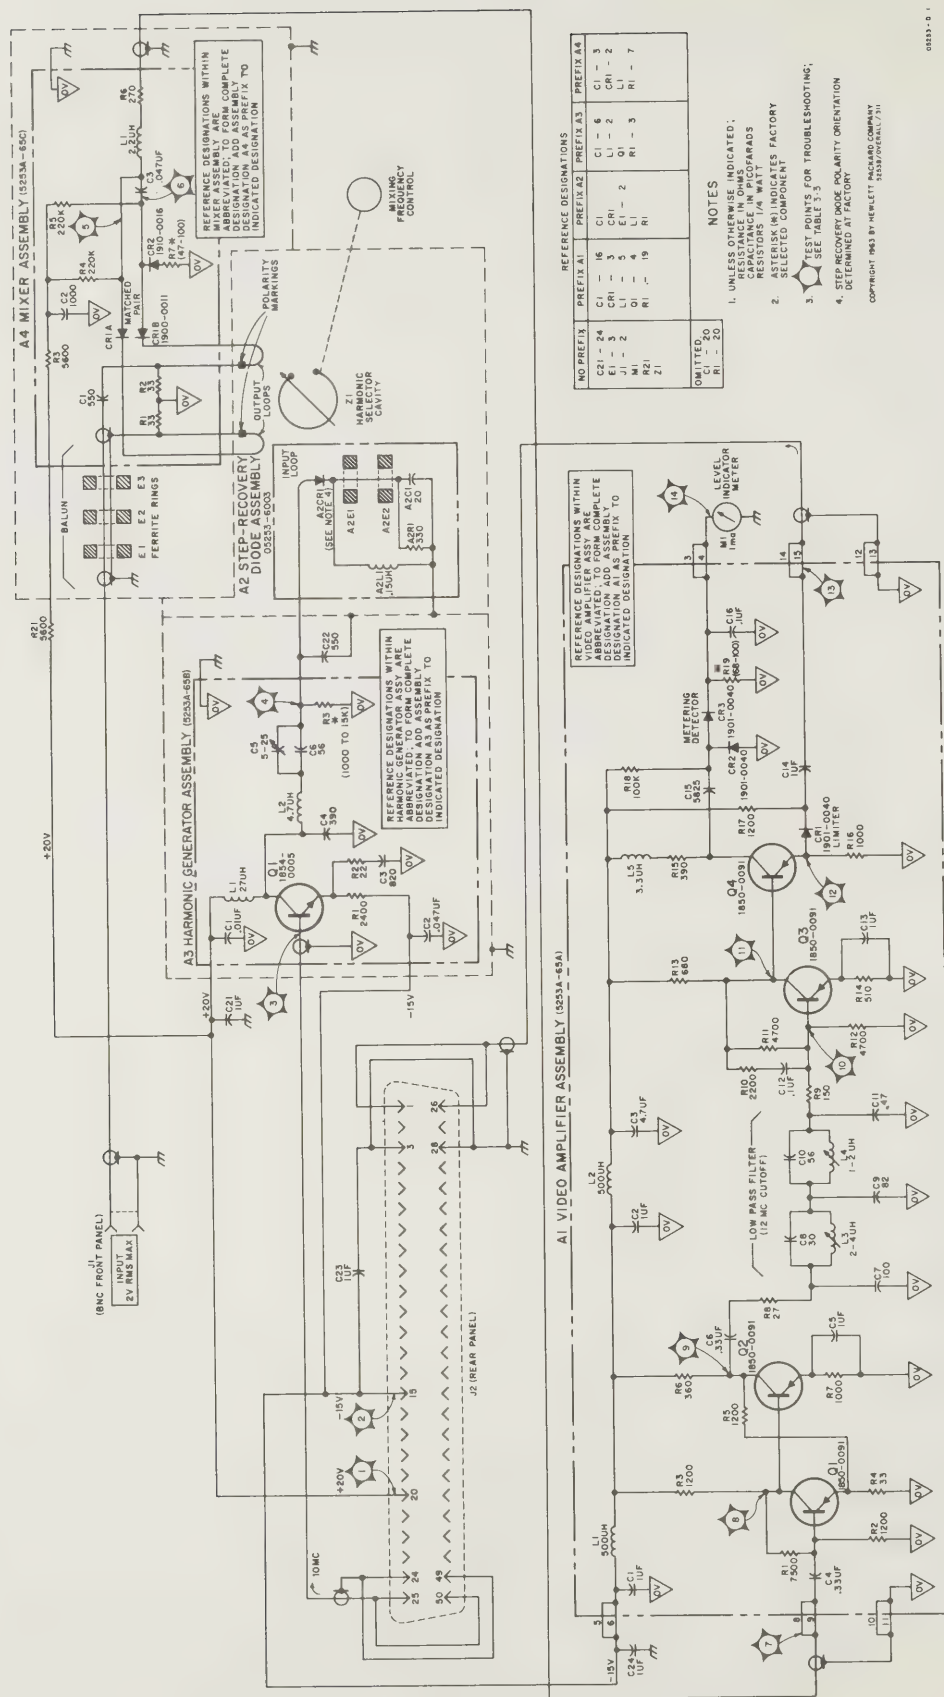


Figure IA-1

Table IA-1. Reference Designation Index

Reference Designation	Stock No.	Description #	Note
A1	5253A-65A	ASSY:VIDEO AMPLIFIER	
A1C1	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C2	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C3	0180-0100	C:FXD ELECT TA 4.7UF 10% 35VDCW	
A1C4	0160-0137	C:FXD CER 0.33UF 20% 25VDCW	
A1C5	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C6	0160-0137	C:FXD CER 0.33UF 20% 25VDCW	
A1C7	0140-0176	C:FXD MICA 100 PF 2% 300 VDCW	
A1C8	0140-0203	C:FXD MICA 30PF 5% 500VDCW	
A1C9	0140-0193	C:FXD MICA 82 PF 5% 300 VDCW	
A1C10	0140-0191	C:FXD MICA 56 PF 5% 300 VDCW	
A1C11	0140-0204	C:FXD 47PF 5% NPO 500 VDCW	
A1C12	0150-0121	C:FXD .1MF 50VDCW	
A1C13	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C14	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C15	0140-0189	C:FXD MICA 5825 PF 2% 300 VDCW	
A1C16	0150-0121	C:FXD .1MF 50VDCW	
A1CR1	1901-0040	DIODE:SILICON	
A1CR2	1901-0040	DIODE:SILICON	
A1CR3	1901-0040	DIODE:SILICON	
L1	9140-0118	COIL:FXD 500 UH 5%	
L2	9140-0118	COIL:FXD 500 UH 5%	
A1L3	9140-0126	COIL:VAR 1.76-4.02	
A1L4	9140-0125	COIL:VAR 0.9-1.9 UHY	
A1L5	9140-0111	COIL:FXD RF 3.3UHY	
A1Q1	1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	
A1Q2	1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	
A1Q3	1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	
A1Q4	1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	
A1R1	0683-7525	R:FXD COMP 7500 OHMS 5% 1/4W	
A1R2	0683-1225	R:FXD 1200 OHM 5% 1/4W	
A1R3	0683-1225	R:FXD 1200 OHM 5% 1/4W	
A1R4	0683-3305	R:FXD COMP 33 OHMS 5% 1/4W	
A1R5	0683-1225	R:FXD COMP 1200 OHMS 5% 1/4W	
A1R6	0683-3615	R:FXD COMP 360 OHMS 5% 1/4W	
A1R7	0683-1025	R:FXD COMP 1000 OHMS 5% 1/4W	
A1R8	0684-2701	R:FXD 27 OHM 10% 1/4 W	
A1R9	0684-1511	R:FXD COMP 15K OHMS 10% 1/4W	
A1R10	0683-2225	R:FXD 2.2K OHM 5% 1/4W	
A1R11	0683-4725	R:FXD COMP 4700 OHMS 5% 1/4W	
A1R12	0683-4725	R:FXD COMP 4700 OHMS 5% 1/4W	
A1R13	0683-6815	R:FXD COMP 680 OHMS 5% 1/4W	
A1R14	0683-5115	R:FXD COMP 510 OHMS 5% 1/4W	
A1R15	0683-3915	R:FXD COMP 390 OHMS 5% 1/4W	
A1R16	0683-1025	R:FXD COMP 1000 OHMS 5% 1/4W	
A1R17	0683-1225	R:FXD 1200 OHM 5% 1/4W	
A1R18	0684-1041	R:FXD 100 K OHM 10% 1/4 W	
A1R19	0683-8205	R:FXD COMP 82 OHMS 5% 1/4W	

See list of abbreviations in introduction to this section

APPENDIX II - 5253A**IIA-1. INTRODUCTION.**

IIA-2. The 5253A is basically the same as the 5253B except for frequency range. The 5253A measures from 100 to 500 Mc. The 5253B measures from 50 to 500 Mc. The frequency range of the 5253B was extended by changing the pick-up loop in the cavity. The 5253B manual will apply for most applications. Appendix II covers the differences between the two models and contains the necessary information for the operation and maintenance of the 5253A.

IIA-3. DESCRIPTION.

IIA-4. The Hewlett-Packard Model 5253A Frequency Converter is a plug-in unit which converts a Hewlett-Packard Model 5243L or 5245L Electronic Counter into a direct reading counter from 88 to 512 Mc.

IIA-5. The stability and accuracy of the basic counter are retained by multiplying a 10-Mc signal, derived from the 1-Mc internal time base of the counter, to a selectable harmonic frequency between 100 and 500 Mc. This known harmonic of 10 Mc is then heterodyned with the INPUT signal. If the resulting difference frequency is between 100 kc and 12 Mc (bandwidth of amplifier in plug-in), it is counted and displayed by the counter. The frequency of the INPUT signal is then indicated by the combination of the MIXING FREQUENCY control (in megacycles; front panel of plug-in) and the digital display of the counter (in megacycles).

IIA-6. A front panel meter, by monitoring the difference-frequency output of the plug-in to the counter,

aids in selecting the desired MIXING FREQUENCY and also in determining if INPUT signal amplitude is adequate for accurate frequency measurement.

IIA-7. OPERATING PROCEDURE.**IIA-8. NORMAL RANGE MEASUREMENTS.**

IIA-9. Figure IIA-1 is the procedure to be used for measurement of frequencies from 100.1 to 512 Mc with INPUT signal amplitudes from 50 mv to 1 v RMS.

IIA-10. EXTENDED RANGE MEASUREMENTS.

IIA-11. The frequency of signals not within the normal range of 100.1 to 512 Mc, 50 mv to 1 v RMS, may be measured using the following procedures:

IIA-12. 88 TO 100.1 MC, 50 MV TO 1 V RMS. Perform steps 1 through 5 of Figure IIA-1. Then:

a. Set mixing frequency control to slightly more than 110 Mc.

b. Turn mixing frequency control slowly clockwise until level indicator meter first reaches a maximum reading in the green portion of the scale.

c. Subtract counter display (in Mc) from reading of mixing frequency control (in Mc) for frequency of INPUT signal.

Table IIA-1. Specifications*

RANGE: As converter for 5243L or 5245L counter, 88 Mc to 512 Mc, using mixing frequencies of 100 Mc to 500 Mc in 10 Mc steps

ACCURACY: Retains accuracy of 5243L or 5245L counter

INPUT VOLTAGE RANGE: 50 mv to 1 v RMS

MAXIMUM INPUT: 2 v RMS or 100 vdc will not damage the instrument

INPUT IMPEDANCE: Approximately 50 ohms


LEVEL INDICATOR: Meter aids frequency selection; indicates output voltage level to counter

REGISTRATION: Counter display is added to the converter dial reading

WEIGHT: Net 5-1/2 lbs, shipping 9 lbs

ACCESSORY FURNISHED: Φ 10503A (AC-16K) Cable, 4 ft long, male BNC connectors

*When installed in Hewlett-Packard Model 5243L or Model 5245L Electronic Counter.

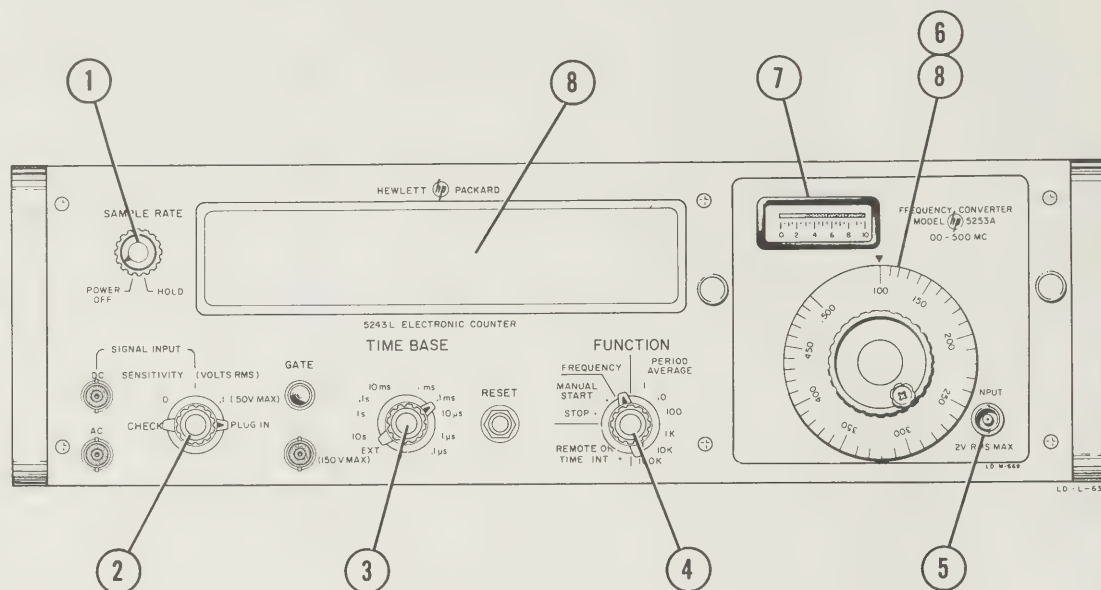

1. Turn SAMPLE RATE control slightly out of POWER OFF position.
2. Set SENSITIVITY to PLUG IN.
3. Set TIME BASE to .1 ms.*
4. Set FUNCTION to FREQUENCY.
5. Connect signal whose frequency is to be measured to INPUT of converter.
6. Set mixing frequency control to read slightly less than 100 mc.

7. Slowly turn mixing frequency control counter-clockwise until level indicator meter first reaches a maximum reading in the green portion of its scale.
8. Add counter display (in mc) to mixing frequency control reading (in mc) for frequency of INPUT signal.

* TIME BASE setting may vary, depending on desired resolution of INPUT signal frequency. See table 3-1.

Figure IIA-1. Frequency Measurement Procedure

IIA-13. 88 TO 512 MC, AMPLITUDE LESS THAN 50 MV RMS. The front panel level indicator meter indicates in the green portion of its scale only when converter is properly tuned and amplitude of INPUT signal is adequate for accurate frequency measurement. However, because of conservative specifications of both the converter and counter, frequencies may often be accurately measured when meter reads in the red portion of its scale. To make these extended range measurements:

a. Follow normal procedure (Figure IIA-1 or Paragraph IIA-12, depending upon frequency range) except that mixing frequency control should be tuned for first maximum reading on the level indicator meter, regardless of the color of region maximum.

b. Insert an external variable attenuator (such as Hewlett-Packard Model 355A or 355C) in the transmission line between the converter and the source of INPUT signal. Vary attenuation from 0 to 1 db during final step of frequency measurement procedure. If counter display does not change more than momentarily (during switching of attenuator), INPUT signal is above noise threshold and frequency measurement result is valid.

IIA-14. VIDEO AMPLIFIER ASSEMBLY (A1).

IIA-15. The output of the mixer circuit is amplified by transistors A1Q1 and A1Q2 and is fed to the 12-Mc low-pass filter network (see Figure IIA-2). This filter passes any signal frequency below approximately 12 Mc and attenuates all higher frequency signals. The low-pass filter output is amplified by A1Q3 and fed to the last transistor amplifier, A1Q4, which provides both the output to the counter and the drive for the level indicator meter. The limiter diode, A1CR1, prevents the amplitude of the video amplifier output signal from exceeding approximately 300 mv RMS so that counter input circuits will not be overloaded. The low frequency limit of the video amplifier, determined by the bypass and interstage coupling networks, is approximately 100 kc. The converter output signal to the counter, when converter is properly tuned, will be between approximately 100 kc and 12 Mc and will have an amplitude that is less than approximately 300 mv RMS.

IIA-16. LEVEL INDICATOR METER .

IIA-17. The dc current supply for the meter is produced by metering detector A1CR3 and smoothed by capacitor A1C16 (see Figure IIA-3). The value of shunt resistor A1R19 is selected to make level indicator meter M1 read at red-green border when amplitude of converter output to counter is in excess of the 100-mv RMS minimum signal amplitude normally required by the counter for accurate frequency measurement.

IIA-18. HARMONIC GENERATOR ADJUSTMENT.

IIA-19. To adjust the harmonic generator assembly, proceed as follows:

a. Remove converter from counter and reconnect to counter with Extension Cable, Φ 10506A.

b. Connect VHF Signal Generator to converter INPUT and set to 472 Mc, CW, at 100 mv.

c. Connect RF Millivoltmeter to Test Point #13 (see Figure IIA-5).

d. Set converter mixing frequency control to 470 Mc, and tune for maximum reading on RF Millivoltmeter.

e. Vary output of VHF Signal Generator to make converter level indicator meter read at red-green border.

f. Using plastic tuning tool, tune A3C5 (see Figure IIA-5) for maximum reading on RF Millivoltmeter. Tune A3C5 through hole in harmonic generator assembly shield cover.

IIA-20. LOW PASS FILTER ADJUSTMENT.

IIA-21. To adjust the low pass filter in the video amplifier assembly, proceed as follows:

a. Remove converter from counter and reconnect to counter with Extension Cable, Φ 10506A.

b. Connect VHF Signal Generator to converter INPUT and set to 110 Mc, CW, at 50 mv.

c. Connect RF Millivoltmeter to Test Point #13 (see Figure IIA-7).

d. Set converter mixing frequency control to 100 Mc and tune for maximum reading on RF Millivoltmeter.

e. Set Signal Generator to 118 Mc, CW, at 1 v.

f. Using plastic tool, adjust variable inductor A1L4 (see Figure IIA-4) for minimum reading of RF Millivoltmeter.

g. Set Signal Generator to 117 Mc, CW, at 1 v.

h. Using plastic tool, adjust variable inductor A1L3 (see Figure IIA-4) for minimum reading of RF Millivoltmeter.

i. Set Signal Generator to 115 Mc, CW, at 1 v.

j. Reading of RF Millivoltmeter should be less than 100 mv. If reading is above 100 mv, troubleshoot video amplifier assembly.

IIA-22. METER ADJUSTMENT.

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, Φ 10506A.

b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set counter controls as shown in Figure IIA-1. Counter should display approximately 2 Mc.

d. Vary VHF Generator output to make level indicator meter read at red-green border.

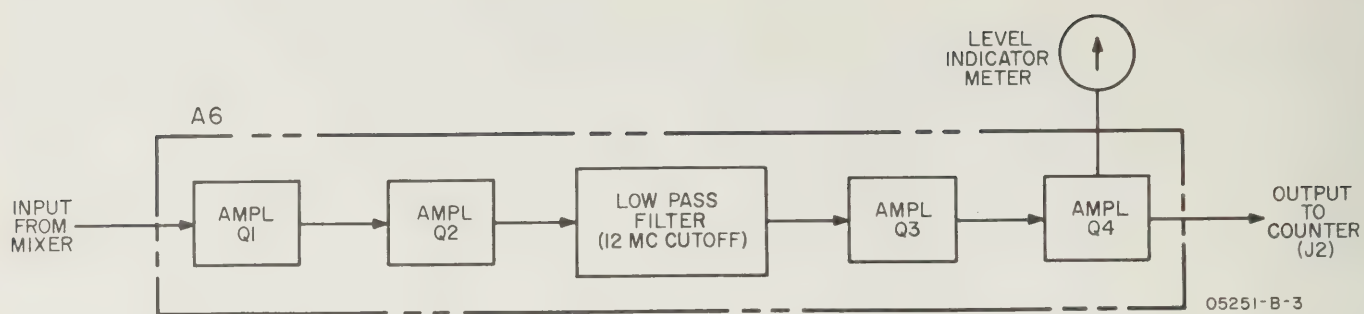


Figure IIA-2. Video Amplifier (A6)

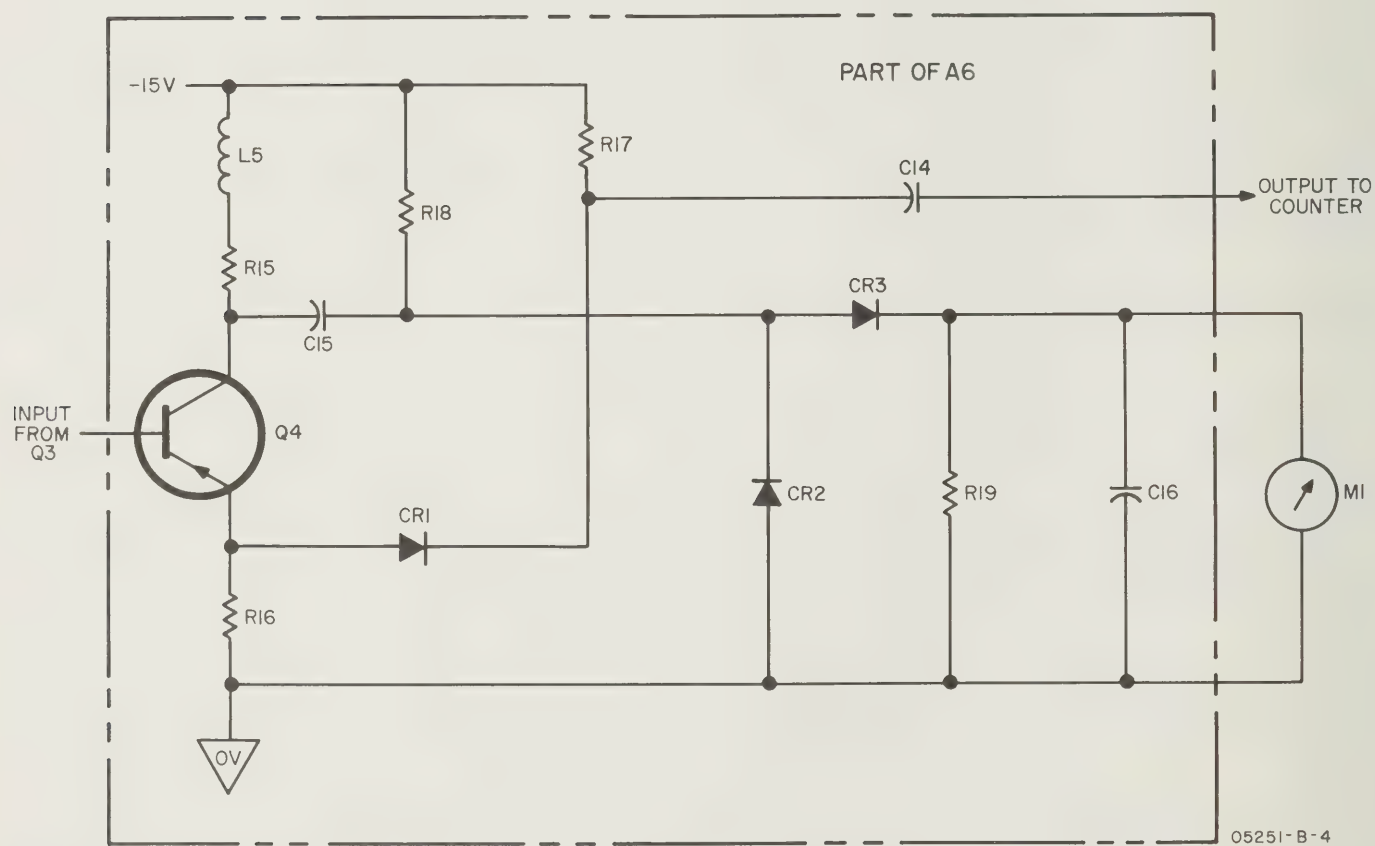


Figure IIA-3. Level Indicator Meter Circuit

e. Using RF Millivoltmeter, measure voltage at Test Point #13. Voltage should be between 100 mv and 130 mv. If not, change value of resistor A1R19 to change voltage to between 100 mv and 130 mv. If voltage is too high, increase value of A1R19. If voltage is too low, decrease value of A1R19. Repeat steps d and e after changing value of A1R19.

IIA-23. MECHANICAL ADJUSTMENT OF METER ZERO .

IIA-24. TRUE SIGNAL LEVEL INDICATION. Level indicator meter is adjusted at the factory for proper mechanical zero. However, normal aging of meter components may change indicated zero level. To insure accuracy of input signal level indication, periodic adjustment of meter zero may be necessary.

IIA-25. ZERO-SET. When meter is properly zero-set, pointer rests over the zero calibration mark at the left-hand end of meter scale when converter is (1) at normal operating temperature, (2) in normal operating position, and (3) without power. Proceed as follows:

- a. Allow counter and converter to operate for one hour to permit meter movement to reach normal operating temperature.
- b. Turn counter off and allow one minute for all capacitors to discharge.
- c. Remove converter from counter to enable access to rear of meter.
- d. Remove adhesive-backed-paper cover from meter zero-adjustment access hole on top-rear of meter.
- e. Carefully insert small tool in access hole and engage adjustment fork.
- f. Vary setting of adjustment fork until meter reads zero.
- g. Remove tool and replace adhesive-backed paper cover on access hole. This completes meter zero adjustment procedure.

IIA-26. SENSITIVITY CHECK.

- a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, hp 10506A.
- b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.
- c. Adjust controls as shown in Figure IIA-2.
- d. Set converter mixing frequency control to 100 Mc. Counter should display approximately 2 Mc.
- e. Using RF Millivoltmeter, measure output of converter at Test Point #13 (see Figure IIA-7). Voltage should be at least 100 mv.

f. Repeat above steps c, d, and e with VHF Generator frequency of 472 Mc and converter mixing frequency control set to 470 Mc. Converter output to counter, as measured by RF Millivoltmeter, should be at least 100 mv.

g. A similar check may be made at any frequency within the range of the Model 5253A. Converter output to counter should be at least 100 mv when difference frequency is between 100 kc and 12 Mc and converter is properly tuned.

IIA-27. METER ACCURACY CHECK.

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, hp 10506A.

b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure IIA-1. Set converter mixing frequency control to 100 Mc. Counter should display approximately 2 Mc.

d. Vary output of VHF Signal Generator for converter level indicator to make meter read at red-green border.

e. Using RF Millivoltmeter, measure converter output to counter at Test Point #13. Voltage should be between 100 mv and 130 mv. If not, see Paragraph IIA-22 for meter calibration adjustment procedure.

IIA-28. LOW PASS FILTER CHECK.

a. Turn counter power off, remove converter from counter and reconnect to counter with Extension Cable, hp 10506A.

b. Set VHF Signal Generator to 110 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure IIA-1. Set converter mixing frequency control to 100 Mc. Counter should display approximately 10 Mc.

d. Connect RF Millivoltmeter to Test Point #13. Vary output of VHF Signal Generator for RF Millivoltmeter reading of 100 mv. Note output level of VHF Signal Generator.

e. Set VHF Signal Generator to 115 Mc at same output level as noted in step d above. Converter output to counter, as shown on RF Millivoltmeter, should not exceed 50 mv. If converter output to counter is greater than 50 mv, see Paragraph IIA-20 for low pass filter adjustment procedure.

IIA-29. IN-CABINET PERFORMANCE CHECK.

- a. Turn counter power off and install converter.
- b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure IIA-1. Counter should display approximately 2 Mc.

d. Set VHF Signal Generator to any frequency between 88 Mc and 512 Mc with output of 50 mv. Counter should display correct frequency at any frequency within this range.

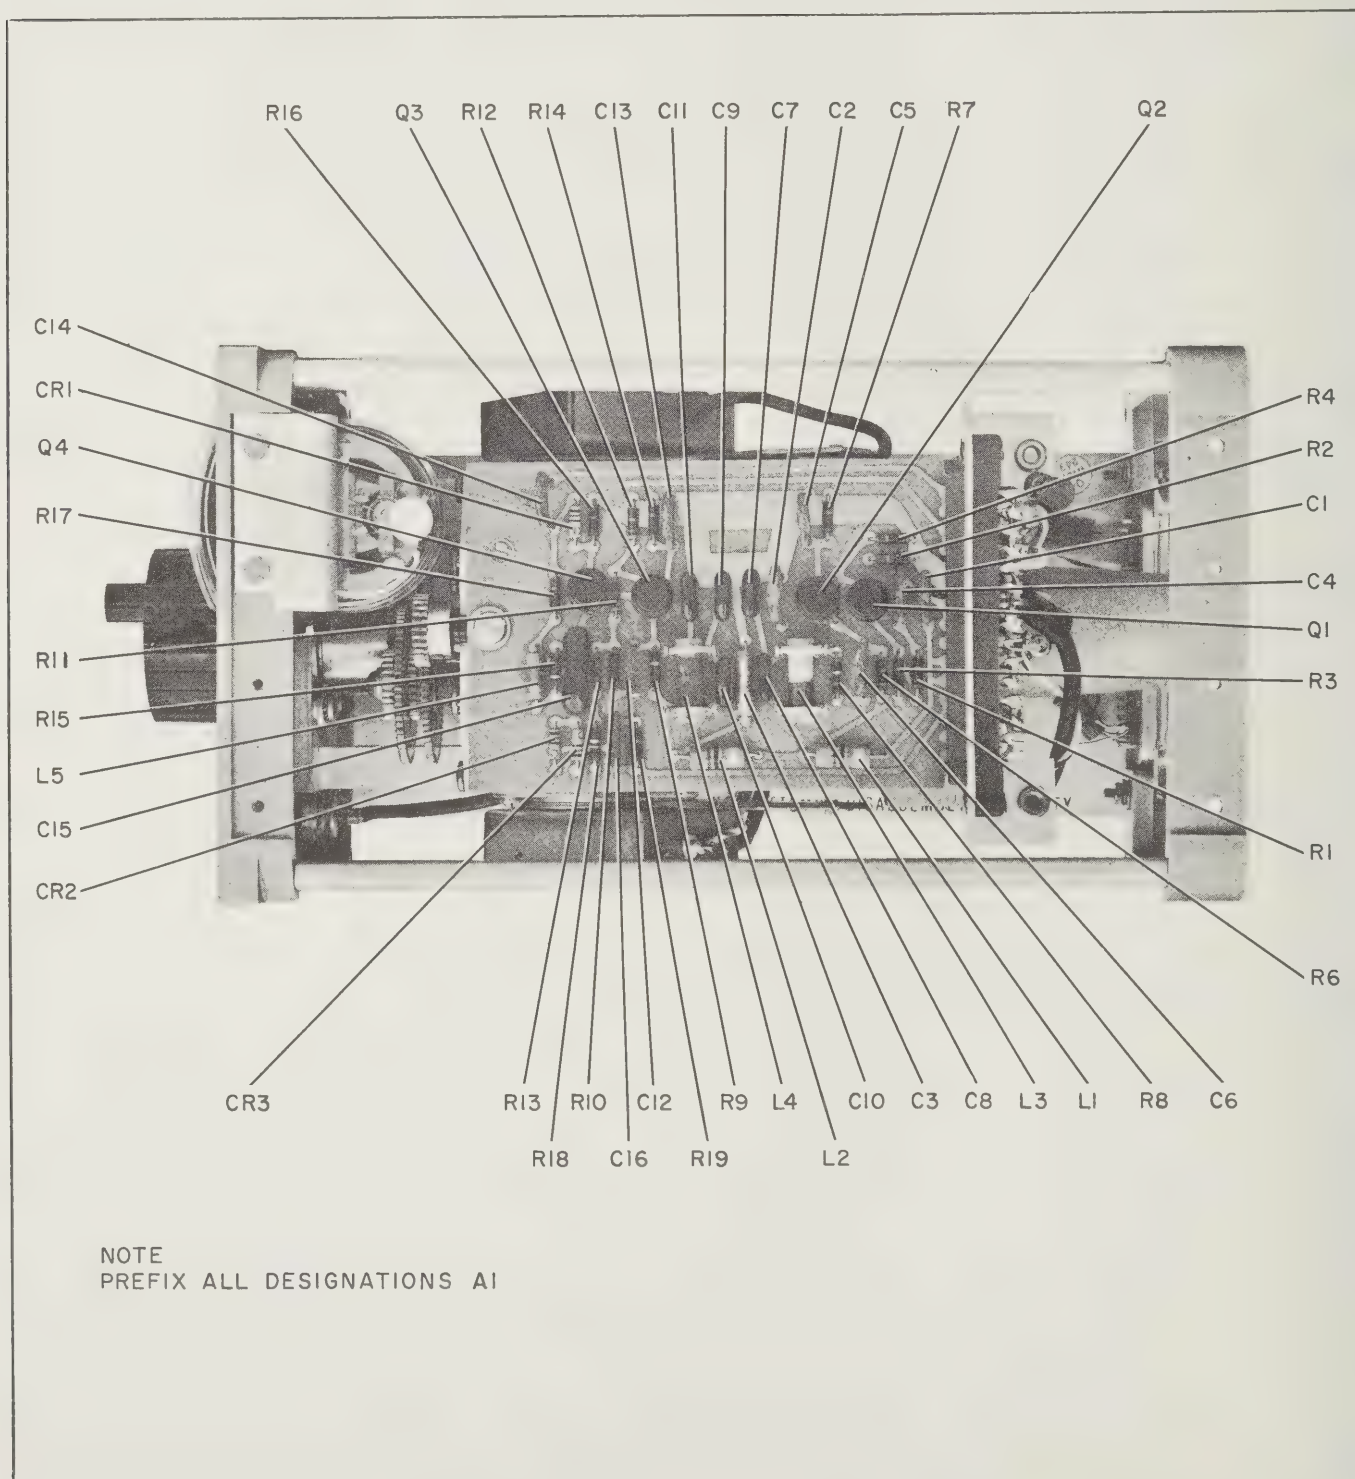


Figure IIA-4. Model 5253A, Top View

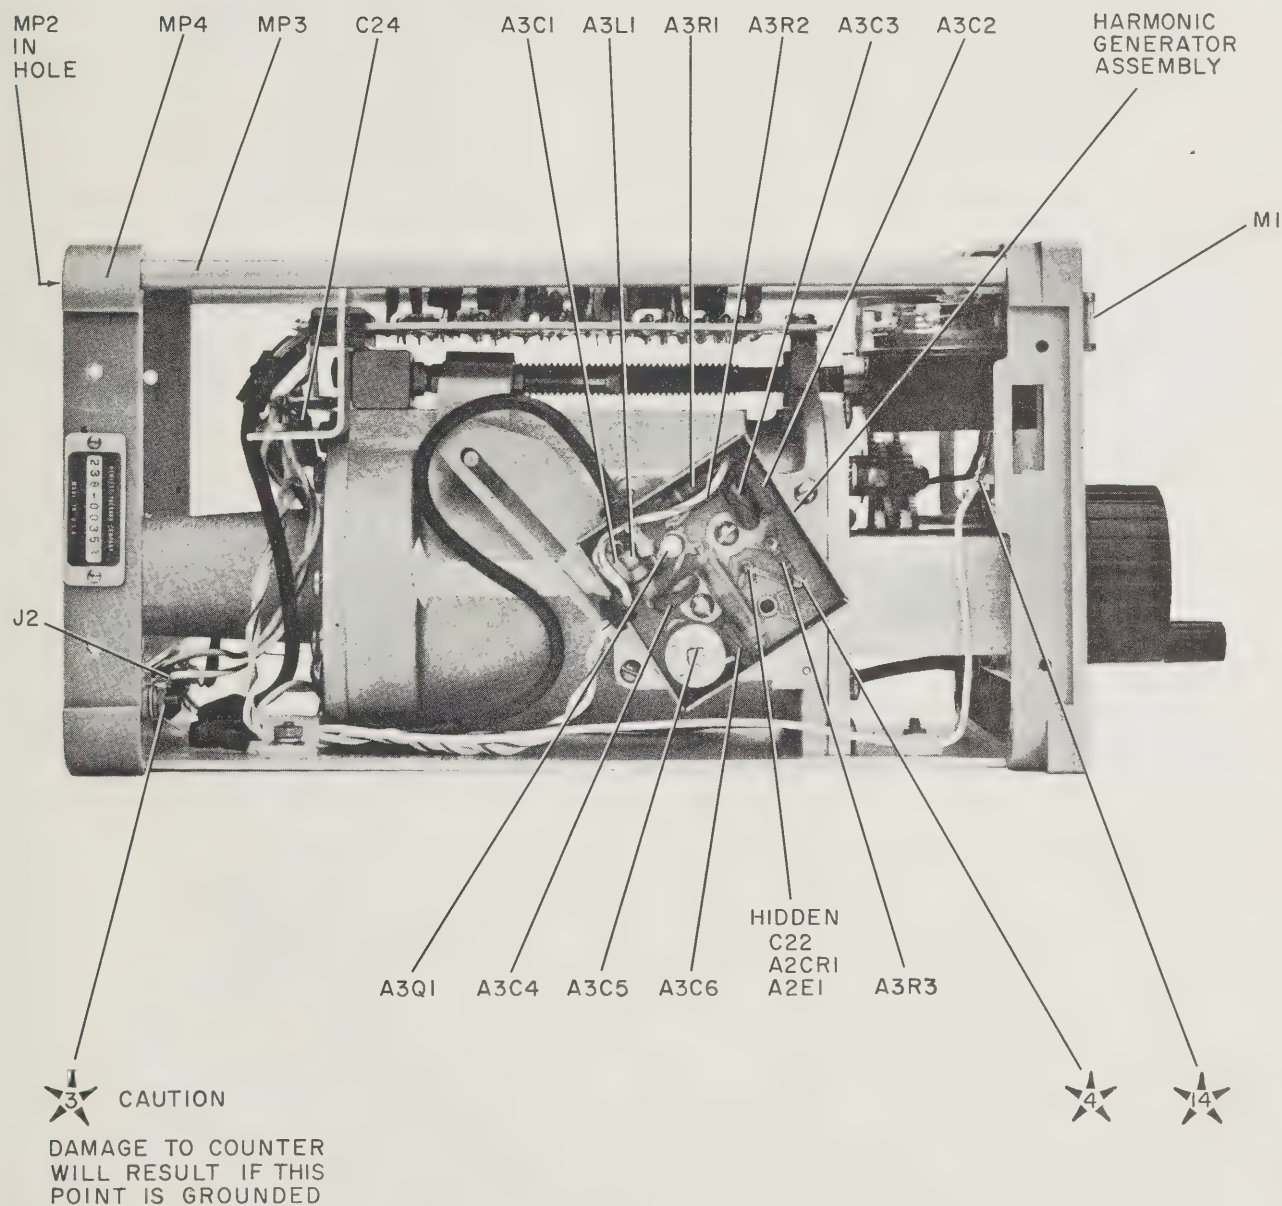


Figure IIA-5. Left Side View

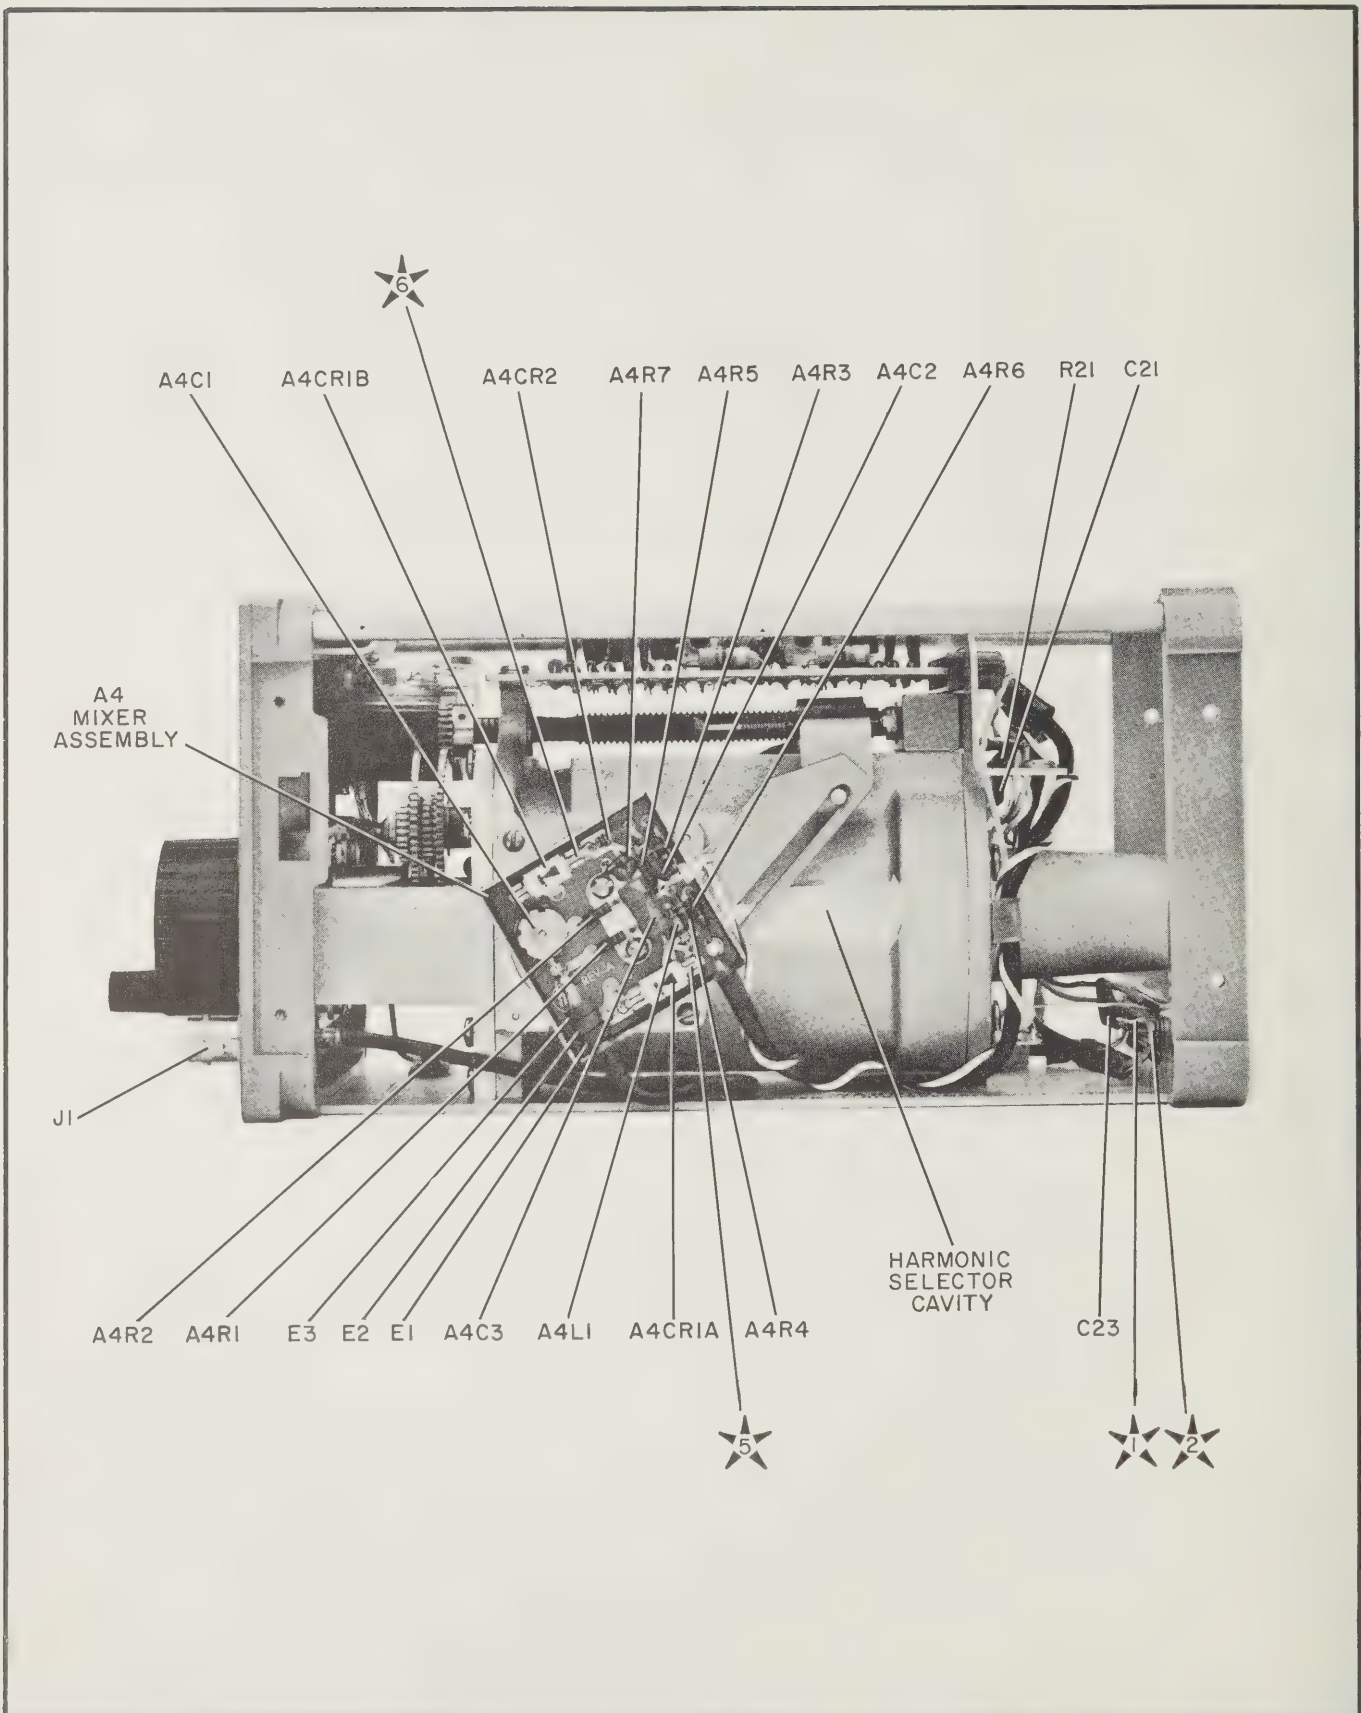


Figure IIA-6. Right Side View

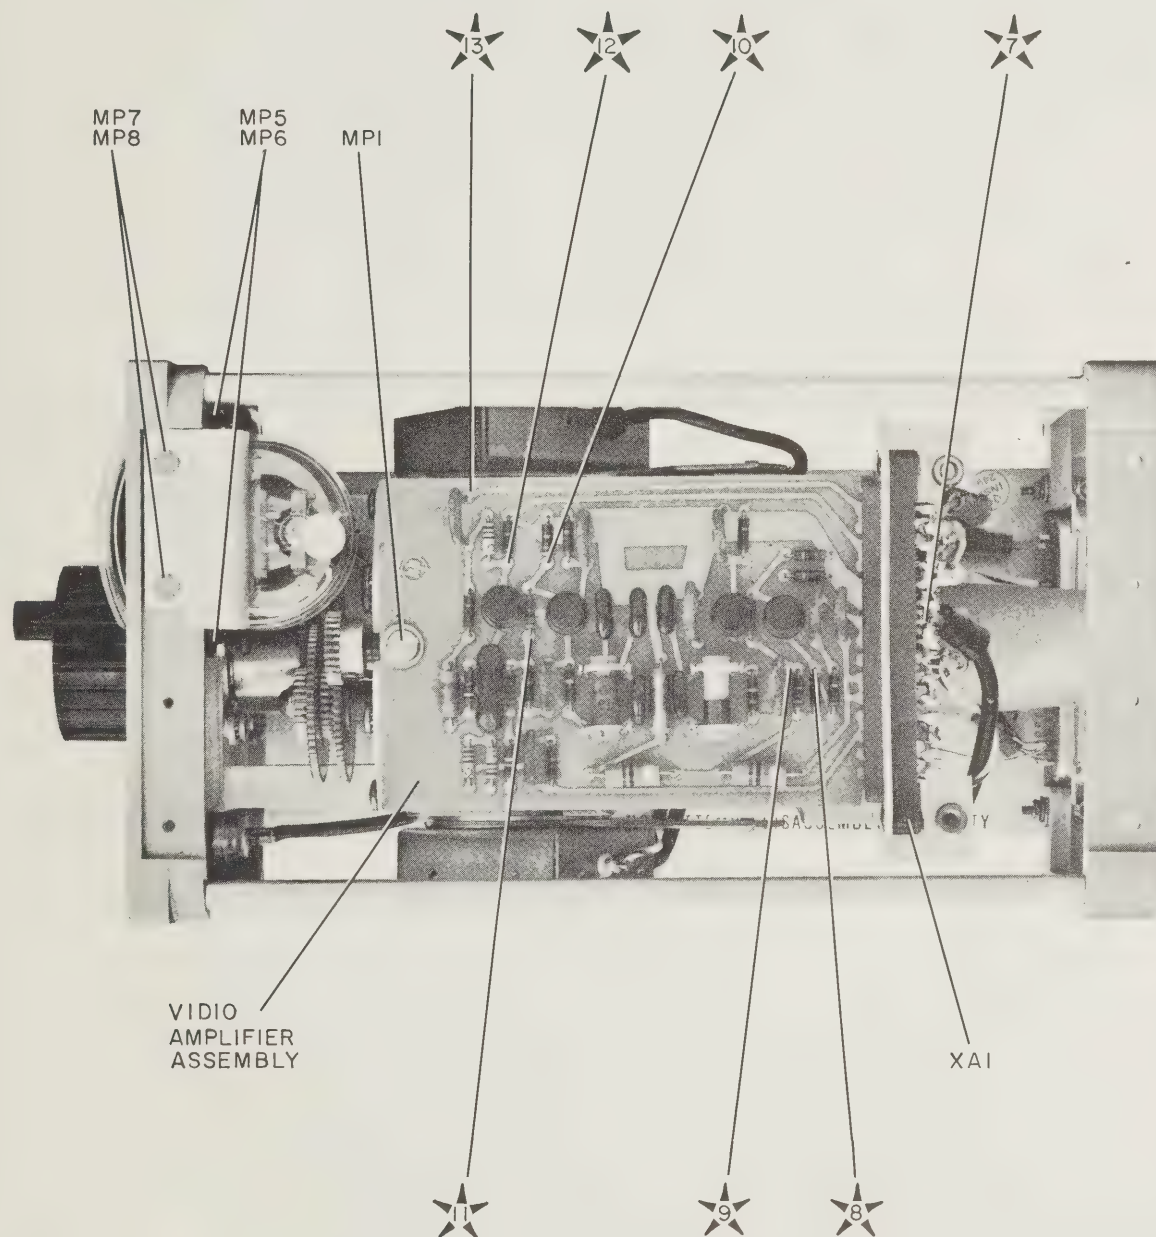


Figure IIA-7. Top View - Test Points

Table IIA-2. Troubleshooting Procedure

All voltages given are approximate and may vary from instrument to instrument because of variations in component characteristics.

TEST EQUIPMENT: \textcircled{P} Model 411A RF Millivoltmeter with \textcircled{P} 11022A (formerly 411A-21B) Pen Type Probe Tip,
 \textcircled{P} Model 412A DC VTVM

REMOVE \textcircled{P} 5253A FROM COUNTER; SELF-CHECK COUNTER	See counter manual for self-check procedure.
CONNECT \textcircled{P} 5253A TO COUNTER WITH EXTENSION CABLE, \textcircled{P} 10506A (formerly AC-16Y)	Extension cable available from \textcircled{P} ; see parts list.
★1 +20 VDC	Checks power supplied to plug-in from counter; see counter manual for power supply adjustment procedure.
★2 -15 VDC	
★3 + 6 VDC 2 VAC	Checks 10-Mc drive of harmonic generator.
★4 + 2 VDC - 2 VAC	Checks generator diode drive. Voltages vary widely because of both the detuning effect of volt-meter probe and the variable value of A3R3. DC voltage may be either + or -, depending upon factory determined generator diode orientation.
★5 +100 MV DC	Voltages vary widely because of diode characteristics. Voltages are 0 VDC when diode shorted, and +20 VDC when diode open. Voltages should be approximately equal because of matched characteristics.
★6 +100 MV DC	

CONNECT SIGNAL GENERATOR TO \textcircled{P} 5253A.
 SET GENERATOR TO 102 MC, CW, 100 MV.
 SET COUNTER CONTROLS AND 5253A TO
 MEASURE FREQUENCY OF INPUT SIGNAL.

★7 5 MV RMS	This voltage is total harmonic energy output of mixer and varies widely.
★8 -6 VDC 15 MV RMS	Checks bias and amplification of A1Q1
★9 -10 VDC 200 MV RMS	Checks bias and amplification of A1Q2
★10 -4 VDC 15 MV RMS	General check of low pass filter section
★11 -9 VDC 500 MV RMS	Checks bias and amplification of A1Q3
★12 -8.5 VDC 300 MV RMS	Checks operation of A1Q4
★13 0 VDC 200 MV RMS	Checks operation of limiter, A1CR1
★14 0 MV DC WHEN METER READS AT LEFT END OF SCALE; 50 MV DC WHEN METER READS FULL SCALE; 15 MV DC WHEN TEST POINT #13 IS 100 MV RMS, AND METER READS AT RED-GREEN BORDER.	Checks accuracy of meter circuit in relation to output to counter

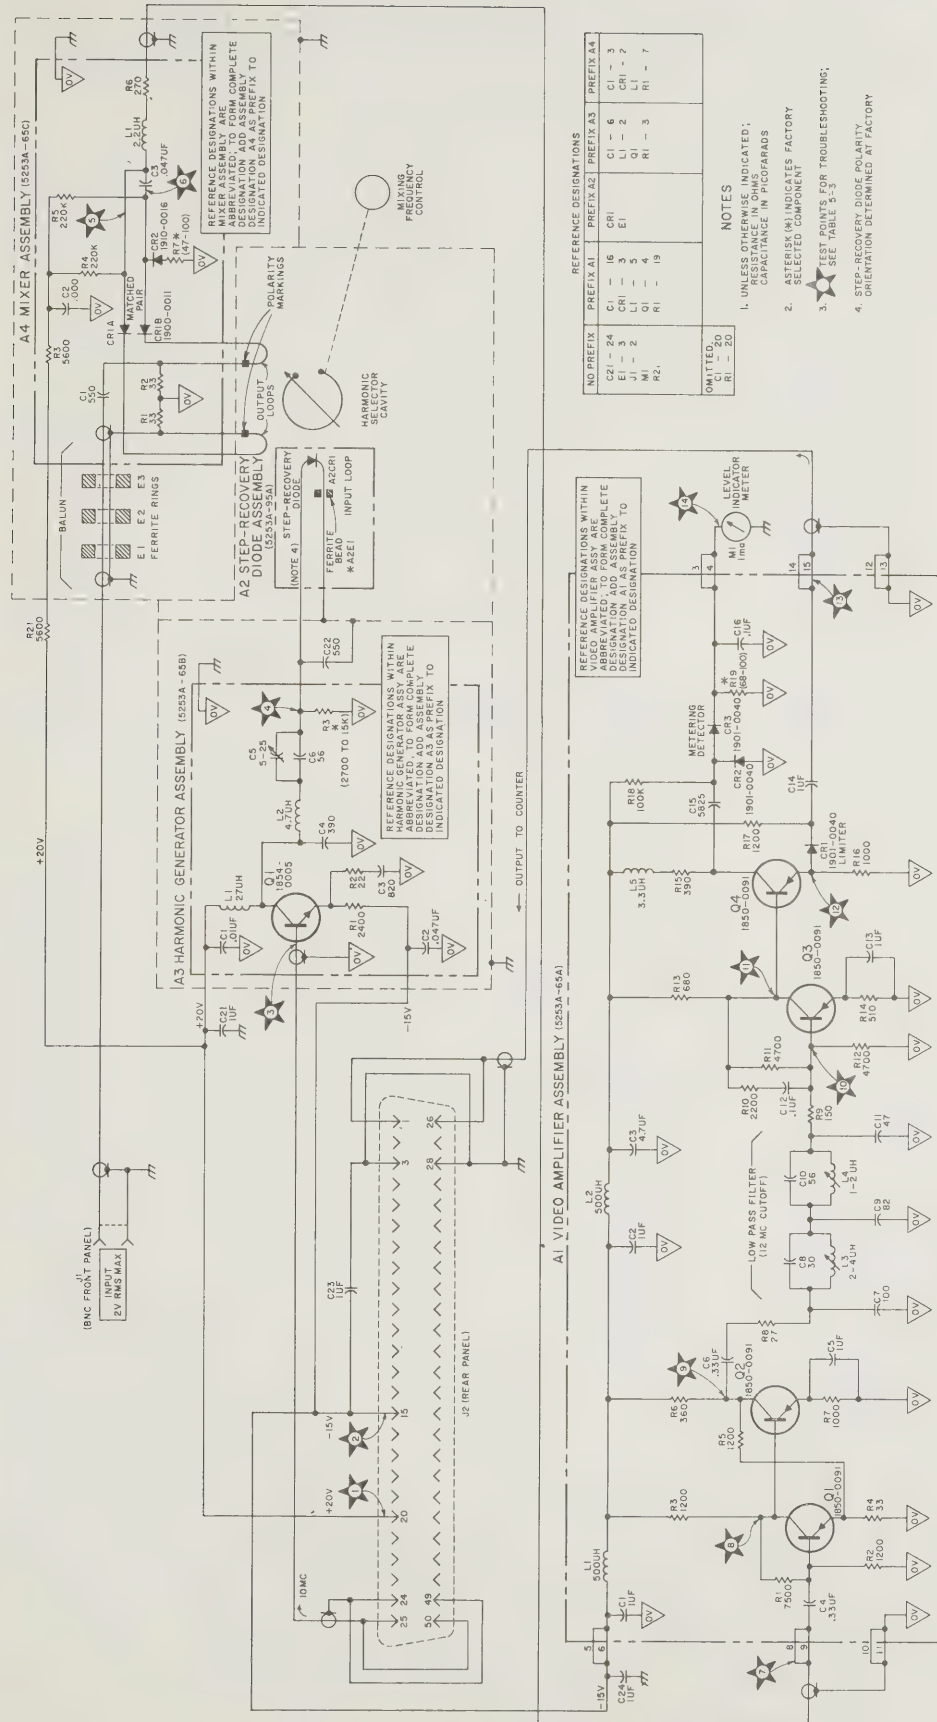


Figure IIA-8. Schematic Diagram

Table IIA-3. Reference Designation Index

Reference Designation	Stock No.	Description #	Note
A1	5253A-65A	ASSY:VIDEO AMPLIFIER	
A1C1	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C2	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C3	0180-0100	C:FXD ELECT TA 4.7 UF 10% 35VDCW	
A1C4	0160-0137	C:FXD CER 0.33 UF 20% 25VDCW	
A1C5	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C6	0160-0137	C:FXD CER 0.33 UF 20% 25VDCW	
A1C7	0140-0176	C:FXD MICA 100 PF 2% 300VDCW	
A1C8	0140-0203	C:FXD MICA 30 PF 5% 500VDCW	
A1C9	0140-0193	C:FXD MICA 82 PF 5% 300VDCW	
A1C10	0140-0191	C:FXD MICA 56 PF 5% 300VDCW	
A1C11	0140-0204	C:FXD MICA 47 PF 5% NPO 500VDCW	
A1C12	0150-0121	C:FXD CER 0.1 UF +80-20% 50VDCW	
A1C13	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C14	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C15	0140-0189	C:FXD MICA 5825 PF 2% 300VDCW	
A1C16	0150-0121	C:FXD CER 0.1 UF +80-20% 50VDCW	
A1CR1	1901-0040	DIODE:SILICON	
A1CR2	1901-0040	DIODE:SILICON	
A1CR3	1901-0040	DIODE:SILICON	
A1L1	9140-0118	COIL:500MH 5%	
A1L2	9140-0118	COIL:500 MH 5%	
A1L3	9140-0126	COIL:VAR 1.76-4.02 UH	
A1L4	9140-0125	COIL:VAR 0.9-1.9 UH	
A1L5	9140-0111	COIL:FXD RF 3.3 UH	
A1Q1	1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	
A1Q2	1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	
A1Q3	1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	
A1Q4	1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	
A1R1	0683-7525	R:FXD COMP 7500 OHM 5% 1/4W	
A1R2	0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	
A1R3	0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	
A1R4	0683-3305	R:FXD COMP 33 OHM 5% 1/4W	
A1R5	0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	
A1R6	0683-3615	R:FXD COMP 360 OHM 5% 1/4W	
A1R7	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R8	0684-2701	R:FXD COMP 27 OHM 10% 1/4W	
A1R9	0684-1511	R:FXD COMP 150 OHM 10% 1/4W	
A1R10	0683-2225	R:FXD COMP 2.2K OHM 5% 1/4W	
A1R11	0683-4725	R:FXD COMP 4700 OHM 5% 1/4W	
A1R12	0683-4725	R:FXD COMP 4700 OHM 5% 1/4W	
A1R13	0683-6815	R:FXD COMP 680 OHM 5% 1/4W	
A1R14	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R15	0683-3915	R:FXD COMP 390 OHM 5% 1/4W	
A1R16	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R17	0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	
A1R18	0684-1041	R:FXD COMP 100K OHM 10% 1/4W	
A1R19	0683-8205	R:FXD COMP 82 OHM 5% 1/4W	
		FACTORY SELECTED PART;TYPICAL VALUE GIVEN	

See list of abbreviations in introduction to this section

Table IIA-3. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
A2	5253A-95A	ASSY:STEP RECOVERY DIODE NOT RECOMMENDED FOR FIELD REPLACEMENT	
A2CR1	1901-0120	DIODE:STEP RECOVERY,SPECIALLY SELECTED PART.	
A2E1		CORE:TOROID,SPECIALLY SELECTED PART.	
A3	5253A-65B	ASSY:HARMONIC GENERATOR	
A3C1	0150-0093	C:FXD CER 0.01 UF +80-20% 100VDCW	
A3C2	0170-0094	C:FXD MY 0.047 UF 20% 50VDCW	
A3C3	0140-0151	C:FXD MYCA 820 PF 2% 300VDCW	
A3C4	0140-0200	C:FXD MICA 390 PF 5% 300VDCW	
A3C5	0130-0016	C:VAR CER 5-25 PF NPO	
A3C6	0140-0191	C:FXD MICA 56 PF 5% 300VDCW	
A3L1	9140-0107	COIL:FXD RF 27 UH	
A3L2	9140-0025	COIL:FXD RF 4.7 UH	
A3R1	0686-2425	R:FXD COMP 2400 OHM 5% 1/2W	
A3R2	0683-2205	R:FXD COMP 22 OHM 5% 1/4W	
A3R3	0683-5625	R:FXD COMP 5600 OHM 5% 1/4W FACTORY SELECTED PART;TYPICAL VALUE GIVEN	
A4	5253A-65C	ASSY:MIXER DOES NOT CONTAIN A4CR1, ORDER SEPARATELY	
A4C1	0140-0069	C:FXD MICA 550 PF 10% 500VDCW	
A4C2	0150-0050	C:FXD CER 1000 PF 600VDCW	
A4C3	0170-0040	C:FXD MY 0.047 UF 10% 200VDCW	
A4CR1	1900-0011	DIODE:SILICON 1N4168M, MATCHED PAIR	
A4CR2	1910-0016	DIODE:GERMANIUM 1 MICROSEC 60 WIV	
A4L1	9140-0142	COIL:FXD RF 2.2 UH	
A4R1	0683-3305	R:FXD COMP 33 OHM 5% 1/4W	
A4R2	0683-3305	R:FXD COMP 33 OHM 5% 1/4W	
A4R3	0684-5621	R:FXD COMP 5.6K OHM 10% 1/4W	
A4R4	0683-2245	R:FXD COMP 220K OHM 5% 1/4W	
A4R5	0683-2245	R:FXD COMP 220K OHM 5% 1/4W	
A4R6	0683-2715	R:FXD COMP 270 OHM 5% 1/4W	
A4R7	0683-6205	R:FXD COMP 62 OHM 5% 1/4W FACTORY SELECTED APRT;TYPICAL VALUE GIVEN	
C21	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
C22	0140-0069	C:FXD MICA 550 PF 10% 500VDCW	
C23	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
C24	0160-0227	C:FXD CER 1.0 UF 20% 25VDCW	
E1	9170-0059	CORE:TOROID	
E2	9170-0059	CORE:TOROID	
E3	9170-0059	CORE:TOROID	
J1	1250-0102	CONNECTOR:BNC	
J2	1251-0099	CONNECTOR:50-PIN MINIATURE	
R21	0684-5621	R:FXD COMP 5600 OHM 10% 1/4W	
XA1	1251-0135	CONNECTOR:15 CONTACTS	

See list of abbreviations in introduction to this section

Table IIA-4. Replaceable Parts

Stock No.	Description #	Mfr.	Mfr. Part No.	TQ
5253A-65A	ASSY:VIDEO AMPLIFIER	28480	5253A-65A	1
5253A-65B	ASSY:HARMONIC GENERATOR	28480	5253A-65B	1
5253A-65C	ASSY:MIXER	28480	5253A-65C	1
5253A-95A	ASSY:STEP RECOVERY DIODE	28480	5253A-95A	1
0130-0016	C:VAR CER 5-25 PF NPO	28480	0130-0016	1
0140-0069	C:FXD MICA 550 PF 10% 500VDCW	00853	TYPE M100 E10	2
0140-0151	C:FXD MICA 820 PF 2% 300VDCW	04062	DM15F 821G	1
0140-0176	C:FXD MICA 100 PF 2% 300VDCW	04062	DM15F 101G 300V	1
0140-0189	C:FXD MICA 5825 PF 2% 300VDCW	04062	DM20F 5825G	1
0140-0191	C:FXD MICA 56 PF 5% 300VDCW	04062	DM15E 560J 300V	2
0140-0193	C:FXD MICA 82 PF 5% 300VDCW	04062	DM15E 820J 300V	1
0140-0200	C:FXD MICA 390 PF 5% 300VDCW	04062	DM15F 391J 300V	1
0140-0203	C:FXD MICA 30 PF 5% 500VDCW	04062	DM15E 300J 500V	1
0140-0204	C:FXD MICA 47 PF 5% NPO 500VDCW	04062	DM15E 470J	1
0150-0050	C:FXD CER 1000 PF 600VDCW	18486	TYPE E	1
0150-0093	C:FXD CER 0.01 UF +80-20% 100VDCW	91418	TA	1
0150-0121	C:FXD CER 0.1 UF +80-20% 50VDCW	56289	5C50A	2
0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13	8
0160-0137	C:FXD CER 0.33 UF 20% 25VDCW	56289	5C10	2
0170-0040	C:FXD MY 0.047 UF 10% 200VDCW	56289	192P47392	1
0170-0094	C:FXD MY 0.047 UF 20% 50VDCW	84411	TYPE 602	1
0180-0100	C:FXD ELECT TA 4.7 UF 10% 35VDCW	56289	150D475X9035B2	1
0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	01121	CB 1025	2
0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	01121	CB 1225	4
0683-2205	R:FXD COMP 22 OHM 5% 1/4W	01121	CB 2205	1
0683-2225	R:FXD COMP 2.2K OHM 5% 1/4W	01121	CB 2225	1
0683-2245	R:FXD COMP 220K OHM 5% 1/4W	01121	CB 2245	2
0683-2715	R:FXD COMP 270 OHM 5% 1/4W	01121	CB 2715	1
0683-3305	R:FXD COMP 33 OHM 5% 1/4W	01121	CB 3305	3
0683-3615	R:FXD COMP 360 OHM 5% 1/4W	01121	CB 3615	1
0683-3915	R:FXD COMP 390 OHM 5% 1/4W	01121	CB 3915	1
0683-4725	R:FXD COMP 4700 OHM 5% 1/4W	01121	CB 4725	2
0683-5115	R:FXD COMP 510 OHM 5% 1/4W	01121	CB 5115	1
0683-5625	R:FXD COMP 5600 OHM 5% 1/4W	01121	CB 5625	1
0683-6205	R:FXD COMP 62 OHM 5% 1/4W	01121	CB 6205	1
0683-6815	R:FXD COMP 680 OHM 5% 1/4W	01121	CB 6815	1
0683-7525	R:FXD COMP 7500 OHM 5% 1/4W	01121	CB 7525	1
0683-8205	R:FXD COMP 82 OHM 5% 1/4W	01121	CB 8205	1
0684-1041	R:FXD COMP 100K OHM 10% 1/4W	01121	CB 1041	1
0684-1511	R:FXD COMP 150 OHM 10% 1/4W	01121	CB 1511	1
0684-2701	R:FXD COMP 27 OHM 10% 1/4W	01121	CB 2701	1
0684-5621	R:FXD COMP 5600 OHM 10% 1/4W	01121	CB 5621	2
0686-2425	R:FXD COMP 2400 OHM 5% 1/2W	01121	EB 2425	1
1250-0102	CONNECTOR:BNC	91737	1250-0102	1
1251-0099	CONNECTOR:50-PIN MINIATURE	02660	57-10500	1
1251-0135	CONNECTOR:15-CONTACTS	95354	SD 615UR	1
1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	87216	2N2048	4
1900-0011	DIODE:SILICON 1N4168M MATCHED PAIR	93332	1N4168M	1
1901-0040	DIODE:SILICON	28480	1901-0040	3
1910-0016	DIODE:GERMANIUM 1 MICROSEC 60 WIV	28480	1910-0016	1
9140-0025	COIL:FXD RF 4.7 UH	28480	9140-0025	1
9140-0107	COIL:FXD RF 27 UH	28480	9140-0107	1
9140-0111	COIL:FXD RF 3.3 UH	28480	9140-0111	1
9140-0118	COIL:500 MH 5%	99800	2500-14	2
9140-0125	COIL:VAR 0.9-1.9 UH	28480	9140-0125	1
9140-0126	COIL:VAR 1.76-4.02 UH	28480	9140-0126	1
9140-0142	COIL:FXD RF 2.2 UH	28480	9140-0142	1
9170-0059	CORE:TOROID	02114	396T125-102	3

See list of abbreviations in introduction to this section

HEWLETT·PACKARD

ELECTRONIC INSTRUMENTATION SALES AND SERVICE

UNITED STATES, CENTRAL AND SOUTH AMERICA, CANADA

UNITED STATES

ALABAMA
P.O. Box 4207
2003 Byrd Spring Road S.W.
Huntsville 35802
Tel: (205) 881-4591
TWX: 810-726-2204

ARIZONA
3009 North Scottsdale Road
Scottsdale 85251
Tel: (602) 945-7601
TWX: 910-950-1282

232 South Tucson Boulevard
Tucson 85716
Tel: (602) 623-2564
TWX: 910-952-1162

CALIFORNIA
3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2170

1101 Embarcadero Road
Palo Alto 94303
Tel: (415) 327-6500
TWX: 910-373-1280

2591 Carlsbad Avenue
San Diego 92106
Tel: (619) 482-1463
TWX: 910-367-2092

1055 Shafter Street
San Diego 92108
Tel: (714) 223-8103
TWX: 910-335-2000

COLORADO
7965 East Prentice
Englewood 80110
Tel: (303) 771-3455
TWX: 910-935-0705

CONNECTICUT
508 Tollard Street
East Hartford 06108
Tel: (203) 289-9394
TWX: 710-425-3416

111 East Avenue
Norwalk 06851
Tel: (203) 853-1251
TWX: 710-468-3750

DELAWARE
3941 Kennett Pike
Wilmington 19807
Tel: (302) 655-6161
TWX: 510-666-2214

FLORIDA
P.O. Box 545
Suite 106
9999 N.E. 2nd Avenue
Miami Shores 33153
Tel: (305) 758-3626
TWX: 810-848-7262

P.O. Box 20007
Herndon Station 32814
621 Commonwealth Avenue
Orlando
Tel: (305) 841-3970
TWX: 810-850-0113

P.O. Box 8128
Madeira Beach 33708
410 150th Avenue
St. Petersburg
Tel: (813) 391-0211
TWX: 810-863-0366

GEORGIA
P.O. Box 28234
450 Interstate North
Atlanta 30328
Tel: (404) 436-6181
TWX: 810-766-4890

ILLINOIS
5500 Howard Street
Skokie 60076
Tel: (312) 677-0400
TWX: 910-223-3613

INDIANA
4002 Meadows Drive
Indianapolis 46205
Tel: (317) 546-4891
TWX: 810-341-3263

LOUISIANA
P.O. Box 856
1942 Williams Boulevard
Kenner 70062
Tel: (504) 721-6201
TWX: 810-955-5524

MARYLAND
6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
TWX: 710-862-0850

P.O. Box 1648
2 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX: 710-828-9684

MASSACHUSETTS
32 Hartwell Ave.
Lexington 02173
Tel: (301) 948-6370
TWX: 710-332-0382

MICHIGAN
24315 Northwestern Highway
Southfield 48075
Tel: (313) 353-9100
TWX: 810-232-1532

MINNESOTA
2459 University Avenue
St. Paul 55114
Tel: (612) 845-9461
TWX: 910-563-3734

MISSOURI
9208 Wyoming Place
Kansas City 64114
Tel: (816) 333-2445
TWX: 910-771-2087

2812 South Brentwood Blvd.
St. Louis 63144
Tel: (314) 644-0220
TWX: 910-760-1670

NEW JERSEY
W. 120 Century Road
Paramus 07652
Tel: (201) 265-5000
TWX: 910-990-4951

10508 N. Kings Highway
Cherry Hill 08034
Tel: (609) 667-4000
TWX: 710-892-4945

NEW MEXICO
P.O. Box 8366
Station C
6501 Lomas Boulevard N.E.
Albuquerque 87108
Tel: (505) 255-5586
TWX: 910-989-1665

156 Wyatt Drive
Las Cruces 88001
Tel: (505) 526-2485
TWX: 910-983-0550

NEW YORK
1702 Central Avenue
Albany 12205
Tel: (518) 869-8462
TWX: 710-441-8270

1219 Campville Road
Endicott 13764
Tel: (607) 754-0050
TWX: 510-252-0890

82 Washington Street
Poughkeepsie 12601
Tel: (914) 454-7300
TWX: 510-248-0012

39 Saginaw Drive
Rochester 14623
Tel: (716) 473-9500
TWX: 510-253-5981

1025 Northern Boulevard
Roslyn, Long Island 11576
Tel: (516) 869-8400
TWX: 510-223-0811

5858 East Molloy Road
Syracuse 13211
Tel: (315) 454-2486
TWX: 710-541-0482

NORTH CAROLINA
P.O. Box 5187
1923 North Main Street
High Point 27262
Tel: (819) 882-6873
TWX: 510-926-1516

OHIO
5579 Pearl Road
Cleveland 44129
Tel: (216) 884-9209
TWX: 810-421-8500

3460 South Dixie Drive
Dayton 45439
Tel: (513) 298-0351
TWX: 810-459-1925

OKLAHOMA
2919 United Founder Boulevard
Oklahoma City 73112
Tel: (405) 848-2801
TWX: 910-830-6862

OREGON
Westhills Mall, Suite 158
4475 S.W. Scholls Ferry Road
Portland 97225
Tel: (503) 292-9171
TWX: 910-464-6103

PENNSYLVANIA
2500 Moss Side Boulevard
Monroeville 15146
Tel: (412) 271-0724
TWX: 710-797-3650

144 Elizabeth Street
West Conshohocken 19428
Tel: (215) 248-1600, 828-6200
TWX: 510-660-8715

TEXAS
P.O. Box 1270
201 E. Arapaho Rd.
Richardson 75080
Tel: (214) 231-1601
TWX: 910-867-4723

P.O. Box 5187
1923 North Main Street
Houston 77027
Tel: (713) 667-2407
TWX: 910-881-2645

GOVERNMENT CONTRACT OFFICE
225 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-4171
TWX: 810-871-1170

UTAH
2890 South Main Street
Salt Lake City 84115
Tel: (801) 486-8166
TWX: 910-925-5681

VIRGINIA
P.O. Box 6514
2111 Spencer Road
Richmond 23230
Tel: (703) 282-5451
TWX: 910-956-0157

WASHINGTON
433-108th N.E.
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2303

FOR U.S. AREAS NOT LISTED:
Contact the regional office nearest you: Atlanta, Georgia... North Hollywood, California... Paramus, New Jersey... Skokie, Illinois. Their complete addresses are listed above.

CENTRAL AND SOUTH AMERICA

ARGENTINA
Hewlett-Packard Argentina
S.A.C.e.I.
Lavalle 1171 - 3
Buenos Aires
Tel: 35-0436, 35-0627, 35-0431
Telex: 012-1009

BRAZIL
Hewlett-Packard Do Brasil
I.e.C. Ltda.
Rua Coronel Oscar Porto, 691
Sao Paulo 8, SP
Tel: 71-1503
Cable: HEWPAK Sao Paulo

Hewlett-Packard Do Brasil
I.e.C. Ltda.
Avenida Franklin Roosevelt 84-
grupo 203
Rio de Janeiro, ZC-39, GB
Tel: 32-9733
Cable: HEWPAK Rio de Janeiro

CHILE
Hector Calcagni P.
Casilla 13942
Estado 215 - Oficina 1016
Santiago
Tel: 31-890, 490-505
Cable: HORVATH Quito

COLOMBIA
Instrumentacion
Henrik A. Langebaek & Cia. Ltda.
Carrera 7 - 48-59
Apartado Aereo 6287
Bogota, I.D.E.
Tel: 45-78-06, 45-55-46
Cable: AARIS Bogota

COSTA RICA
Lic. Alfredo Gallegos Gudián
Apartado 3243
San José
Tel: 21-86-13
Cable: GALGUR San José

ECUADOR
Laboratorios de Radio-Ingenieria
Calle Guayaquil 1246
Post Office Box 3199
Quito
Tel: 12496
Cable: HORVATH Quito

EL SALVADOR
Electronica
Apartado Postal 1589
27 Avenida Norte 1133
San Salvador
Tel: 25-74-50
Cable: ELECTRONICA
San Salvador

GUATEMALA
Olander Associates Latin America
Apartado 1226
7a. Calle, 0-22, Zona 1
Guatemala City
Tel: 22812
Cable: OLALA Guatemala City

MEXICO
Hewlett-Packard Mexicana, S.A.
de C.V.
Apartado Postal 12-832
Eugenia 408, Dept. 1
Mexico 12, D.F.
Tel: 43-03-79, 36-08-78

NICARAGUA
Roberto Terán G.
Apartado Postal 689
Edificio Terán
Managua
Tel: 3451, 3452
Cable: ROTERAN Managua

PANAMA
Electronica Balboa, S.A.
P.O. Box 4929
Ave. Manuel Espinosa No. 13-50
Bldg. Alina
Panama City
Tel: 30833
Cable: ELECTRON Panama City

PERU
Fernando Ereta B.
Avenida Petit Thouars 4719
Miraflores
Casilla 3061
Lima
Tel: 50346
Cable: FEPERU Lima

PUERTO RICO
San Juan Electronics, Inc.
P.O. Box 5167
Ponce de Leon 154
Pda. 3-Pta. de Tierra
San Juan, P.R. 00906
Tel: (174) 725-3342
Cable: SATRONICS San Juan

URUGUAY
Pablo Ferrando S.A.
Comercial e Industrial
Avenida Italia 2877
Casilla de Correo 370
Montevideo
Tel: 40-3102
Cable: RADIUM Montevideo

VENEZUELA
Hewlett-Packard De Venezuela
C.A.
Edificio Arisán Office No. 6
Avda. Francisco de Miranda
Apartado del Este 10934
Chacaito
Caracas
Tel: 71.88.05, 71.88.69, 71.88.76
Cable: HEWPAK Caracas

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard Inter-Américas
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 326-7000
TWX: 910-373-1267
Cable: HEWPAK Palo Alto
Telex: 034-8461

CANADA

ALBERTA
Hewlett-Packard (Canada) Ltd.
11745 Jasper Ave.
Edmonton
Tel: (403) 482-5561
TWX: 610-831-2431

BRITISH COLUMBIA
Hewlett-Packard (Canada) Ltd.
304-1037 West Broadway
Vancouver 9
Tel: (604) 738-5301
TWX: 610-922-5059

MANITOBA
Hewlett-Packard Co. Ltd.
511 Bradford Ct.
St. James
Winnipeg
Tel: (204) 786-7581

NOVA SCOTIA
Hewlett-Packard (Canada) Ltd.
7001 Mumford Road
Suite 356
Halifax
Tel: (902) 455-0511
TWX: 610-271-4482

ONTARIO
Hewlett-Packard (Canada) Ltd.
880 Lady Ellen Place
Ottawa 3
Tel: (613) 722-4223
TWX: 610-562-1952

Hewlett-Packard (Canada) Ltd.
1415 Lawrence Avenue West
Toronto
Tel: (416) 249-9196
TWX: 610-492-2382

QUEBEC
Hewlett-Packard (Canada) Ltd.
275 Hymus Boulevard
Pointe Claire
Tel: (514) 697-4232
TWX: 610-422-3022
Telex: 01-20607

FOR CANADIAN AREAS NOT LISTED:
Contact Hewlett-Packard (Canada) Ltd. in Pointe Claire, at the complete address listed above.

HEWLETT · PACKARD

ELECTRONIC INSTRUMENTATION SALES AND SERVICE

EUROPE, AFRICA, ASIA, AUSTRALIA

EUROPE

AUSTRIA
Unilabor GmbH
Wissenschaftliche Instrumente
Rummelhardtgasse 6/3
P.O. Box 33
Vienna 1X/71
Tel: 42 61 81
Cable: LABORINSTRUMENT
Vienna

BELGIUM
Hewlett-Packard Benelux S.A.
348 Boulevard du Souverain
Brussels 16
Tel: 72 22 40
Cable: PALOBEN Brussels
Telex: 23 494

DENMARK
Hewlett-Packard A/S
Egerang
Langebjerg 6
2850 Naerum
Tel: 01 80 40 40
Cable: HEWPAK AS
Telex: 66 40

FINLAND
Hewlett-Packard Oy
Gyldenintie 3
Helsinki 20
Tel: 67 35 38
Cable: HEWPAK OY-Helsinki
Telex: 12-1563

FRANCE
Hewlett-Packard France
150 Boulevard Massena
75 Paris 13e
Tel: 707 97 19
Cable: HEWPAK Paris
Telex: 25048

Hewlett-Packard France
4 Quai des Etoiles
69 Lyon 5e
Tel: 42-63-45

GERMANY
Hewlett-Packard Vertriebs-GmbH
Lietzenburger Strasse 30
1 Berlin W 30
Tel: 24 86 36
Telex: 18 34 05

Hewlett-Packard Vertriebs-GmbH
Herrenberger Strasse 110
703 Böblingen, Württemberg
Tel: 07031-6671
Cable: HEPAK Böblingen
Telex: 72 65 739

Hewlett-Packard Vertriebs-GmbH
Achenbachstrasse 15
4 Düsseldorf 1
Tel: 68 52 58/59
Telex: 85 86 533

Hewlett-Packard Vertriebs-GmbH
Kurfürstenstrasse 95
6 Frankfurt 50
Tel: 52 00 36
Cable: HEWPAKSA Frankfurt
Telex: 41 32 49

Hewlett-Packard Vertriebs-GmbH
Beim Strohhaus 26
2 Hamburg 1
Tel: 24 05 51/52
Cable: HEWPAKSA Hamburg
Telex: 21 53 32

Hewlett-Packard Vertriebs-GmbH
Reginfriedstrasse 13
8 Munich 9
Tel: 69 51 21/22
Cable: HEWPAKSA Munich
Telex: 52 49 85

GREECE
Kostos Karayannis
18, Ermou Street
Athens 126
Tel: 230 301
Cable: RAKAR Athens
Telex: 5962

IRELAND
Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks, England
Tel: Slough 33341
Cable: HEWPIE Slough
Telex: 84413

ITALY
Hewlett-Packard Italiana S.p.A.
Viale Lunigiana 46
20125 Milan
Tel: 69 15 84
Cable: HEWPAKIT Milan
Telex: 32046

Hewlett-Packard Italiana S.p.A.
Palazzo Italia
Piazza Marconi 25
00144 Rome - Eur
Tel: 591 2544
Cable: HEWPAKIT Rome
Telex: 61514

NETHERLANDS
Hewlett-Packard Benelux, N.V.
de Boelelaan 1043
Amsterdam, Z.2
Tel: 42 77 77
Cable: PALOBEN Amsterdam
Telex: 13 216

NORWAY
Hewlett-Packard Norge A/S
Nesveien 13
Haslum
Tel: 53 83 60
Cable: HEWPAK Oslo
Telex: 6621

PORTUGAL
Telectra
Rua Rodrigo da Fonseca 103
P.O. Box 2531
Lisbon 1
Tel: 68 60 72
Cable: TELECTRA Lisbon
Telex: 1598

SPAIN
Ataio Ingenieros
Urgel, 259
Barcelona, 11
Tel: 230-69-88
Ataio Ingenieros
Enrique Larreta 12
Madrid, 16
Tel: 235 43 44
Cable: TELEATAIO Madrid
Telex: 2 72 49

SWEDEN
HP Instrument AB
Hagakergatan 7
Molndal
Tel: 031 - 27 68 00
HP Instrument AB
Svetsarvägen 7
Solna 1
Tel: 98 12 50
Cable: MEASUREMENTS
Stockholm
Telex: 10721

SWITZERLAND
HEWPAK AG
Zürcherstrasse 20
8952 Schlieren
Zürich
Tel: (051) 98 18 21
Cable: HEWPAKAG Zurich
Telex: 53933

HEWPAK A.G.
54 Route des Acacias
1211 Geneva 24
Tel: 43 79 29
Telex: 2 24 86

TURKEY
Telekom Engineering Bureau
P.O. Box 376 - Galata
Istanbul
Tel: 49 40 40
Cable: TELEMATION Istanbul

UNITED KINGDOM
Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks
Tel: Slough 33341
Cable: HEWPIE Slough
Telex: 84413

YUGOSLAVIA
Belram S.A.
83 avenue des Mimosas
Brussels 15, Belgium
Tel: 34 33 32, 34 26 19
Cable: BELRAMEL Brussels
Telex: 21790

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard S.A.
54 Route des Acacias
1211 Geneva, Switzerland
Tel: (022) 42 81 50
Cable: HEWPAKSA Geneva
Telex: 2.24.86

AFRICA, ASIA, AUSTRALIA

ANGOLA
Telectra
Box 6487
Luanda
Cable: TELECTRA Luanda

AUSTRALIA
Hewlett-Packard Australia
Pty. Ltd.
22-26 Weir Street
Glen Iris, 3146
Victoria
Tel: 20.1371 (4 lines)
Cable: HEWPAK Melbourne
Telex: 31024

Hewlett-Packard Australia
Pty. Ltd.
61 Alexander Street
Crows Nest 2065
New South Wales
Tel: 43 7866
Cable: HEWPAK Sydney
Hewlett-Packard Australia
Pty. Ltd.
97 Churchhill Road
Prospect 5082
South Australia
Tel: 65 2366
Cable: HEWPAK Adelaide

CEYLON
United Electricals Ltd
P.O. Box 681
Yahala Building
Staples Street
Colombo 2
Tel: 5496
Cable: HOTPOINT Colombo

CYPRUS
Kypricos
19-19D Hommer Avenue
P.O. Box 752
Nicosia
Tel: 6282-75628
Cable: HE-I-NAMI

ETHIOPIA
African Salespower & Agency
Private Ltd., Co.
P.O. Box 718
58/59 Cunningham St
Addis Ababa
Tel: 12285
Cable: ASACO Addisababa

HONG KONG
Schmidt & Co. (Hong Kong) Ltd
P.O. Box 297
1511, Prince's Building
10, Chater Road
Hong Kong
Tel: 240168, 232735
Cable: SCHMIDTCO Hong Kong

INDIA
The Scientific Instrument
Co., Ltd.
6, Tej Bahadur Sapru Road
Allahabad 1
Tel: 2451
Cable: SICO Allahabad

The Scientific Instrument
Co., Ltd.
240, Dr. Dadabhai Naoroji Road
Bombay 1
Tel: 26-2642
Cable: SICO Bombay
The Scientific Instrument
Co., Ltd.
11, Esplanade East
Calcutta 1
Tel: 23-4129
Cable: SICO Calcutta

The Scientific Instrument Co., Ltd.
30, Mount Road
Madras 2
Tel: 86339
Cable: SICO Madras

The Scientific Instrument Co., Ltd.
B-7, Almeri Gate Extn.
New Delhi 1
Tel: 27-1053
Cable: SICO New Delhi

IRAN
Telecom, Ltd.
P.O. Box 1812
240 Kh. Saba Shomali
Teheran
Tel: 43850, 48111
Cable: BASCOM Teheran

ISRAEL
Electronics & Engineering
Div. of Motorola Israel Ltd.
16, Kremenskiy Street
Tel-Aviv
Tel: 35021 (4 lines)
Cable: BASTEL Tel-Aviv
Telex: Bastei Tv 033-569

JAPAN
Yokogawa-Hewlett-Packard Ltd.
Nisei Ibaragi Bldg.
2-2-8 Kasuga
Ibaragi-Shi
Osaka
Tel: 0726-23-1641

Yokogawa-Hewlett-Packard Ltd.
Ito Building
No. 59, Kotori-cho
Nakamura-ku, Nagoya City
Tel: 551-0215
Yokogawa-Hewlett-Packard Ltd
Ohashi Building
No. 59, I-chome, Yoyogi
Shibuya-ku, Tokyo
Tel: 370-2281
Telex: YHPMARKET TOK 23-724

KENYA
R. J. Tilbury Ltd.
P.O. Box 2754
Suite 517/518
Hotel Ambassadeur
Nairobi
Tel: 25670, 26803, 68206, 58196
Cable: ARJAYTEE Nairobi

KOREA
American Trading Co., Korea, Ltd
P.O. Box 1103
Dae Kyung Bldg
170 Sejong Ro
Chongro Ku
Seoul
Tel: 75-5841
Cable: AMTRACO Seoul

LEBANON
Constantin E. Macridis
Clemenceau Street
Clemenceau Center
Beirut
Tel: 220846
Cable: ELECTRONUCLEAR Beirut

MALAYSIA
MECOMB Malaysia Ltd.
2 Lorong 13/6A
Section 13
Petaling Jaya, Selangor
Cable: MECOMB Kuala Lumpur

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
32-34 Kent Terrace
P.O. Box 9443
Wellington, N.Z.
Tel: 56-409
Cable: HEWPAK Wellington

PAKISTAN (EAST)
Mushko & Company, Ltd.
31, Jinnah Avenue
Dacca
Tel: 80058
Cable: NEWDEAL Dacca

PAKISTAN (WEST)
Mushko & Company, Ltd.
Doshman Chambers
Victoria Road
Karachi 3
Tel: 51027, 52927
Cable: COOPERATOR Karachi

SINGAPORE
Mechanical and Combustion
Engineering Company Ltd.
9, Jalan Kilang
Singapore, 3
Tel: 642361-3
Cable: MECOMB Singapore

SOUTH AFRICA
F. H. Flanier & Co. (Pty.), Ltd.
Hill House
43 Somerset Rd.
Cape Town
Tel: 2-9711
Cable: AUTOPHONE Cape Town
Telex: 7038CT

F. H. Flanier & Co. (Pty.), Ltd.
607 Pharmacy House
80 Jorissen Street
Braamfontein, Johannesburg
Tel: 724-4172
Telex: 0026 JHB

TAIWAN
Hwa Sheng Electronic Co., Ltd.
P.O. Box 1558
21 Nanking West Road
Taipei
Tel: 46076, 45936, 48661
Cable: VICTRONIX Taipei

TANZANIA
R. J. Tilbury Ltd
P.O. Box 2754
Suite 517/518
Hotel Ambassadeur
Nairobi
Tel: 25670, 26803, 68206, 58196
Cable: ARJAYTEE Nairobi

THAILAND
The International
Engineering Co., Ltd.
P.O. Box 39
614 Sukhumvit Road
Bangkok
Tel: 910722
Cable: GYSOM Bangkok

UGANDA
R. J. Tilbury Ltd.
P.O. Box 2754
Suite 517/518
Hotel Ambassadeur
Nairobi
Tel: 25670, 26803, 68206, 58196
Cable: ARJAYTEE Nairobi

VIETNAM
Landis Brothers and Company,
Inc.
P.O. Box H-3
216 Hien-Vuong
Saigon
Tel: 20.805
Cable: LANBROCOMP Saigon

ZAMBIA
R. J. Tilbury (Zambia) Ltd.
P.O. Box 2792
Lusaka
Zambia, Central Africa

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard Export
Marketing
3208 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 326-7000
TWX: 910-373-1267
Cable: HEWPAK Palo Alto
Telex: 034-8461

HEWLETT·PACKARD

ELECTRONIC INSTRUMENTATION SALES AND SERVICE

EUROPE, AFRICA, ASIA, AUSTRALIA

EUROPE

AUSTRIA

Unilabor GmbH
Wissenschaftliche Instrumente
Rummelhardtgasse 6/3
P.O. Box 33
Vienna 1X/71
Tel: 42 61 81
Cable: LABORINSTRUMENT
Vienna

BELGIUM

Hewlett-Packard Benelux S.A.
348 Boulevard du Souverain
Brussels 16
Tel: 72 22 40
Cable: PALOBEN Brussels
Telex: 23 494

DENMARK

Hewlett-Packard A/S
Egerang
Langebjerg 6
2850 Naerum
Tel: 01 80 40 40
Cable: HEWPACK AS
Telex: 66 40

FINLAND

Hewlett-Packard Oy
Gydenintie 3
Helsinki 20
Tel: 67 35 38
Cable: HEWPACKOY-Helsinki
Telex: 12-1563

FRANCE

Hewlett-Packard France
150 Boulevard Massena
75 Paris 13e
Tel: 707 97 19
Cable: HEWPACK Paris
Telex: 25048

Hewlett-Packard France
4 Quai des Etoiles
69 Lyon 5e
Tel: 42-63-45

GERMANY

Hewlett-Packard Vertriebs-GmbH
Lietzenburger Strasse 30
1 Berlin W 30
Tel: 24 86 36
Telex: 18 34 05

Hewlett-Packard Vertriebs-GmbH
Herrenberger Strasse 110
703 Balingen, Württemberg
Tel: 07031-6671
Cable: HEPAG Balingen
Telex: 72 65 739

Hewlett-Packard Vertriebs-GmbH
Achenbachstrasse 15
4 Düsseldorf 1
Tel: 68 52 58/59
Telex: 85 86 533

Hewlett-Packard Vertriebs-GmbH
Kurfürstenstrasse 95
6 Frankfurt 50
Tel: 52 00 36
Cable: HEWPACKSA Frankfurt
Telex: 41 32 49

Hewlett-Packard Vertriebs-GmbH

Beim Strohhaus 26
2 Hamburg 1
Tel: 24 05 51/52
Cable: HEWPACKSA Hamburg
Telex: 21 53 32

Hewlett-Packard Vertriebs-GmbH
Reginfriedstrasse 13
8 Munich 9
Tel: 69 51 21/22
Cable: HEWPACKSA Munich
Telex: 52 49 85

GREECE

Kostas Karayannis
18, Ermou Street
Athens 126
Tel: 230 301
Cable: RAKAR Athens
Telex: 5962

IRELAND

Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks, England
Cable: HEWPIE Slough
Telex: 84413

ITALY

Hewlett-Packard Italiana S.p.A.
Viale Lungiana 46
20125 Milan
Tel: 69 15 84
Cable: HEWPACKIT Milan
Telex: 32046

Hewlett-Packard Italiana S.p.A.

Palazzo Italia
Piazza Marconi 25
00144 Rome - Eur
Tel: 591 2544
Cable: HEWPACKIT Rome
Telex: 61514

NETHERLANDS

Hewlett-Packard Benelux, N.V.
de Boelelaan 1043
Amsterdam, Z.Z.
Tel: 42 77 77
Cable: PALOBEN Amsterdam
Telex: 13 216

NORWAY

Hewlett-Packard Norge A/S
Nesveien 13
Haslum
Tel: 53 83 60
Cable: HEWPACK Oslo
Telex: 6621

PORTUGAL

Telectra
Rua Rodrigo da Fonseca 103
P.O. Box 2531
Lisbon 1
Tel: 68 60 72
Cable: TELETRA Lisbon
Telex: 1598

SPAIN

Ataio Ingenieros
Urgel, 259
Barcelona, 11
Tel: 230-69-88
Ataio Ingenieros
Enrique Larreta 12
Madrid, 16
Tel: 235 43 44
Cable: TELEATAIO Madrid
Telex: 2 72 49

SWEDEN

HP Instrument AB
Hagakersgatan 7
Mölnådal
Tel: 031 - 27 68 00
HP Instrument AB
Svetsarvägen 7
Solna 1
Tel: 98 12 50
Cable: MEASUREMENTS
Stockholm
Telex: 10721

SWITZERLAND

HEWPAK AG
Zürcherstrasse 20
8952 Schlieren
Zurich
Tel: (051) 98 18 21
Cable: HEWPACKAG Zurich
Telex: 53933

HEWPAK A.G.

54 Route des Acacias
1211 Geneva 24
Tel: 43 79 29
Telex: 2 24 86

TURKEY

Telekom Engineering Bureau
P.O. Box 376 - Galata
Istanbul
Tel: 49 40 40
Cable: TELEMTION Istanbul

UNITED KINGDOM

Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks
Tel: Slough 33341
Cable: HEWPIE Slough
Telex: 84413

YUGOSLAVIA

Belram S.A.
83 avenue des Mimosas
Brussels 15, Belgium
Tel: 34 33 32, 34 26 19
Cable: BELRAMEL Brussels
Telex: 21790

FOR AREAS NOT LISTED,

CONTACT:
Hewlett-Packard S.A.
54 Route des Acacias
1211 Geneva, Switzerland
Tel: (022) 42 81 50
Cable: HEWPACKSA Geneva
Telex: 2.24.86

AFRICA, ASIA, AUSTRALIA

ANGOLA

Telectra
Box 6487
Luanda
Cable: TELETRA Luanda

AUSTRALIA

Hewlett-Packard Australia
Pty. Ltd.
22-26 Weir Street
Glen Iris, 3146
Victoria
Tel: 20,1371 (4 lines)
Cable: HEWPAUD Melbourne
Telex: 31024

Hewlett-Packard Australia

Pty. Ltd.
61 Alexander Street
Crows Nest 2065
New South Wales
Tel: 43,7865
Cable: HEWPAUD Sydney

Hewlett-Packard Australia

Pty. Ltd.
97 Churchill Road
Prospect 5082
South Australia
Tel: 65,2366
Cable: HEWPAUD Adelaide

CEYLON

United Electricals Ltd.
P.O. Box 681
Yahala Building
Staples Street
Colombo 2
Tel: 5496
Cable: HOTPOINT Colombo

CYPRUS

Kytronics
19-19D Hommer Avenue
P.O. Box 752
Nicosia
Tel: 6282-75628
Cable: HE-I-NAMI

ETHIOPIA

African Salespower & Agency
Private Ltd., Co.
P.O. Box 718
58/59 Cunningham St.
Addis Ababa
Tel: 12285
Cable: ASACO Addisababa

HONG KONG

Schmidt & Co. (Hong Kong) Ltd.
P.O. Box 297
1511, Prince's Building
10, Chater Road
Hong Kong
Tel: 240168, 232735
Cable: SCHMIDTCO Hong Kong

INDIA

The Scientific Instrument
Co., Ltd.
6, Tej Bahadur Sapru Road
Allahabad 1
Tel: 2451
Cable: SICO Allahbad

The Scientific Instrument
Co., Ltd.
240, Dr. Dadabhai Naoroji Road
Bombay 1
Tel: 26-2642
Cable: SICO Bombay

The Scientific Instrument
Co., Ltd.
11, Esplanade East
Calcutta 1
Tel: 23,4129
Cable: SICO Calcutta

The Scientific Instrument Co., Ltd.
30, Mount Road
Madras 2
Tel: 86339
Cable: SICO Madras

The Scientific Instrument Co., Ltd.
B-7, Ajmeri Gate Extn.
New Delhi 1
Tel: 27-1053
Cable: SICO New Delhi

IRAN

Telecom, Ltd.
P.O. Box 1812
240 Kh. Saba Shomali
Teheran
Tel: 43850, 48111
Cable: BASCOM Teheran

ISRAEL

Electronics & Engineering
Div. of Motorola Israel Ltd.
16, Kremenetski Street
Tel-Aviv
Tel: 35021 (4 lines)
Cable: BASTEI Tel-Aviv
Telex: Bastei Tv 033-569

JAPAN

Yokogawa-Hewlett-Packard Ltd.
Nisei Ibaragi Bldg.
2-2-8 Kasuga
Ibaragi-Shi
Osaka
Tel: 0726-23-1641

Yokogawa-Hewlett-Packard Ltd.
Ito Building
No. 59, Kotori-cho
Nakamura-ku, Nagoya City
Tel: 551-0215

Yokogawa-Hewlett-Packard Ltd.
Onashi Building
No. 59, I-chome, Yoyogi
Shibuya-ku, Tokyo
Tel: 370-2281
Telex: YHPMARKET TOK 23-724

KENYA

R. J. Tilbury Ltd.
P.O. Box 2754
Suite 517/518
Hotel Ambassador
Nairobi
Tel: 25670, 26803, 68206, 58196
Cable: ARJAYTEE Nairobi

KOREA

American Trading Co., Korea, Ltd
P.O. Box 1103
Dae Kyung Bldg.
170 Sejong Ro
Chongro Ku
Seoul
Tel: 75-5841
Cable: AMTRACO Seoul

LEBANON

Constantin E. Macridis
Clemenceau Street
Clemenceau Center
Beirut
Tel: 220846
Cable: ELECTRONUCLEAR Beirut

MALAYSIA

MECOMB Malaysia Ltd.
2 Lorong 13/6A
Section 13
Petaling Jaya, Selangor
Cable: MECOMB Kuala Lumpur

NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.
32-34 Kent Terrace
P.O. Box 9443
Wellington, N.Z.
Tel: 56-409
Cable: HEWPACK Wellington

PAKISTAN (EAST)

Mushko & Company, Ltd.
31, Jinnah Avenue
Dacca
Tel: 80058
Cable: NEWDEAL Dacca

PAKISTAN (WEST)

Mushko & Company, Ltd.
Oosman Chambers
Victoria Road
Karachi 3
Tel: 51027, 52927
Cable: COOPERATOR Karachi

SINGAPORE

Mechanical and Combustion
Engineering Company Ltd.
9, Jalan Kilang
Singapore, 3
Tel: 642361-3
Cable: MECOMB Singapore

SOUTH AFRICA

F. H. Flanter & Co. (Pty.), Ltd.
Hill House
43 Somerset Rd.
Cape Town
Tel: 2-9711
Cable: AUTOPHONE Cape Town
Telex: 7038CT

F. H. Flanter & Co. (Pty.), Ltd.

607 Pharmacy House
80 Jorissen Street
Braamfontein, Johannesburg
Tel: 724-4172
Telex: 0026 JHB

TAIWAN

Hwa Sheng Electronic Co., Ltd.
P.O. Box 1558
21 Nanking West Road
Taipei
Tel: 46076, 45936, 48661
Cable: VICTRONIX Taipei

 
TANZANIA

R. J. Tilbury Ltd
P.O. Box 2754
Suite 517/518
Hotel Ambassador
Nairobi
Tel: 25670, 26803, 68206, 58196
Cable: ARJAYTEE Nairobi



5253B FREQUENCY CONVERTER

OPERATING AND SERVICE MANUAL



HEWLETT  PACKARD



CERTIFICATION

The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.

WARRANTY AND ASSISTANCE

All Hewlett-Packard products are warranted against defects in materials and workmanship. This warranty applies for one year from the date of delivery, or, in the case of certain major components listed in the operating manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period. No other warranty is expressed or implied. We are not liable for consequential damages.


For any assistance contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.



OPERATING AND SERVICE MANUAL

MODEL 5253B FREQUENCY CONVERTER

SERIALS PREFIXED: 716-

This manual applies directly to  Model 5253B Frequency Converters having serial number prefix 716-.

OLDER INSTRUMENTS

This manual with changes provided in Appendix I also applies to models having serial prefix numbers 513, 450, 321, and 311.

MODEL 5253A

This manual with information provided in Appendix II also applies to Model 5253A Frequency Converters having serial prefix numbers 238 and 226.

Copyright HEWLETT-PACKARD COMPANY 1963
1501 PAGE MILL ROAD, PALO ALTO, CALIFORNIA, U.S.A.

TABLE OF CONTENTS

Section	Page	Section	Page
I GENERAL	1-1	V MAINTENANCE (cont'd)	
1-1. Description	1-1	5-10. Repair and Replacement	5-1
1-5. Specifications	1-1	5-12. Printed Circuit Component	
1-7. Accessory	1-1	Replacement	5-3
1-9. Instrument Identification	1-1	5-14. Video Amplifier Assembly	
1-11. Cooling	1-1	Replacement	5-3
II PREPARATION FOR USE	2-1	5-16. Mixer Diode Replacement	5-3
2-1. Unpacking and Mechanical Inspection	2-1	5-18. Meter Replacement Procedure	5-3
2-3. Electrical Inspection	2-1	5-20. Harmonic Generator Adjustment	5-4
2-5. Storage and Reshipment	2-1	5-22. Low Pass Filter Adjustment	5-4
2-8. Installation	2-1	5-25. Mechanical Adjustment of Meter	
2-11. Power Requirements	2-1	Zero	5-5
2-13. Electrical Connections	2-1	5-28. Sensitivity Check	5-5
III OPERATION	3-1	5-29. Meter Accuracy Check	5-5
3-1. Front Panel	3-1	5-30. Low Pass Filter Check	5-5
3-3. Maximum Input Voltages	3-1	5-31. In-Cabinet Performance Check	5-6
3-5. Operating Procedures	3-1	VI REPLACEABLE PARTS	6-1
3-6. Normal Range Measurements	3-1	6-1. Introduction	6-1
3-8. Extended Range Measurements	3-1	6-4. Ordering Information	6-1
3-12. Double-Checking Frequency		APPENDIX I - Manual Changes	IA-1
Measurement Result	3-1	APPENDIX II - Model 5253A	IIA-1
3-14. Aid to Rapid Tuning	3-3	IIA-1. Introduction	IIA-1
IV PRINCIPLES OF OPERATION	4-1	IIA-3. Description	IIA-1
4-1. General	4-1	IIA-7. Operating Procedure	IIA-1
4-5. Harmonic Generator (A2, A3), and		IIA-8. Normal Range Measurements	IIA-1
Harmonic Selector Cavity	4-1	IIA-10. Extended Range Measurements	IIA-1
4-7. Mixer (A4)	4-2	IIA-14. Video Amplifier Assembly (A1)	IIA-3
4-9. Video Amplifier Assembly (A1)	4-2	IIA-16. Level Indicator Meter	IIA-3
4-11. Level Indicator Meter	4-2	IIA-18. Harmonic Generator Adjustment	IIA-3
V MAINTENANCE	5-1	IIA-20. Low Pass Filter Adjustment	IIA-3
5-1. General	5-1	IIA-22. Meter Adjustment	IIA-3
5-2. Introduction	5-1	IIA-23. Mechanical Adjustment of	
5-4. Periodic Maintenance	5-1	Meter Zero	IIA-5
5-6. Test Equipment	5-1	IIA-26. Sensitivity Check	IIA-5
5-8. Troubleshooting	5-1	IIA-27. Meter Accuracy Check	IIA-5
		IIA-28. Low Pass Filter Check	IIA-5
		IIA-29. In-Cabinet Performance Check	IIA-6

LIST OF ILLUSTRATIONS

Figure	Page	Figure	Page
1-1. Model 5253B	1-0	5-4. Top View - Test Points	5-9
3-1. Front Panel	3-0	5-5. Schematic Diagram	5-9
3-2. Frequency Measurement Procedure	3-2	6-1. Mechanical Parts Location - 5253B	6-2
3-3. Typical Frequency Measurements	3-3	6-2. Mechanical Parts Location - 5253B	6-3
4-1. Block Diagram	4-0	APPENDIX	
4-2. Harmonic Generator (A2, A3)	4-0	IA-1. Schematic Diagram	IA-2
4-3. Harmonic Selector Cavity	4-1	IIA-1. Frequency Measurement Procedure	IIA-2
4-4. Balanced Mixer (A4)	4-2	IIA-2. Video Amplifier (A6)	IIA-4
4-5. Video Amplifier (A1)	4-3	IIA-3. Level Indicator Meter Circuit	IIA-4
4-6. Level Indicator Meter Circuit	4-3	IIA-4. Top View	IIA-6
5-1. A1 Video Amplifier Component Location	5-6	IIA-5. Left Side View	IIA-7
5-2. Left Side View	5-7	IIA-6. Right Side View	IIA-8
5-3. Right Side View	5-8	IIA-7. Top View - Test Points	IIA-9
		IIA-8. Schematic Diagram	IIA-11

LIST OF TABLES

Table	Page	Table	Page
1-1. Specifications	1-1	6-2. Replaceable Parts	6-7
3-1. Frequency Resolution	3-1	APPENDIX	
5-1. Recommended Test Equipment	5-1	IA-1. Reference Designation Index	IA-3
5-2. Resistance Troubleshooting Aid	5-1	IIA-1. Specifications	IIA-1
5-3. Troubleshooting Procedure	5-2	IIA-2. Troubleshooting Procedure	IIA-10
5-4. Adjustments after Repair	5-4	IIA-3. Reference Designation Index	IIA-12
6-1. Reference Designation Index	6-4	IIA-4. Replaceable Parts	IIA-14



Figure 1-1. Model 5253B and Accessory

SECTION I

GENERAL

1-1. DESCRIPTION.

1-2. The Hewlett-Packard Model 5253B Frequency Converter is a plug-in unit which converts a Hewlett-Packard Model 5245L or 5246L Electronic Counter into a direct reading counter from 50 to 512 Mc.

1-3. The stability and accuracy of the basic counter are retained by multiplying a 10-Mc signal, derived from the 1-Mc internal time base of the counter, to a selectable harmonic frequency between 50 and 500 Mc. This known harmonic of 10 Mc is then heterodyned with the INPUT signal. If the resulting difference frequency is between 100 kc and 12 Mc (bandwidth of amplifier in plug-in), it is counted and displayed by the counter. The frequency of the INPUT signal is then indicated by the combination of the MIXING FREQUENCY control (in megacycles; front panel of plug-in) and the digital display of the counter (in megacycles).

1-4. A front panel meter, by monitoring the difference-frequency output of the plug-in to the counter, aids in selecting the desired MIXING FREQUENCY and also in determining if INPUT signal amplitude is adequate for accurate frequency measurement.

1-5. SPECIFICATIONS.

1-6. Table 1-1 contains all technical specifications for the Model 5253B when operated in the Model 5245L

or Model 5246L Electronic Counter. Test specifications given in the Maintenance Section (Section V) of this manual, for the purposes of troubleshooting and adjustment, do not represent the technical specifications of the instrument.

1-7. ACCESSORY.

1-8. A 50-ohm coaxial cable, 48 inches long, male BNC to male BNC, is furnished with the Model 5253B.

1-9. INSTRUMENT IDENTIFICATION.

1-10. Hewlett-Packard identifies each Model 5253B with a two-section, eight-digit serial number. If the first three digits of the serial number of your instrument do not agree with those on the title page of this manual, change sheets supplied with the manual will define the differences between your instrument and the Model 5253B described in this manual.

1-11. COOLING.

1-12. The Model 5253B is cooled by the ventilation system of the counter in which it is installed. See operating and service manual of counter for cooling system maintenance instructions.

Table 1-1. Specifications*

RANGE: As converter for 5245L or 5246L counter, 50 Mc to 512 Mc, using mixing frequencies of 50 Mc to 500 Mc in 10 Mc steps.

ACCURACY: Retains accuracy of 5245L or 5246L counter

INPUT VOLTAGE RANGE: 50 mv to 1 v RMS

MAXIMUM INPUT: 2 v RMS or 100 vdc will not damage the instrument

INPUT IMPEDANCE: Approximately 50 ohms

LEVEL INDICATOR: Meter aids frequency selection; indicates output voltage level to counter

REGISTRATION: Counter display is added to the converter dial reading

WEIGHT: Net 5-1/2 lbs, shipping 9 lbs

ACCESSORY FURNISHED: ϕ 10503A (AC-16K) Cable, 4 feet long, male BNC connectors

*When installed in Hewlett-Packard Model 5245L or Model 5246L Electronic Counter.

SECTION II

PREPARATION FOR USE

2-1. UNPACKING AND INSPECTION.

2-2. If the shipping carton is damaged, ask that the carrier's agent be present when the instrument is unpacked. Inspect the instrument for damage (scratches, dents, broken knobs, etc). If the instrument is damaged or fails to meet specifications, notify the carrier and the nearest Hewlett-Packard field office immediately (field offices are listed at the back of this manual). Retain the shipping carton and the padding material for the carrier's inspection. The field office will arrange for the repair or replacement of your instrument without waiting for the claim against the carrier to be settled.

2-3. ELECTRICAL INSPECTION.

2-4. The performance check procedure (Paragraph 5-31) may be used to verify proper electrical operation as part of an incoming quality control inspection.

2-5. STORAGE AND RESHIPMENT.

2-6. **PACKAGING.** To protect valuable electronic equipment during storage or reshipment, always use the best packaging methods available. Your Hewlett-Packard field engineer can provide packing materials similar to those used for original factory packaging. Here are two recommended packing methods:

a. **Original.** Place instrument in original container. Replace each packing pad and filler in the exact position that it originally occupied.

b. **Alternate.** Cover panel with soft wrapping paper. Wrap corrugated cardboard completely around instrument and place in strong corrugated cardboard container (350 lb/sq in. bursting test). Insert filler material between wrapped instrument and container to obtain a snug fit on all surfaces. Filler should be rubberized hair (2 in. thick), excelsior (6 in. thick), or equivalent.

2-7. **ENVIRONMENT.** Conditions during storage and shipment should normally be limited as follows:

a. Maximum altitude 20,000 feet (6,096 meters).

b. Minimum temperature -40°F (-40°C).

c. Maximum temperature 167°F (75°C).

CAUTION

TURN COUNTER POWER OFF BEFORE
INSTALLING OR REMOVING FREQUENCY
CONVERTER.

2-8. INSTALLATION.

2-9. The Model 5253B plugs into the rectangular compartment at the right-hand side of the front panel of the Model 5243L or 5245L Electronic Counter. To install unit in counter, first check that retaining screw (see Figure 3-1) is turned fully counterclockwise, then push unit firmly into compartment until front panel of plug-in is flush with front panel of counter. Then turn retaining screw clockwise until it is tight.


2-10. To remove unit from counter, turn retaining screw counterclockwise to its stop. Then grasp mixing frequency selector (see Figure 3-1) and firmly pull unit from counter. If any difficulty is encountered with installation or removal, check that retaining screw is fully counterclockwise.

2-11. POWER REQUIREMENTS.

2-12. All electrical power required to operate the Model 5253B is supplied by the counter in which the unit is installed.

2-13. ELECTRICAL CONNECTIONS.

2-14. **INPUT** connector on front panel of plug-in (see Figure 3-1) is the only external electrical connection to the unit. All other connections are made through the 50-pin connector at the rear of plug-in when installed in counter.

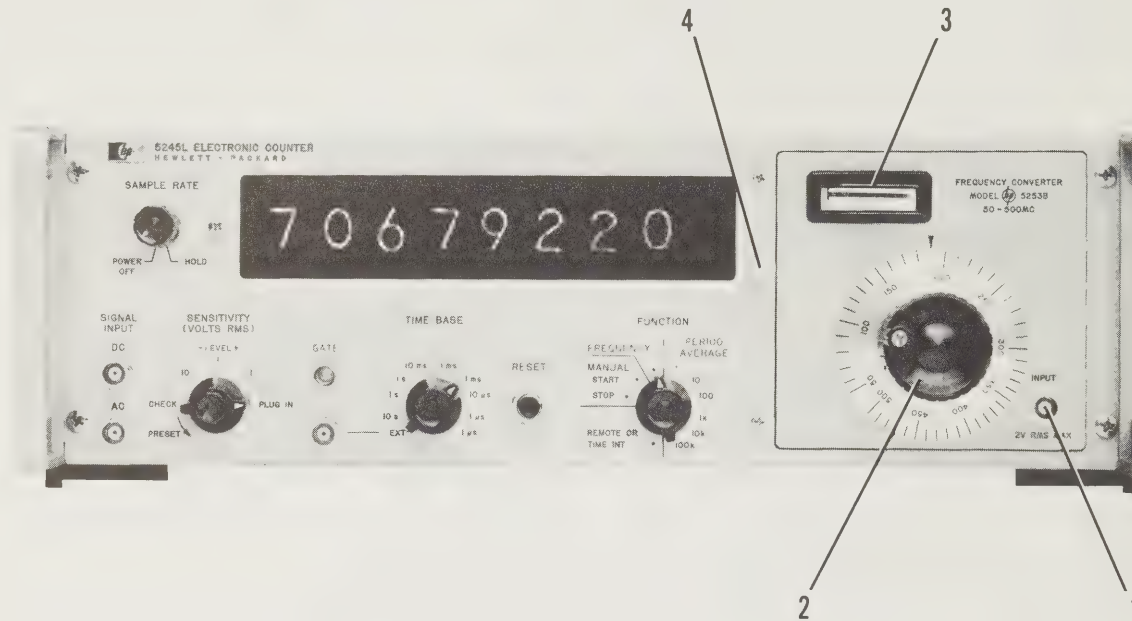

1. INPUT signal connector.
2. MIXING FREQUENCY SELECTOR. Calibrated in mc, this control tunes the internal cavity to select a harmonic of 10 mc to be heterodyned with the INPUT signal.
3. LEVEL INDICATOR METER. The meter circuit continuously monitors the level of the

difference-frequency output of converter to counter. When meter reads in the green portion of its scale, INPUT signal amplitude is adequate for accurate frequency measurement.

4. RETAINING SCREW. The screw which holds the converter in place is located on the front panel of the counter. To tighten, turn fully clockwise. To loosen, turn fully counter-clockwise.

Figure 3-1. Front Panel

SECTION III

OPERATION

3-1. FRONT PANEL.

3-2. The functions of the front panel control, meter, connector, and retaining screws are given in Figure 3-1.

3-3. MAXIMUM INPUT VOLTAGES.

3-4. Damage to the converter may result if an AC signal greater than 2 v RMS or a DC voltage greater than 100 v is applied to converter INPUT connector.

3-5. OPERATING PROCEDURES.

3-6. NORMAL RANGE MEASUREMENTS.

3-7. Figure 3-2 is the procedure to be used for measurement of frequencies from 50.1 to 512 Mc with INPUT signal amplitudes from 50 mv to 1 v RMS.

3-8. EXTENDED RANGE MEASUREMENTS.

3-9. The frequency of signals not within the normal range of 50.1 to 512 Mc, 50 mv to 1 v RMS, may be measured using the following procedures:

3-10. 50 TO 50.1 MC, 50 MV TO 1 V RMS. Perform steps 1 through 5 of Figure 3-2. Then:

a. Set mixing frequency control to slightly more than 60 Mc.

b. Turn mixing frequency control slowly clockwise until level indicator meter first reaches a maximum reading in the green portion of its scale.

c. Subtract counter display (in Mc) from reading of mixing frequency control (in Mc) for frequency of INPUT signal.

3-11. 50 TO 512 MC, AMPLITUDE LESS THAN 50 MV RMS. The front panel level indicator meter indicates in the green portion of its scale only when converter is properly tuned and amplitude of INPUT signal is adequate for accurate frequency measurement. However, because of conservative specifications of both the converter and counter, frequencies may often be accurately measured when meter reads in the red portion of its scale. To make these extended range measurements:

a. Follow normal procedure (Figure 3-2 or Paragraph 3-10, depending upon frequency range) except that mixing frequency control should be tuned for first maximum reading on the level indicator meter, regardless of the color of region maximum.

b. Check frequency measurement result as described in Paragraph 3-12, or


c. Insert an external variable attenuator (such as Hewlett-Packard Model 355A or 355C) in the transmission line between the converter and the source of INPUT signal. Vary attenuation from 0 to 1 db during final step of frequency measurement procedure. If counter display does not change more than momentarily (during switching of attenuator), INPUT signal is above noise threshold and frequency measurement result is valid.

3-12. DOUBLE-CHECKING FREQUENCY MEASUREMENT RESULT.

3-13. Because of the heterodyne action of the converter, frequency measurement results obtained at any one setting of the mixing frequency control may be checked at other settings. See Figure 3-3 for examples.

Table 3-1. Frequency Resolution

INPUT SIGNAL FREQUENCY = 151.1223344 Mc MIXING FREQUENCY CONTROL set to 140 Mc		
Time Base Setting	Counter Display	Measurement Resolution
.1 μ s	* (no display)	
1 μ s	1 1. Mc	1 5 1. Mc
10 μ s	1 1.1 Mc	1 5 1.1 Mc
.1 ms	1 1.1 2 Mc	1 5 1.1 2 Mc
1 ms	1 1 1 2 2. kc	1 5 1.1 2 2 Mc
10 ms	1 1 1 2 2.3 kc	1 5 1.1 2 2 3 Mc
.1 s	1 1 1 2 2.3 3 kc	1 5 1.1 2 2 3 3 Mc
1 s	1 1 1 2 2.3 3 4 kc	1 5 1.1 2 2 3 3 4 Mc
10 s	1 1 2 2.3 3 4 4 kc	1 5 1.1 2 2 3 3 4 4 Mc

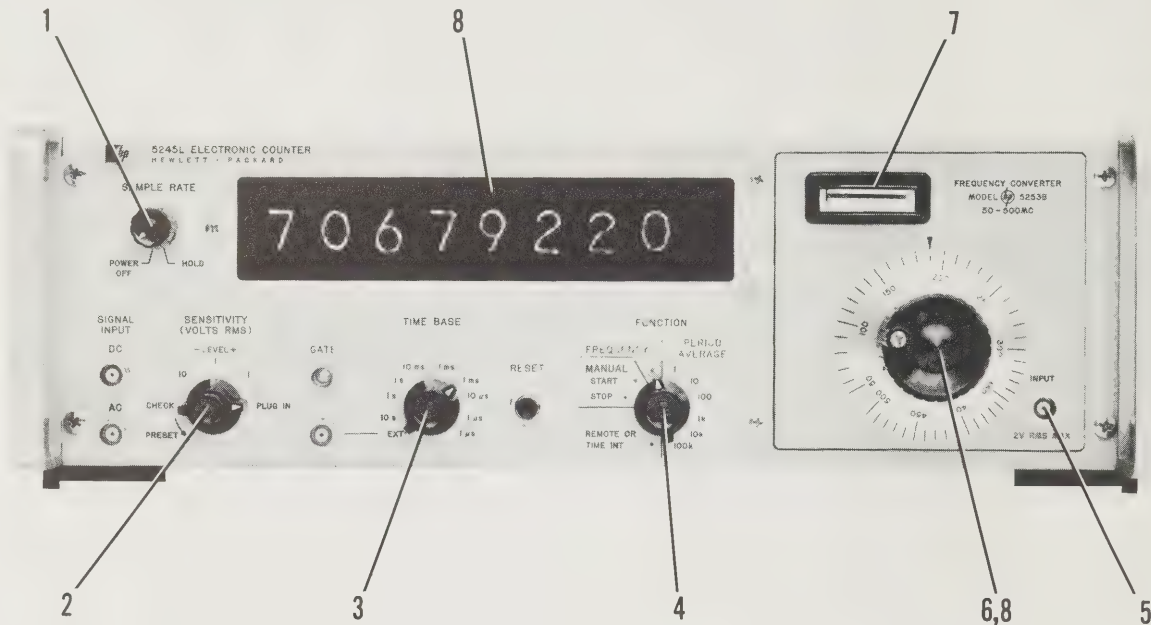

1. Turn SAMPLE RATE control slightly out of POWER OFF position.
2. Set SENSITIVITY to PLUG IN.
3. Set TIME BASE to .1 ms.*
4. Set FUNCTION to FREQUENCY.
5. Connect signal whose frequency is to be measured to INPUT of converter.
6. Set mixing frequency control to read slightly less than 50 Mc.
7. Slowly turn mixing frequency control counter-clockwise until level indicator meter first reaches a maximum reading in the green portion of its scale.
8. Add counter display (in Mc) to mixing frequency control reading (in Mc) for frequency of INPUT signal.

* TIME BASE setting may vary, depending on desired resolution of INPUT signal frequency. See Table 3-1.

Figure 3-2. Frequency Measurement Procedure

3-14. AID TO RAPID TUNING

3-15. To easily obtain an indication of the proper MIXING FREQUENCY when rapidly tuning the Model 5253B through its frequency range in search of an unknown INPUT frequency, set counter FUNCTION control to MANUAL START. This allows the counter to

totalize each cycle of any difference frequency produced during rapid tuning. When counter display changes, indicating that the MIXING FREQUENCY is heterodyning with the INPUT frequency and producing a difference frequency within the frequency range of the basic counter, set counter FUNCTION control to FREQUENCY and proceed with measurement.

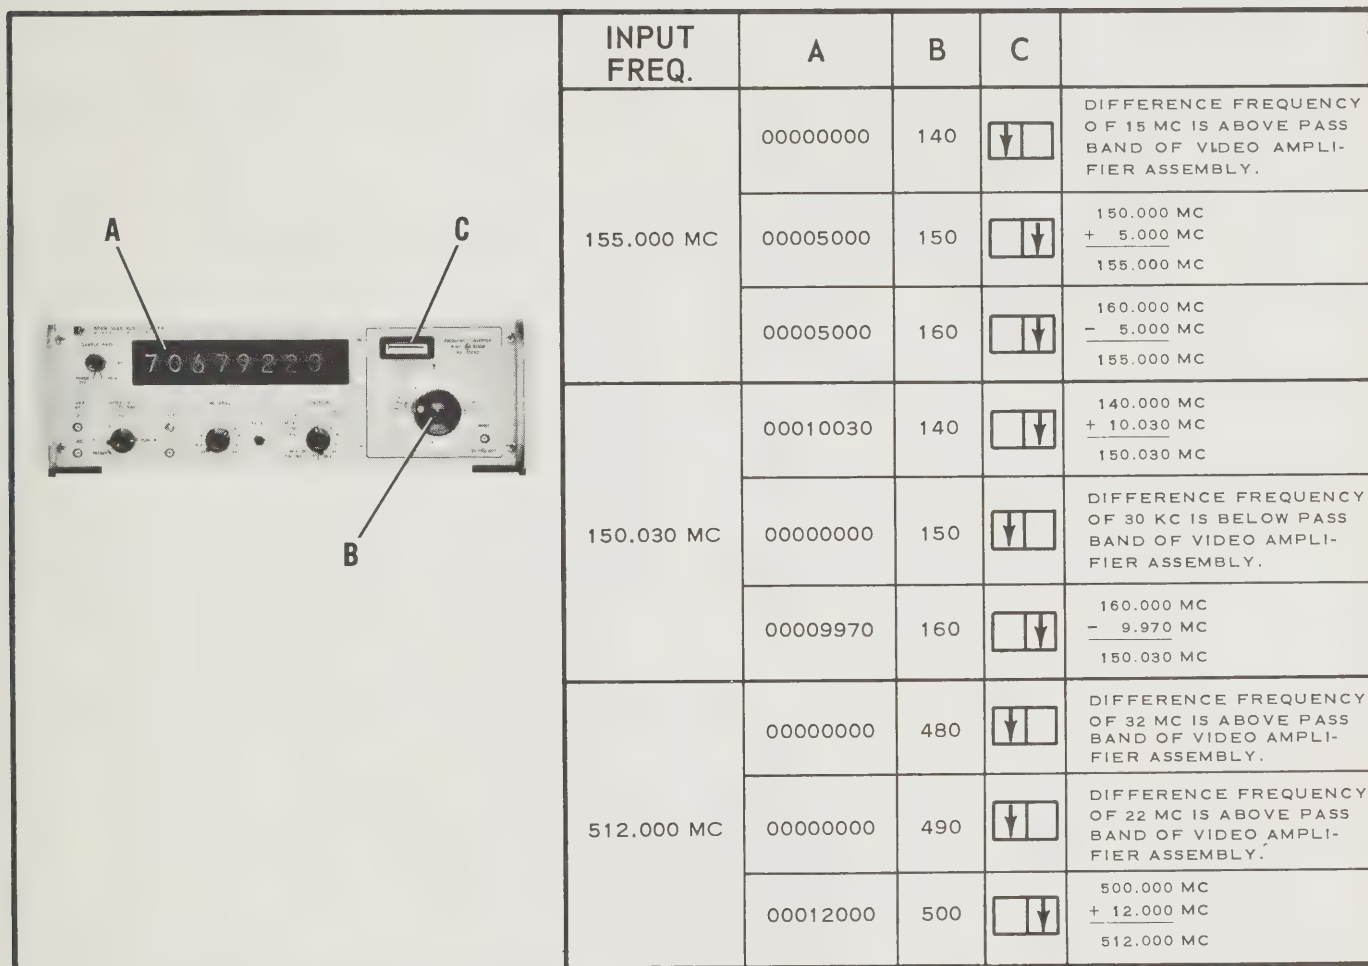


Figure 3-3. Typical Frequency Measurements

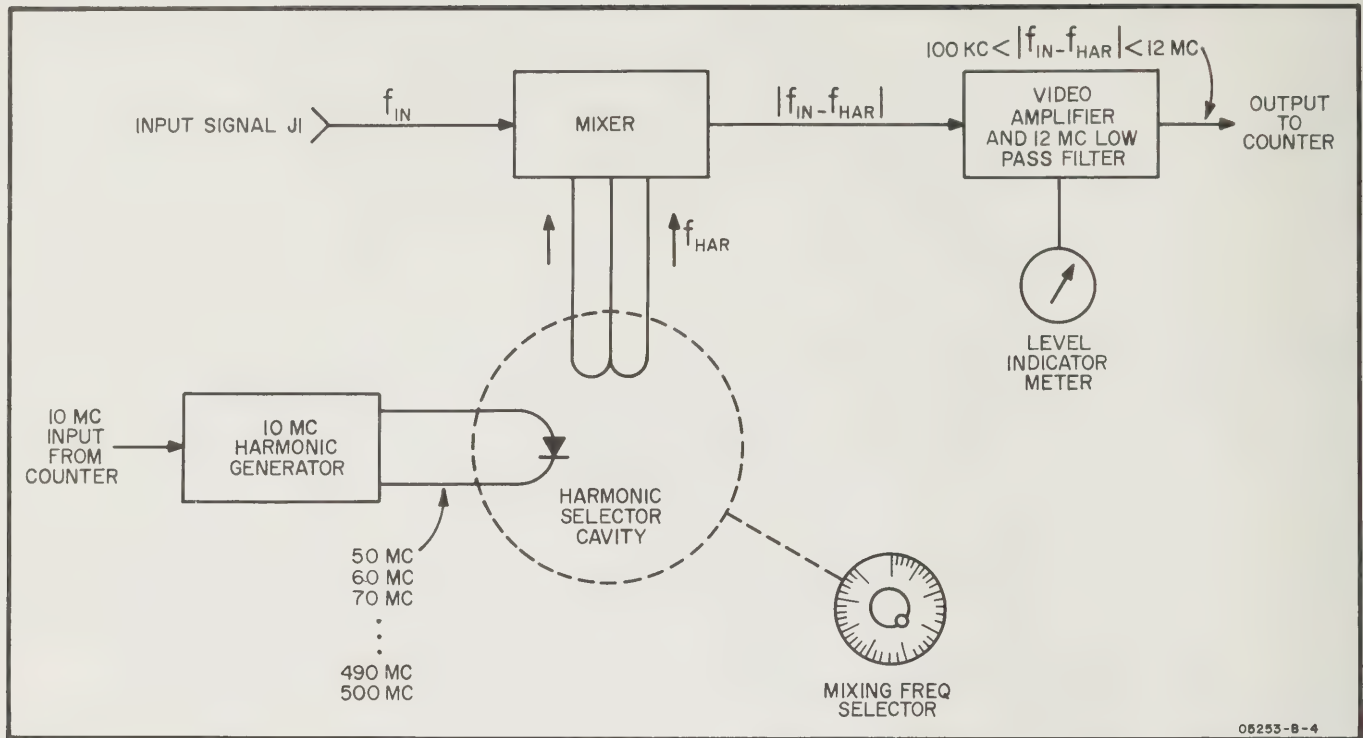


Figure 4-1. Block Diagram

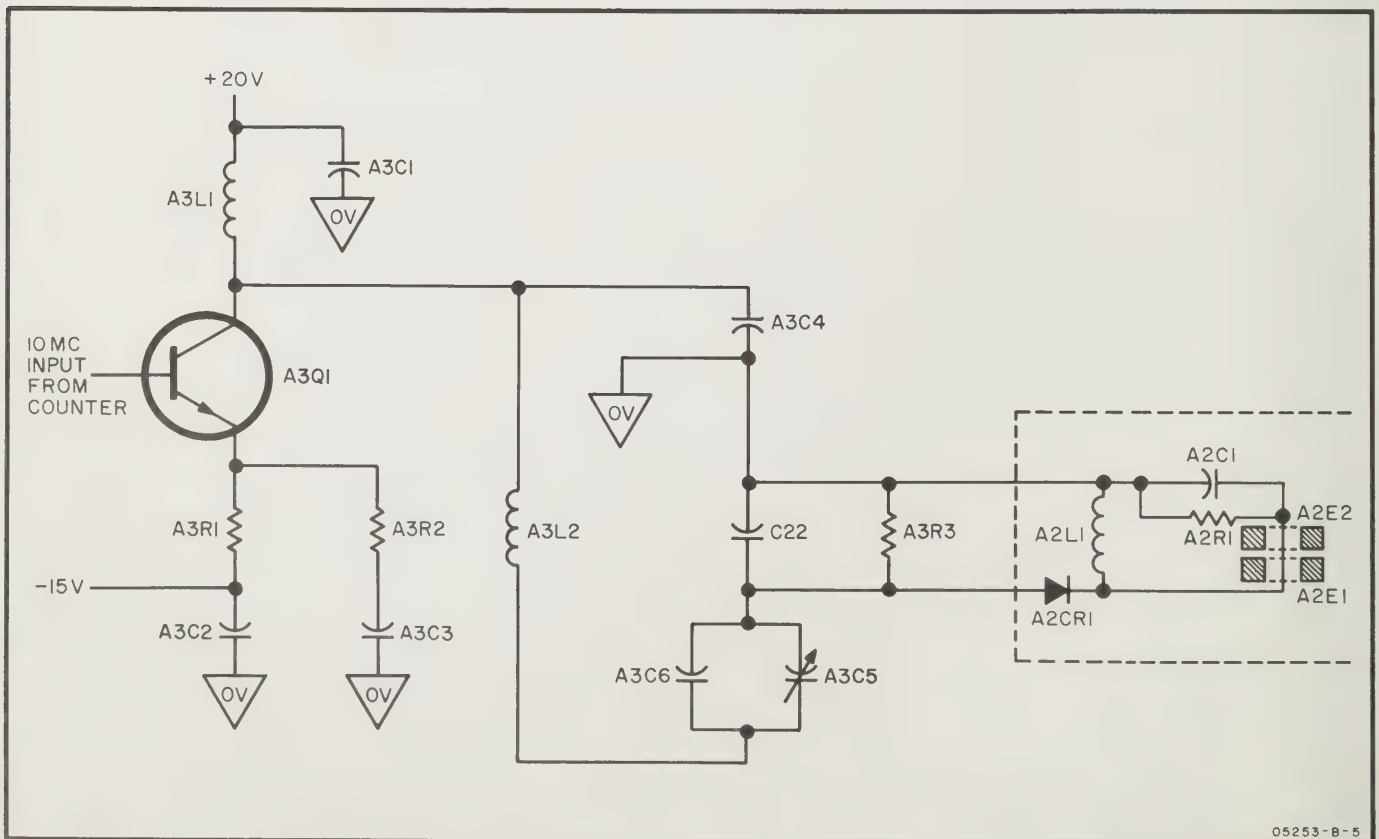


Figure 4-2. Harmonic Generator (A2, A3)

SECTION IV

PRINCIPLES OF OPERATION

4-1. GENERAL

4-2. The Model 5253B is a heterodyne frequency converter designed to extend the range of frequency measurement of the Model 5243L and 5245L Electronic Counters to 512 Mc.

4-3. The converter contains four basic functional sections: harmonic generator, harmonic selector cavity, mixer, and video amplifier (see Figure 4-1).

4-4. In normal operation, the harmonic generator produces all of the harmonics of 10 Mc between 50 and 500 Mc. The harmonic selector cavity is tuned to select one of these harmonics to be supplied to the mixer. The mixer output is the difference frequency produced by the mixing of the INPUT frequency and the frequency supplied by the harmonic selector cavity. This difference frequency is amplified by the video amplifier and supplied to the counter input circuit. A low-pass filter within the video amplifier prevents all difference frequency signals above approximately 12 Mc from reaching the counter input circuit. The output of the video amplifier is monitored by a meter circuit which indicates when difference frequency output amplitude is greater than minimum signal required by counter input circuit.

4-5. HARMONIC GENERATOR (A2,A3), AND HARMONIC SELECTOR CAVITY

4-6. A 10-Mc signal, supplied by the Counter, is amplified by A3Q1 to cause a tuned circuit, composed of A3L2, A3C4, A3C5, A3C6, and C22, to oscillate at 10-Mc (Fig. 4-2). Step-recovery diode*, A2CR1, takes energy from this tuned circuit during a portion of each cycle of the 10-Mc oscillation and produces a sharp step in the current following in the input loop of the harmonic selector cavity. This current step makes available, inside the cavity, all harmonics of 10 Mc from 10 Mc (fundamental) to over 500 Mc (fiftieth harmonic). The remaining components of the step-recovery diode network (Assembly A2) are used to maintain the sensitivity of the counter across its frequency range. The harmonic selector cavity is tuned to resonate at a particular harmonic of 10 Mc between 50 and 500 Mc so that energy at that frequency is coupled from the input loop to the output loops providing one of the two inputs to the mixer circuit (Fig. 4-4).

*-hpa- Application Note #1 (The Step Recovery Diode; Circuit Design and Performance), -hpa- Application Note #2 (Harmonic Generation, Rectification, and Lifetime Evaluation with the Step Recovery Diode; reprinted from the PROCEEDINGS OF THE IRE, VOL. 50, NO. 7, JULY 1962); available from -hp associates-, 620 Page Mill Road, , Palo Alto, California.

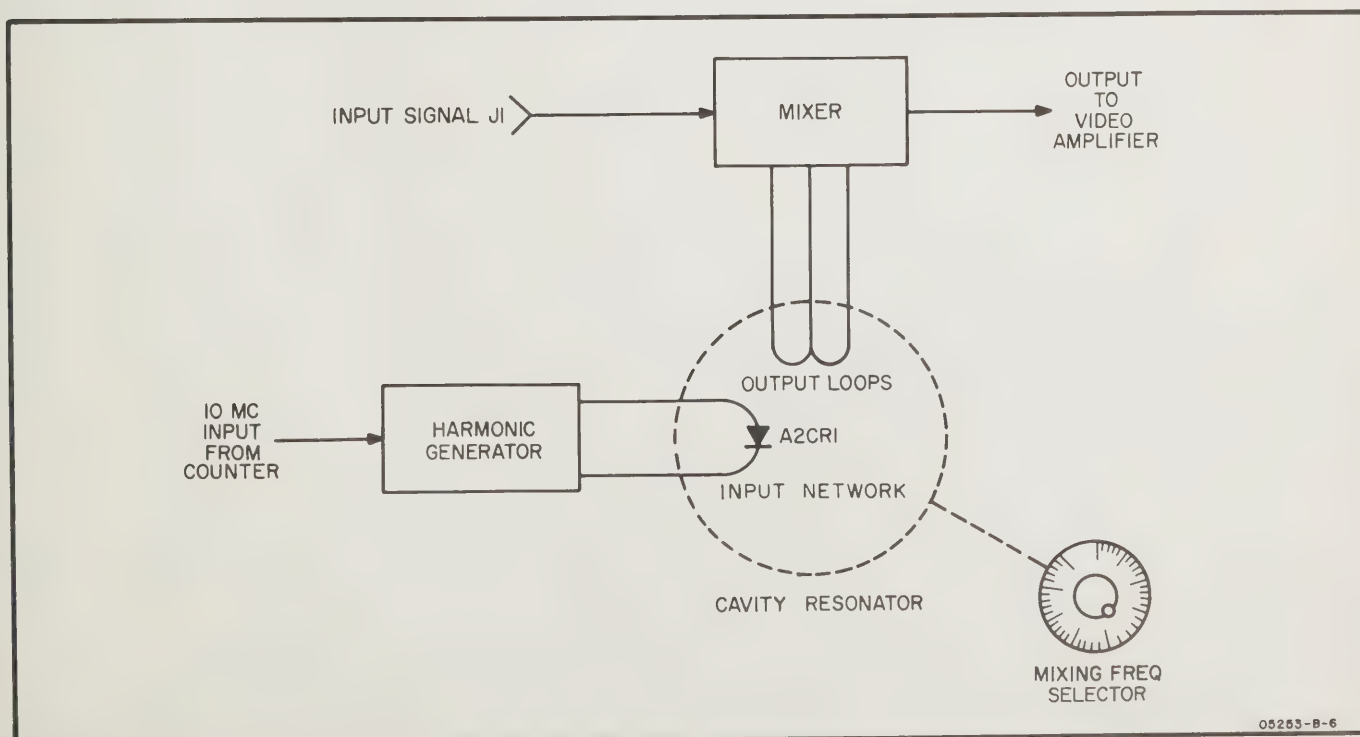


Figure 4-3. Harmonic Selector Cavity

4-7. MIXER (A4)

4-8. Matched diodes are used in a balanced mixer circuit in order to minimize the generation of even-order harmonics of both the INPUT signal and the selected mixing frequency. The balanced input signal required by the circuit is accomplished by grounding the junction of the two resistors of equal value, A4R1 and A4R2, and installing ferrite rings (E1, E2, and E3) around the input coaxial cable (see Figure 4-4). Both sides of resistor A4R1 are returned to common for DC currents. However, for AC currents in the frequency range of 50 to 512 Mc, the impedance of the input signal path is large, due to the inductance provided by the ferrite rings E1, E2, and E3, causing a balanced AC signal condition at the mixer diodes. Limiting diode A4CR2 prevents INPUT signals of high amplitude from overloading the mixer circuit. The output of the mixer diodes, during normal operation when the converter is properly tuned, is a complex signal containing the INPUT signal frequency, the frequency of the harmonic of 10 Mc to which the harmonic selector cavity is tuned, the frequency that is the sum of these two frequencies, and the frequency that is the difference between these two frequencies. Inductor A4L1 reduces the amplitude of any signal with a frequency above approximately 15 Mc before the signal reaches the input to the video amplifier. The output of the mixer circuit is then essentially composed of the difference frequency signal.

4-9. VIDEO AMPLIFIER ASSEMBLY (A1)

4-10. The output of the mixer circuit is amplified by transistors A1Q1 and A1Q2 and is fed to the 12-Mc low-pass filter network (see Figure 4-5). This filter passes any signal frequency below approximately 12 Mc and attenuates all higher frequency signals. The lowpass filter output is amplified by A1Q3 and A1Q4 and fed to the last transistor amplifier, A1Q5, which provides both the output to the counter and the drive for the level indicator meter. The limiter diode, A1CR1, prevents the amplitude of the video amplifier output signal from exceeding approximately 300 mv RMS so that counter input circuits will not be overloaded. The low frequency limit of the video amplifier, determined by the bypass and interstage coupling networks, is approximately 100 kc. The converter output signal to the counter, when converter is properly tuned, will be between approximately 100kc and 12Mc and will have an amplitude that is less than approximately 300 mv RMS.

4-11. LEVEL INDICATOR METER

4-12. The DC current supply for the meter is produced by metering detector A1CR3 and smoothed by capacitor A1C16 (see Figure 4-6). The value of shunt resistor A1R20 is selected to make level indicator meter M1 read at red-green border when amplitude of converter output to counter is in excess of the 100-mv RMS minimum signal amplitude normally required by the counter for accurate frequency measurement.

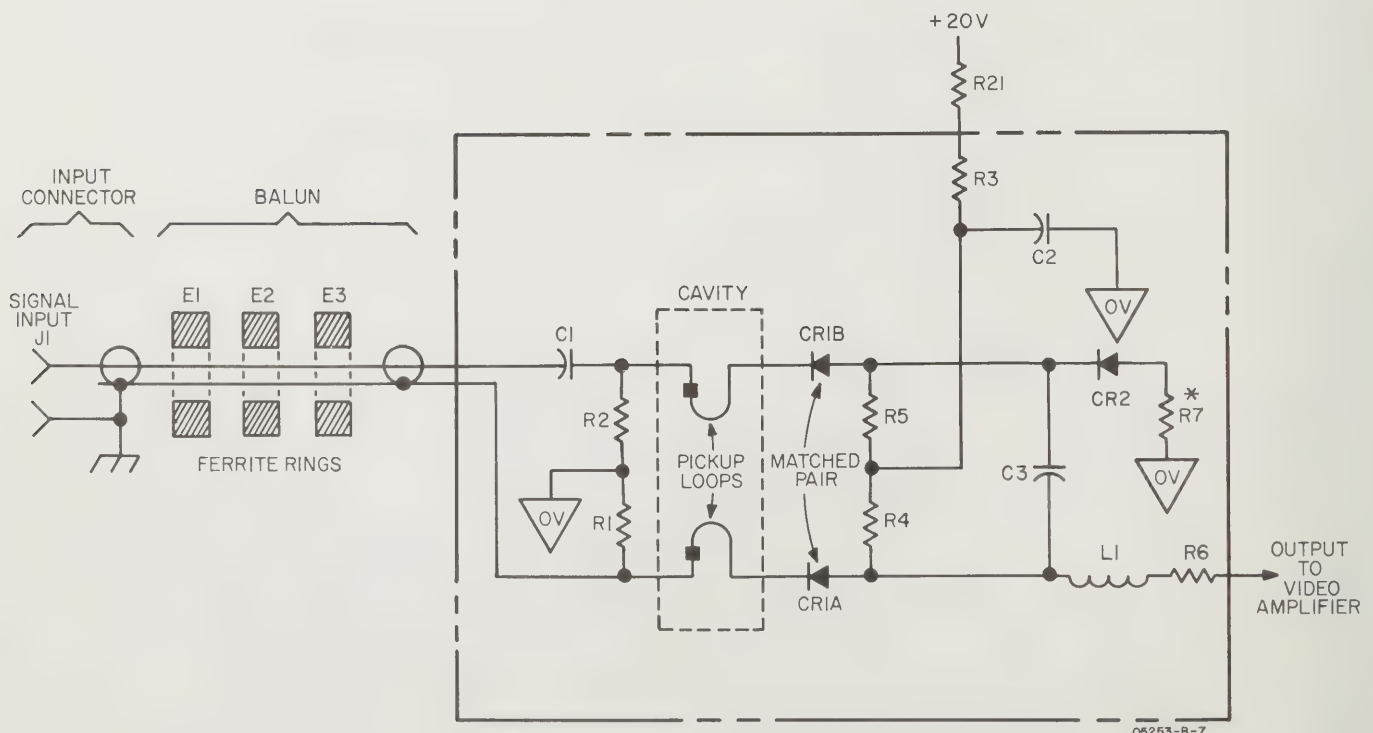


Figure 4-4. Balanced Mixer (A4)

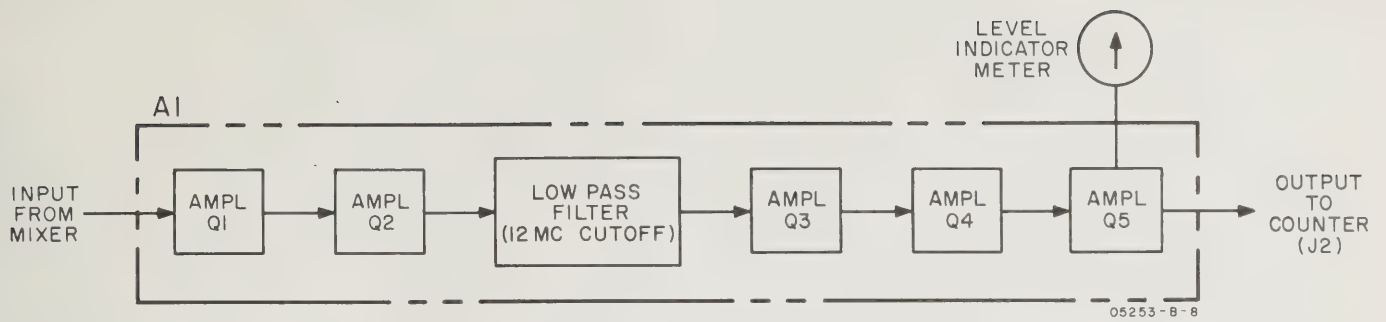


Figure 4-5. Video Amplifier (A1)

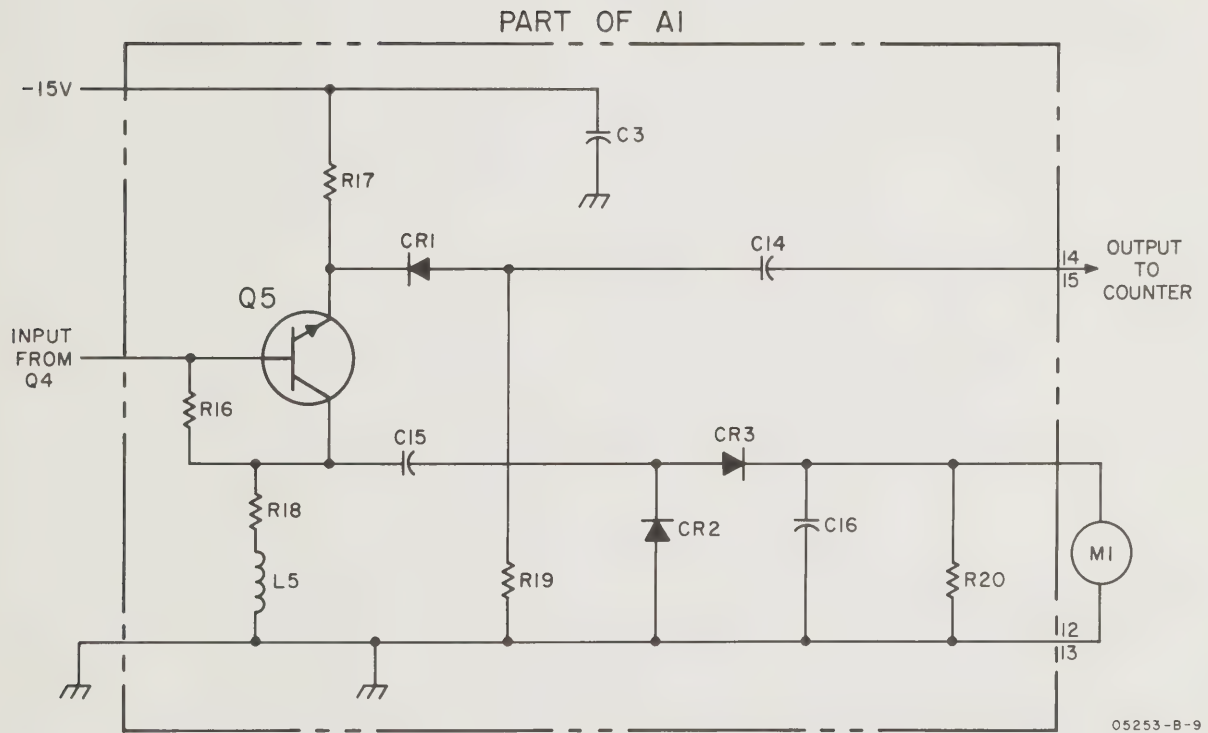


Figure 4-6. Level Indicator Meter Circuit

SECTION V

MAINTENANCE

5-1. GENERAL.

5-2. INTRODUCTION.

5-3. This section contains information concerning periodic maintenance, troubleshooting and recommended test equipment, repair, circuit adjustments, and performance testing. A complete schematic diagram of the converter is at the rear of this section (Figure 5-5).

5-4. PERIODIC MAINTENANCE.

5-5. No special maintenance procedures are required when the converter is operated in normal environments. However, if unit is subjected to operation in extremely dusty environments, periodically clean all gears with a lint-free cloth and apply a coating of light, petroleum base, open-gear grease to all gear teeth.

5-6. TEST EQUIPMENT.

5-7. All test instruments required for performance testing, troubleshooting, and circuit adjustment after repair are listed in Table 5-1. Instruments having equivalent specifications may be substituted for the specific instruments recommended.

5-8. TROUBLESHOOTING.

5-9. Table 5-2 lists resistances from connecting pins on connector J1 to chassis (when unit is not connected to counter) to aid in troubleshooting. Table 5-3 is a suggested troubleshooting procedure which lists circuit conditions at Test Points throughout the converter. These Test Points are keyed to the component

location drawings, Figures 5-1, 5-2, 5-3 and 5-4, and also to the schematic diagram, Figure 5-5. Voltages listed in Table 5-3 are approximate and may vary widely between instruments, due to variations in component values. Table 5-4 lists recommended adjustments to be made after repair of any section of the converter.

Table 5-2. Resistance Troubleshooting Aid

Location	Resistance (to Chassis)*
J2 - Pin 1	> 100 megohms
J2 - Pin 15	1 K ohms $\pm 20\%$
J2 - Pin 20	140 K ohms $\pm 20\%$
J2 - Pin 25	125 K ohms $\pm 20\%$

*Unit not connected to counter.

5-10. REPAIR AND REPLACEMENT.

5-11. Paragraphs 5-12 through 5-19 are replacement procedures to aid in repair of the converter. Detailed procedures for replacement of all the individual components of the unit are beyond the scope of this manual. In-field repair is, for the most part, simple and straightforward. However, do not attempt adjustment of the gearing arrangement, the harmonic selector cavity or the step-recovery diode. Should gear, cavity, or step recovery diode problems arise, please contact your Hewlett-Packard field office to arrange for repair.

Table 5-1. Recommended Test Equipment

Instrument	Required Characteristics	Use	Instrument Recommended
Electronic Counter		Supply Power, Visual Operational Indicator	Ⓜ Model 5243L or Ⓜ Model 5245L
RF Millivoltmeter	1 Mc to 20 Mc 10 mv to 10 vdc 10 mv resolution	Circuit Adjustment, Troubleshooting	Ⓜ Model 411A with Pen Type Probe Tip, Ⓜ11022A (formerly Ⓜ411A-21B)
DC VTVM and Ohmmeter	0 to +25 vdc 0.1 v resolution 0 to 100 M ohms	Circuit Adjustment, Troubleshooting	Ⓜ Model 412A
VHF Signal Generator	50 Mc to 480 Mc 10 mv to 1 v	Circuit Adjustment, Troubleshooting	Ⓜ Model 608C
Oscilloscope	15 Mc bandwidth	Circuit Adjustment, Troubleshooting	Ⓜ Model 175A with Ⓜ Model 1752A High Gain Amplifier and Ⓜ Model 1780A Aux Unit
Extension Cable	50 pin straight-thru connections	Circuit Adjustment, Troubleshooting	Ⓜ 10506A (formerly ⓂAC-16Y)

Table 5-3. Troubleshooting Procedure

All voltages given are approximate and may vary from instrument to instrument because of variations in component characteristics.

TEST EQUIPMENT: $\text{\textcircled{hp}}$ Model 411A RF Millivoltmeter with $\text{\textcircled{hp}}$ 11022A (formerly 411A-21B) Pen Type Probe Tip,
 $\text{\textcircled{hp}}$ Model 412A DC VTVM

REMOVE $\text{\textcircled{hp}}$ 5253B FROM COUNTER; SELF-CHECK COUNTER	See counter manual for self-check procedure.
CONNECT $\text{\textcircled{hp}}$ 5253B TO COUNTER WITH EXTENSION CABLE, $\text{\textcircled{hp}}$ 10506A (formerly AC-16Y)	Extension cable available from $\text{\textcircled{hp}}$; see parts list.
1 +20 VDC 2 -15 VDC	Checks power supplied to plug-in from counter; see counter manual for power supply adjustment procedure.
3 + 6 VDC 2 VAC	Checks 10-Mc drive of harmonic generator.
4 + 2 VDC - 2 VAC	Checks generator diode drive. Voltages vary widely because of both the detuning effect of voltmeter probe and the variable value of A3R3. DC voltage may be either + or -, depending upon factory determined generator diode orientation.
5 +100 MV DC 6 +100 MV DC	Voltages vary widely because of diode characteristics. Voltages are 0 VDC when diode shorted, and +20 VDC when diode open. Voltages should be approximately equal because of matched characteristics.

CONNECT SIGNAL GENERATOR TO $\text{\textcircled{hp}}$ 5253B.
SET GENERATOR TO 52 MC, CW, 100 MV.
SET COUNTER CONTROLS AND 5253B TO
MEASURE FREQUENCY OF INPUT SIGNAL.

7 5 MV RMS	This voltage is total harmonic energy output of mixer and varies widely.
8 -11.3 VDC 30 MV RMS	Checks bias and amplification of A1Q2 and A1Q1.
9 -12.3 VDC 17 MV RMS	General check of low pass filter section
10 -9.3 VDC 360 MV RMS	Checks bias and amplification of A1Q3 and A1Q4
11 -7.1 VDC 300 MV RMS	Checks operation of A1Q5
12 0 VDC 190 MV RMS	Checks operation of limiter, A1CR1
13 0 MV DC WHEN METER READS AT LEFT END OF SCALE; 50 MV DC WHEN METER READS FULL SCALE; 15 MV DC WHEN TEST POINT #12 IS 100 MV RMS, AND METER READS AT RED-GREEN BORDER.	Checks accuracy of meter circuit in relation to output to counter

5-12. PRINTED CIRCUIT COMPONENT REPLACEMENT.

5-13. Component lead-holes in the Model 5253B circuit boards have plated walls to insure good electrical contact between conductors on the opposite sides of the board. To prevent damage to this plating and also to the replacement component, apply heat sparingly and work carefully. The following replacement procedure is recommended:

a. Remove defective component.

b. Melt solder in component lead-holes. Use clean, "dry" soldering iron to remove excess solder. Clean holes with toothpick or wooden splinter. Do not use metal tool for cleaning as this may damage the through-hole plating.

c. Bend leads of replacement component to the correct shape and insert component leads in component lead-holes. Using heat and solder sparingly, solder leads in place. Heat may be applied to either side of board as is convenient. A heat sink (long-nose pliers, commercial heat-sink tweezers, etc.) should be used when replacing transistors and diodes in order to prevent excessive heat from being conducted by the leads from the soldering iron to the component.

d. Through-hole plating breaks are indicated by the separation from the board of the round conductor-pad on either side of the board. To repair breaks, press conductor-pads against board and solder replacement component lead to conductor-pad on both sides of the board.

5-14. VIDEO AMPLIFIER ASSEMBLY REPLACEMENT.

5-15. If video amplifier printed circuit board requires replacement, follow this procedure:

a. Remove the converter from counter.

b. Unscrew and remove small screw (MP1; see Figure 5-4) which holds video amplifier A1 in place. Remove screws which secure supporting bracket to front panel. Remove supporting bracket.

c. Firmly grasp assembly at component-free end and pull out of socket using a slight back-and-forth sideways movement.

d. Check that the connecting terminals of replacement assembly are clean. Push replacement assembly firmly into socket and check for proper seating. Replace supporting bracket and all screws.

e. All replacement video amplifier assemblies are adjusted and inspected at the factory for optimum performance. However, if a general operational check is desired, perform the in-cabinet performance check given in Paragraph 5-31.

5-16. MIXER DIODE REPLACEMENT.

5-17. If either of the matched pair of mixer diodes (A4CR1A or A4CR1B) is found to be defective, both

diodes should be replaced. The recommended replacement procedure is as follows:

a. Remove mixer-assembly shield cover (see Figure 5-3).

b. Remove diodes from spring clips, noting orientation.

c. Install replacement diodes with same orientation.

d. Replace mixer-assembly shield cover.

e. Perform the sensitivity check (Paragraph 5-28) to insure that converter operation is within specifications.

5-18. METER REPLACEMENT PROCEDURE.

5-19. If the level indicator meter requires replacement, follow this procedure:

a. Remove converter from counter.

b. Unscrew and remove small retaining screw (MP1; see Figure 5-4) which holds video amplifier board A1 in place. Remove screws which secure supporting bracket to front panel. Remove supporting bracket.

c. Firmly grasp video amplifier board at the component-free end and pull board out of socket using a slight back-and-forth sideways movement.

d. Place converter on bench with bottom plate resting on bench surface and with the front panel facing to the rear of the bench.

e. Remove screw (MP2) which holds aluminum spacer-rod (MP3) to plastic rear-support (MP4; see Figure 5-2). Grasp spacer-rod and turn counterclockwise to remove rod from front support.

f. Cut connecting wires at meter terminals.

g. Remove screws (MP5, 6; see Figure 5-4) from meter bezel at sides of meter. Push bezel forward as far as possible.

h. Remove screws (MP7, 8) on top of meter bracket.

i. Grasp meter and gently pull meter (and bracket) backwards out of front panel hole, at the same time twisting rear of meter slightly sideways to the right and pulling up.

j. Remove bracket and hardware from meter and install in identical manner on replacement meter. Hardware which may come from the manufacturer with the replacement meter may be discarded.

k. Place meter (with bracket) in unit by reversing removal procedure.

m. Replace screws on top of meter bracket.

n. Replace meter bezel at sides of meter.

p. Check that meter terminals are not close to front bearing-block. Bend terminals away from block if necessary.

q. Strip 1/4-inch insulation from ends of each connecting wire and solder to meter terminals. Black wire goes to inside terminal and white wire goes to outside terminal.

r. Replace aluminum spacer-rod. Tighten only "finger-tight" as excessive torque may break end of rod.

s. Replace screw which holds spacer-rod to rear-support.

t. Replace video amplifier assembly, supporting bracket, and all screws.

5-20. HARMONIC GENERATOR ADJUSTMENT.

5-21. To adjust the harmonic generator assembly, proceed as follows:

a. Remove converter from counter and reconnect to counter with Extension Cable, hp 10506A.

b. Connect VHF Signal Generator to converter INPUT and set to 472 Mc, CW, at 100 mv.

c. Connect RF Millivoltmeter to Test Point #12 (see Figure 5-4).

d. Set converter mixing frequency control to 470 Mc, and tune for maximum reading on RF Millivoltmeter.

e. Vary output of VHF Signal Generator to make converter level indicator meter read at red-green border.

f. Using plastic tuning tool, tune A3C5 (see Figure 5-2) for maximum reading on RF Millivoltmeter. Tune A3C5 through hole in harmonic generator assembly shield cover.

5-22. LOW PASS FILTER ADJUSTMENT.

5-23. To adjust the low pass filter in the video amplifier assembly, proceed as follows:

a. Remove converter from counter and reconnect to counter with Extension Cable, hp 10506A.

b. Connect VHF Signal Generator to converter INPUT and set to 110 Mc, CW, at 50 mv.

c. Connect RF Millivoltmeter to Test Point #12 (see Figures 5-4 and 5-5).

d. Set converter mixing frequency control to 100 Mc and tune for maximum reading on RF Millivoltmeter.

e. Set Signal Generator to 116.2 Mc, CW, at 1 v.

f. Using plastic tool, adjust variable inductor A1L4 (see Figures 5-1 and 5-5) for minimum reading of RF Millivoltmeter.

g. Set Signal Generator to 120.2 Mc, CW, at 1 v.

h. Using plastic tool, adjust variable inductor A1L3 (see Figures 5-1 and 5-5) for minimum reading of RF Millivoltmeter.

i. Set Signal Generator to 115 Mc, CW, at 1 v.

j. Reading of RF Millivoltmeter should be less than 100 mv. If reading is above 100 mv, troubleshoot video amplifier assembly.

Table 5-4. Adjustments after Repair

AFTER REPLACING COMPONENT IN THIS SECTION:	PERFORM:
Harmonic generator (A3)	Harmonic generator adjustment (Paragraph 5-20)
Mixer (A4)	Sensitivity check (Paragraph 5-28)
A1Q1	Sensitivity check (Paragraph 5-28)
A1Q2	Sensitivity check (Paragraph 5-28), and Low pass filter adjustment (Paragraph 5-22)
Low Pass Filter	Sensitivity check (Paragraph 5-28), and Low pass filter adjustment (Paragraph 5-22)
A1Q3	Sensitivity check (Paragraph 5-28), and Low pass filter adjustment (Paragraph 5-22)
A1Q4	Sensitivity check (Paragraph 5-28), and Low pass filter adjustment (Paragraph 5-22)
Meter circuit	Meter accuracy check (Paragraph 5-29)

5-24. METER CALIBRATION ADJUSTMENT. (pri.)

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, ϕ 10506A.

b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set counter controls as shown in Figure 3-2. Counter should display approximately 2 Mc.

d. Vary VHF Generator output to make level indicator meter read at red-green border.

e. Using RF Millivoltmeter, measure voltage at Test Point #12. Voltage should be between 100 mv and 130 mv. If not, change value of resistor A1R20 to change voltage to between 100 mv and 130 mv. If voltage is too high, increase value of A1R20. If voltage is too low, decrease value of A1R20. Repeat steps d and e after changing value of A1R20.

5-25. MECHANICAL ADJUSTMENT OF METER ZERO.

5-26. TRUE SIGNAL LEVEL INDICATION. Level indicator meter is adjusted at the factory for proper mechanical zero. However, normal aging of meter components may change indicated zero level. To insure accuracy of input signal level indication, periodic adjustment of meter zero may be necessary.

5-27. ZERO-SET. When meter is properly zero-set, pointer rests over the zero calibration mark at the left-hand end of meter scale when converter is (1) at normal operating temperature, (2) in normal operating position, and (3) without power. Proceed as follows:

a. Allow counter and converter to operate for one hour to permit meter movement to reach normal operating temperature.

b. Turn counter off and allow one minute for all capacitors to discharge.

c. Remove converter from counter to enable access to rear of meter.

d. Remove adhesive-backed-paper cover from meter zero-adjustment access hole on top-rear of meter.

e. Carefully insert small tool in access hole and engage adjustment fork.

f. Vary setting of adjustment fork until meter reads zero.

g. Remove tool and replace adhesive-backed-paper cover on access hole. This completes meter zero adjustment procedure.

5-28. SENSITIVITY CHECK.

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, ϕ 10506A.

b. Set VHF Signal Generator to 52 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Adjust controls as shown in Figure 3-2.

d. Set converter mixing frequency control to 50 Mc. Counter should display approximately 2 Mc.

e. Using RF Millivoltmeter, measure output of converter at Test Point #12 (see Figures 5-4 and 5-5). Voltage should be at least 100 mv.

f. Repeat above steps c, d, and e with VHF Generator frequency of 472 Mc and converter mixing frequency control set to 470 Mc. Converter output to counter, as measured by RF Millivoltmeter, should be at least 100 mv.

g. A similar check may be made at any frequency within the range of the Model 5253B. Converter output to counter should be at least 100 mv when difference frequency is between 100 kc and 12 Mc and converter is properly tuned.

5-29. METER ACCURACY CHECK.

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, ϕ 10506A.

b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure 3-2. Set converter mixing frequency control to 100 Mc. Counter should display approximately 2 Mc.

d. Vary output of VHF Signal Generator for converter level indicator to make meter read at red-green border.

e. Using RF Millivoltmeter, measure converter output to counter at Test Point #12. Voltage should be between 100 mv and 130 mv. If not, see Paragraph 5-24 for meter calibration adjustment procedure.

5-30. LOW PASS FILTER CHECK.

a. Turn counter power off, remove converter from counter and reconnect to counter with Extension Cable, ϕ 10506A.

b. Set VHF Signal Generator to 110 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure 3-2. Set converter mixing frequency control to 100 Mc. Counter should display approximately 10 Mc.

d. Connect RF Millivoltmeter to Test Point #12. Vary output of VHF Signal Generator for RF Millivoltmeter reading of 100 mv. Note output level of VHF Signal Generator.

e. Set VHF Signal Generator to 115 Mc at same output level as noted in step d above. Converter output to counter, as shown on RF Millivoltmeter, should not exceed 50 mv. If converter output to counter is greater than 50 mv, see Paragraph 5-23 for low pass filter adjustment procedure.


5-31. IN-CABINET PERFORMANCE CHECK.

a. Turn counter power off and install converter.

b. Set VHF Signal Generator to 52 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure 3-2. Counter should display approximately 2 Mc.

d. Set VHF Signal Generator to any frequency between 50 Mc and 512 Mc with output of 50 mv. Counter should display correct frequency at any frequency within this range.

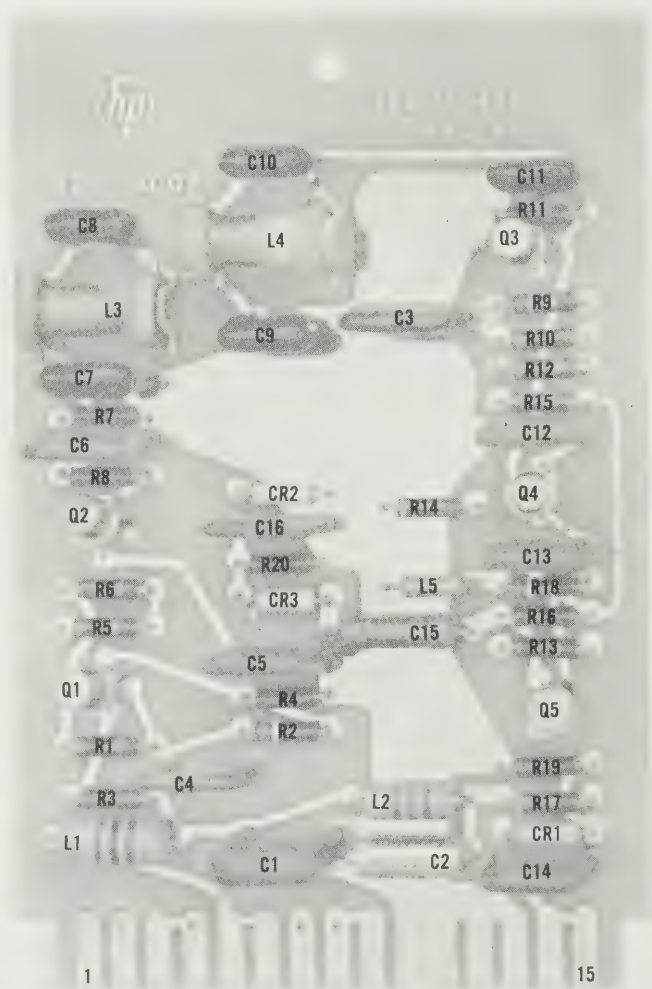

05253-A-12

Figure 5-1. Video Amplifier Assembly A1 Component Location

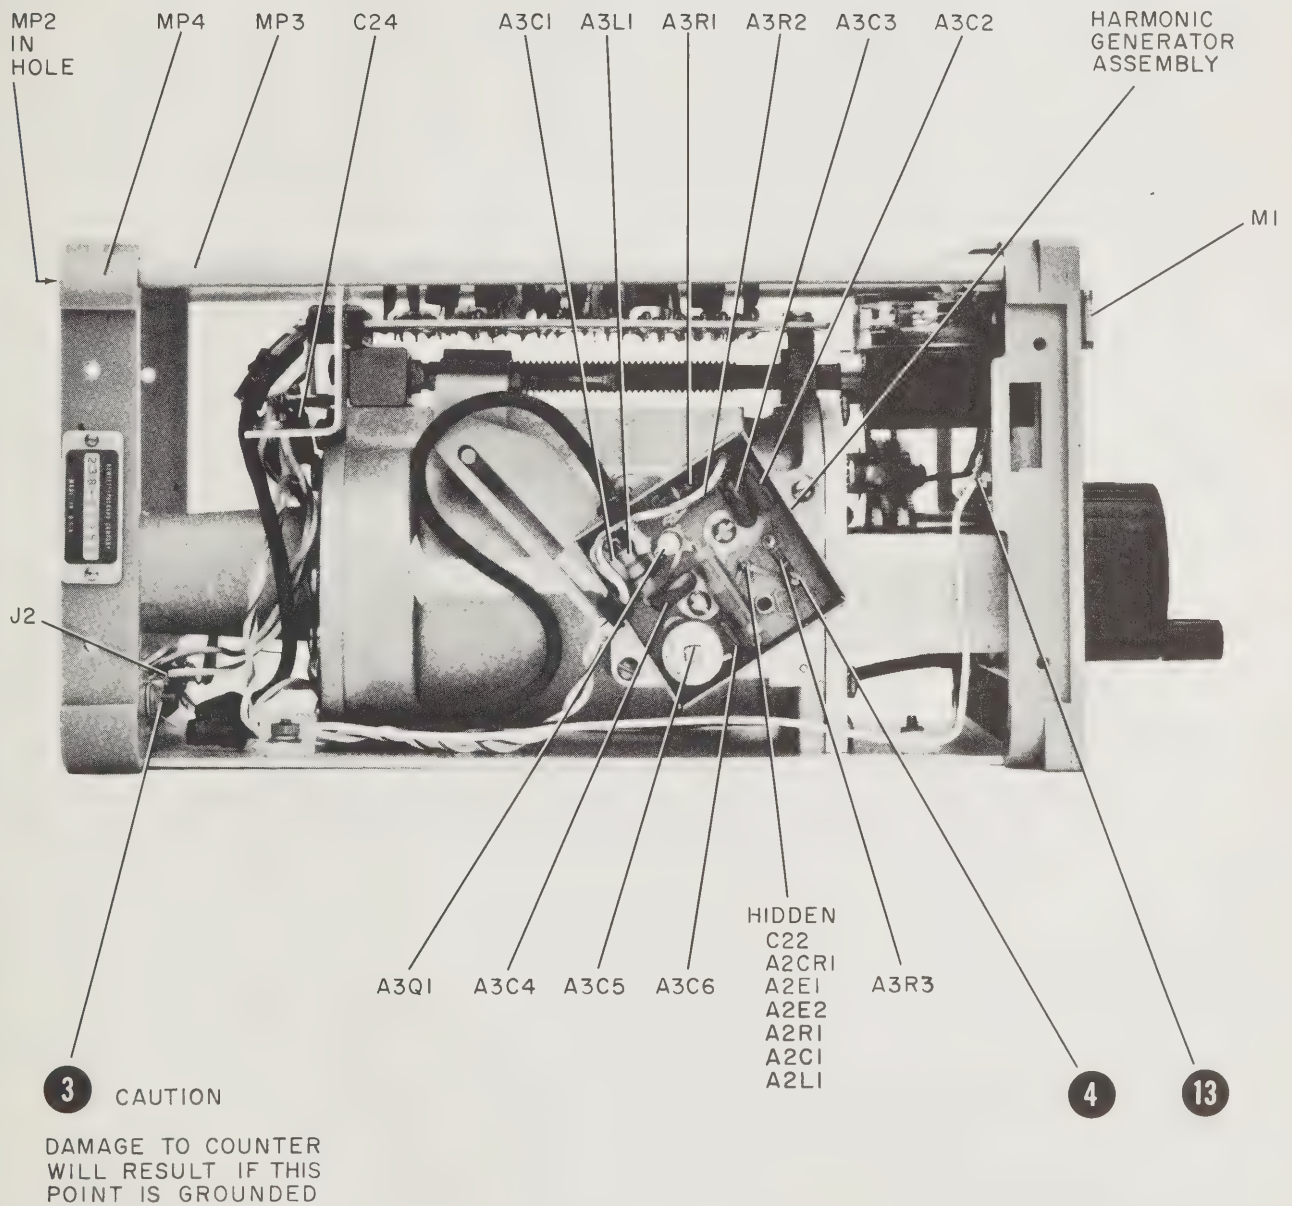


Figure 5-2. Left Side View

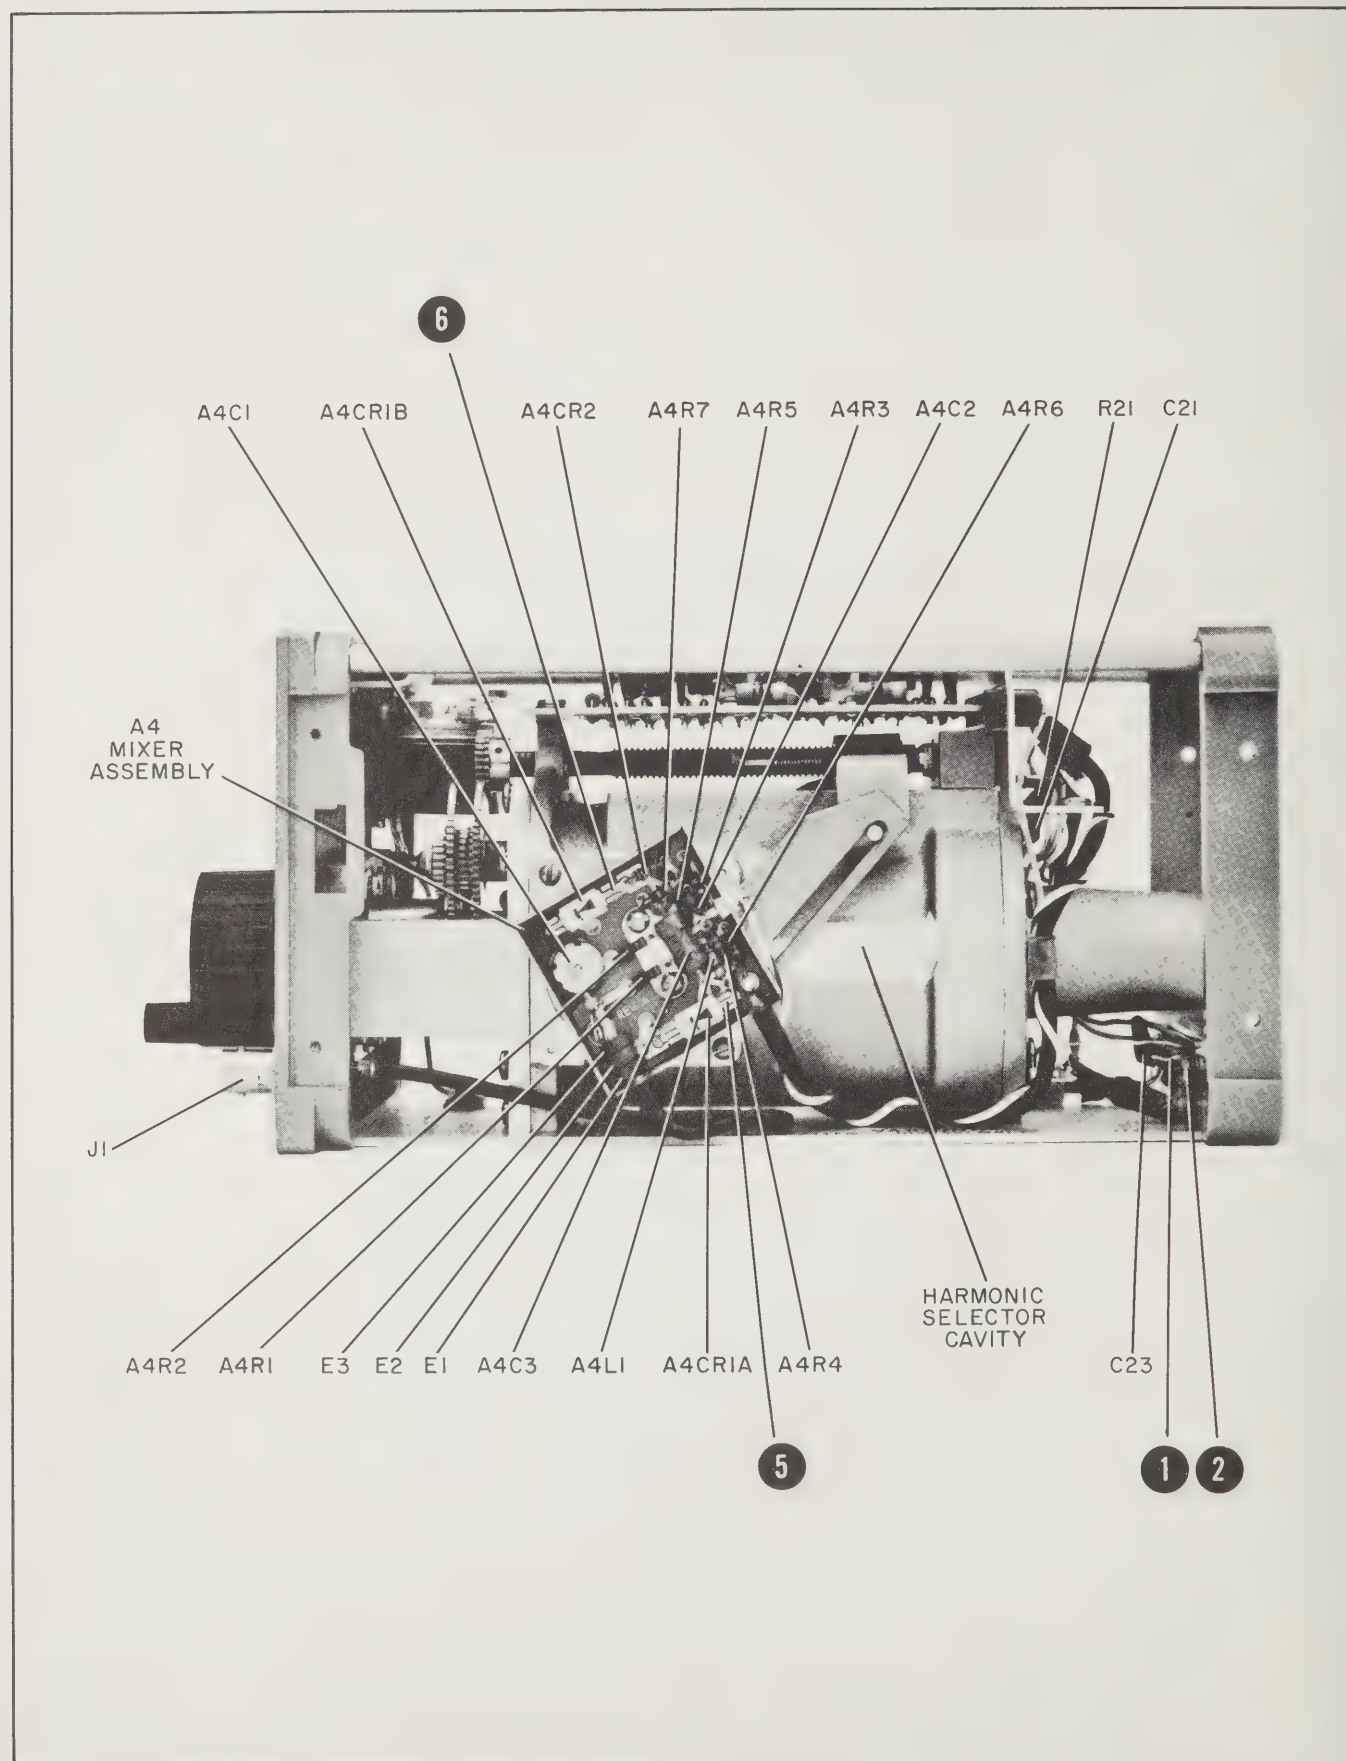


Figure 5-3. Right Side View



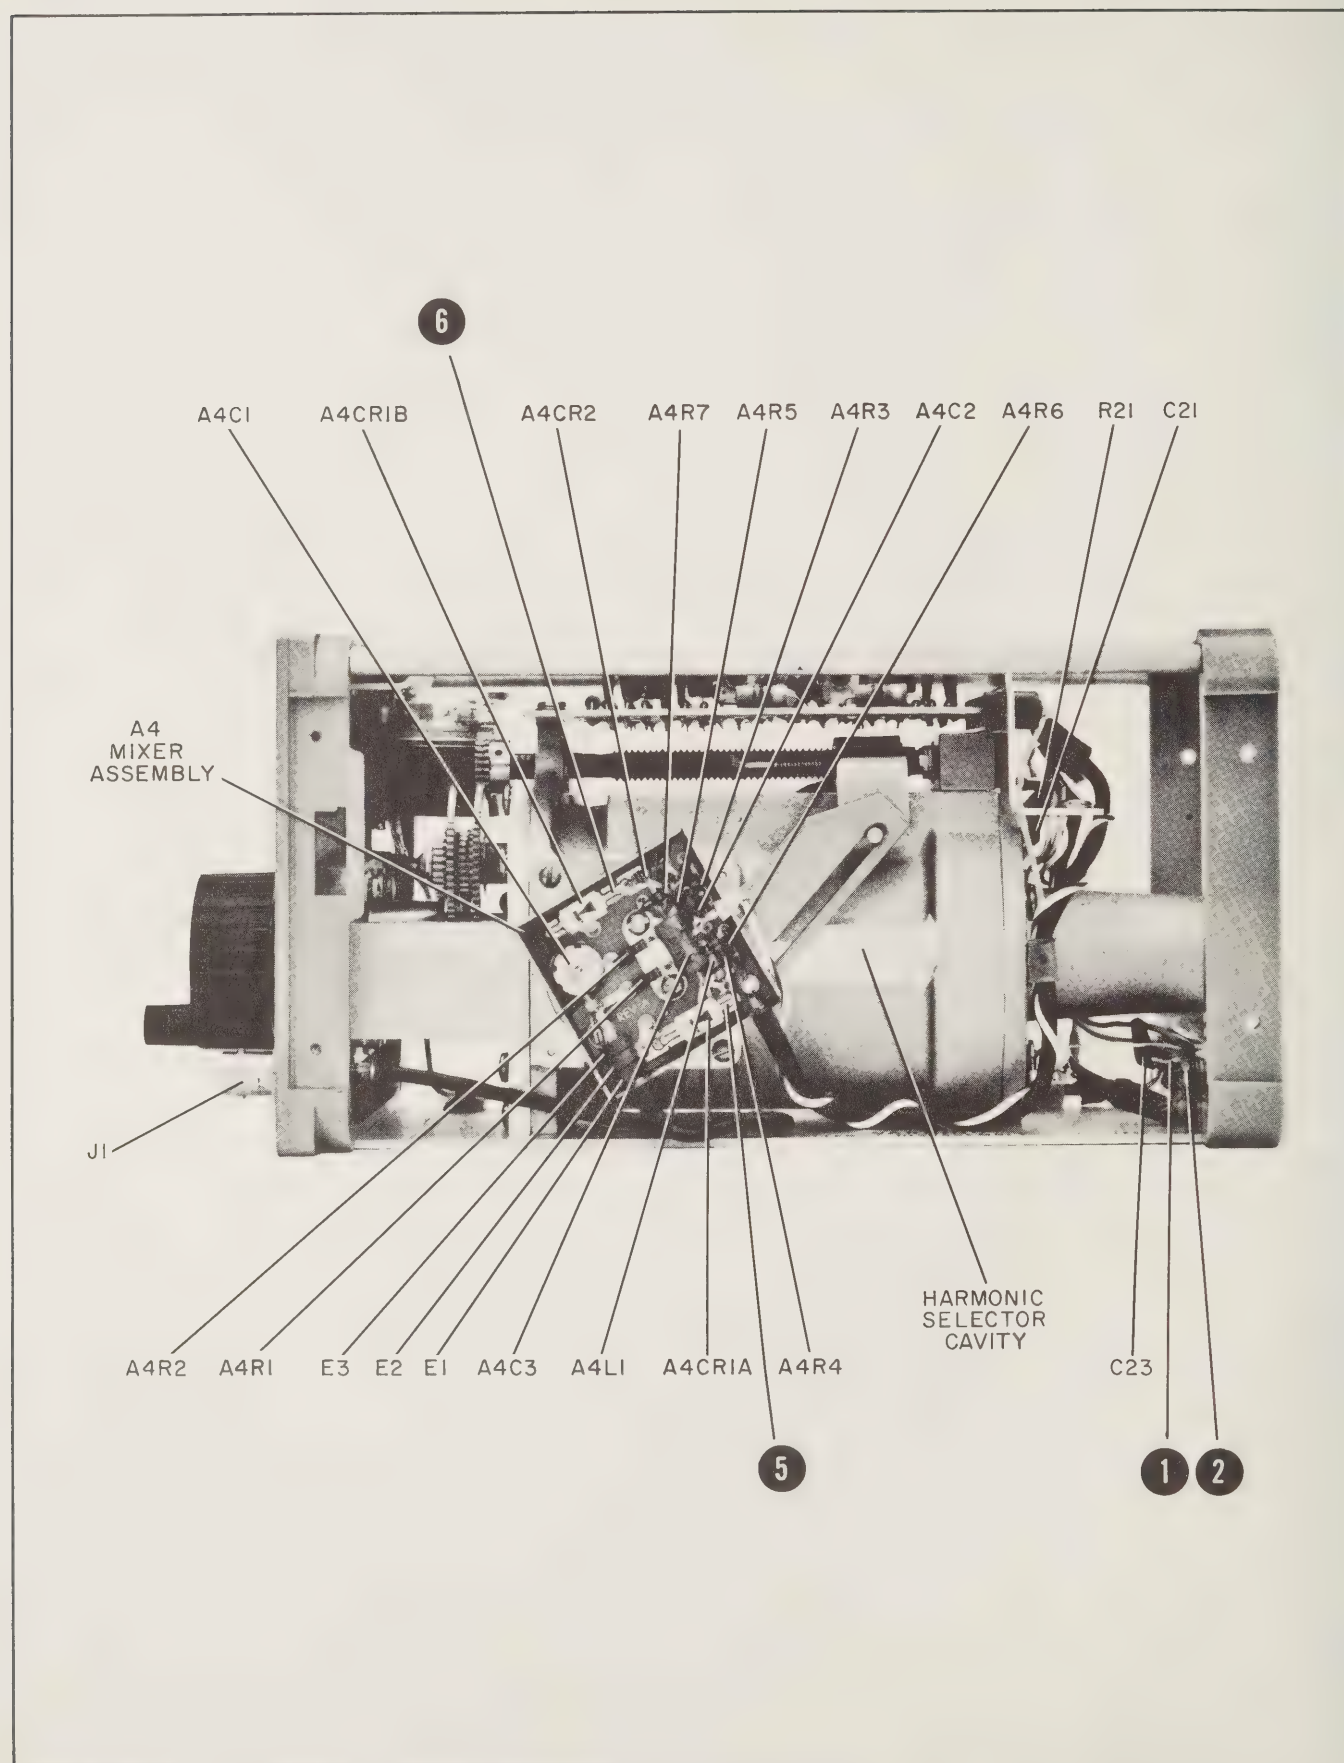


Figure 5-3. Right Side View

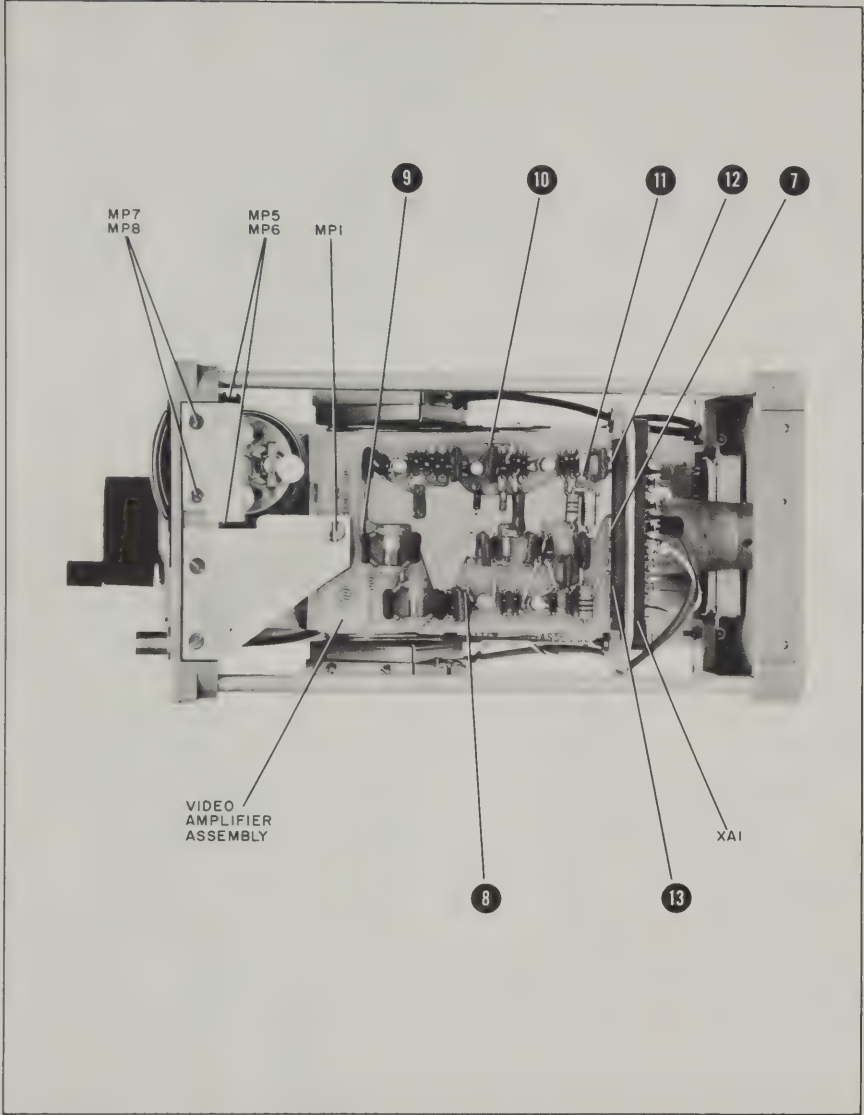


Figure 5-4. Top View - Test Points

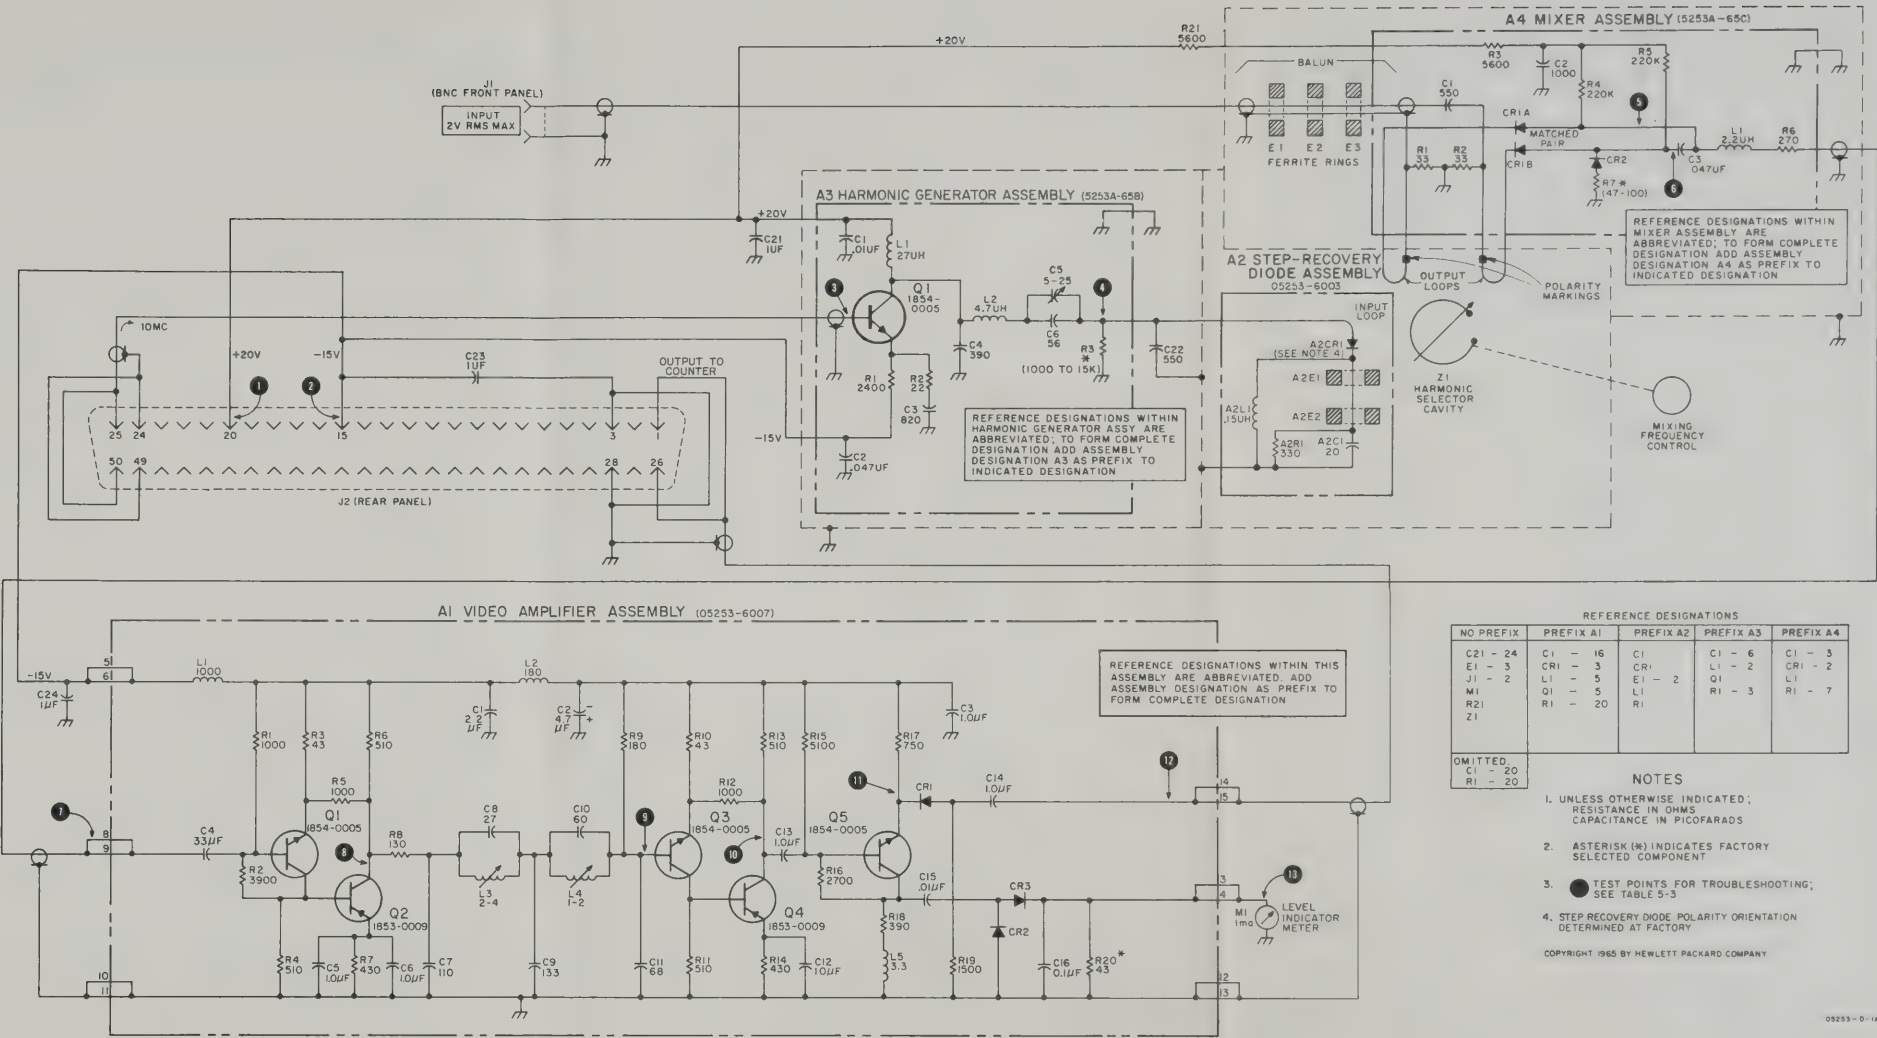


Figure 5-5. Schematic Diagram

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alpha-numerical order of their reference designators and indicates the description and hp stock number of each part, together with any applicable notes. Table 6-2 lists parts in alpha-numerical order of their hp stock number and provides the following information on each part:

- a. Description of the part (see list of abbreviations below).
- b. Typical manufacturer of the part in a five-digit code; see list of manufacturers in Table 6-3.
- c. Manufacturer's part number.
- d. Total quantity used in the instrument (TQ column).

6-3. Miscellaneous parts are listed at the end of Table 6-1.

6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Field Office (see lists at rear of this manual for addresses). Identify parts by their Hewlett-Packard stock numbers.

6-6. To obtain a part that is not listed, include:


- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.

REFERENCE DESIGNATORS

A = assembly	E = misc electronic part	MP = mechanical part	TB = terminal board
B = motor	F = fuse	P = plug	TP = test point
C = capacitor	FL = filter	Q = transistor	V = vacuum tube, neon bulb, photocell, etc.
CP = coupling	J = jack	R = resistor	W = cable
CR = diode	K = relay	RT = thermistor	X = socket
DL = delay line	L = inductor	S = switch	Y = crystal
DS = device signaling (lamp)	M = meter	T = transformer	

ABBREVIATIONS

A = amperes	GE = germanium	N/C = normally closed	RMO = rack mount only
A.F.C = automatic frequency control	GL = glass	NE = neon	RMS = root-mean-square
AMPL = amplifier	GRD = ground(ed)	NI PL = nickel plate	
		N/O = normally open	S-B = slow-blow
B. F. O. = beat frequency oscillator	H = henries	NPO = negative positive zero (zero temperature coefficient)	SCR = screw
BE CU = beryllium copper	HEX = hexagonal	NRFR = not recommended for field replacement	SE = selenium
BH = binder head	HG = mercury	NSR = not separately replaceable	SECT = section(s)
BP = bandpass	HR = hour(s)		SEMICON = semiconductor
BRS = brass			SI = silicon
BWO = backward wave oscillator	IF = intermediate freq		SIL = silver
	IMPG = impregnated		SL = slide
CCW = counter-clockwise	INCD = incandescent		SPL = special
CER = ceramic	INCL = include(s)		SST = stainless steel
CMO = cabinet mount only	INS = insulation(ed)		SR = split ring
COEF = coefficient	INT = internal		STL = steel
COM = common			
COMP = composition	K = kilo = 1000		TA = tantalum
CONN = connector			TD = time delay
CP = cadmium plate	LIN = linear taper		TGL = toggle
CRT = cathode-ray tube	LK WASH = lock washer		TI = titanium
CW = clockwise	LOG = logarithmic taper		TOL = tolerance
	LPF = low pass filter		TRIM = trimmer
DEPC = deposited carbon			TWT = traveling wave tube
DR = drive			
	M = milli = 10^{-3}		U = micro = 10^{-6}
ELECT = electrolytic	MEG = meg = 10^6		
ENCAP = encapsulated	METFLM = metal film		VAR = variable
EXT = external	MFR = manufacturer		VDCW = dc working volts
	MINAT = miniature		
F = farads	MOM = momentary		W/ = with
FH = flat head	MTG = mounting		W = watts
FIL H = fillister head	MY = "mylar"		WW = wirewound
FXD = fixed			W/O = without
	N = nano (10^{-9})		
		P = peak	
		PC = printed circuit	
		PF = picofarads = 10^{-12} farads	
		PH BRZ = phosphor bronze	
		PHL = Phillips	
		PIV = peak inverse voltage	
		P/O = part of	
		POLY = polystyrene	
		PORC = porcelain	
		POS = position(s)	
		POT = potentiometer	
		PP = peak-to-peak	
		PT = point	
		RECT = rectifier	
		RF = radio frequency	
		RH = round head	

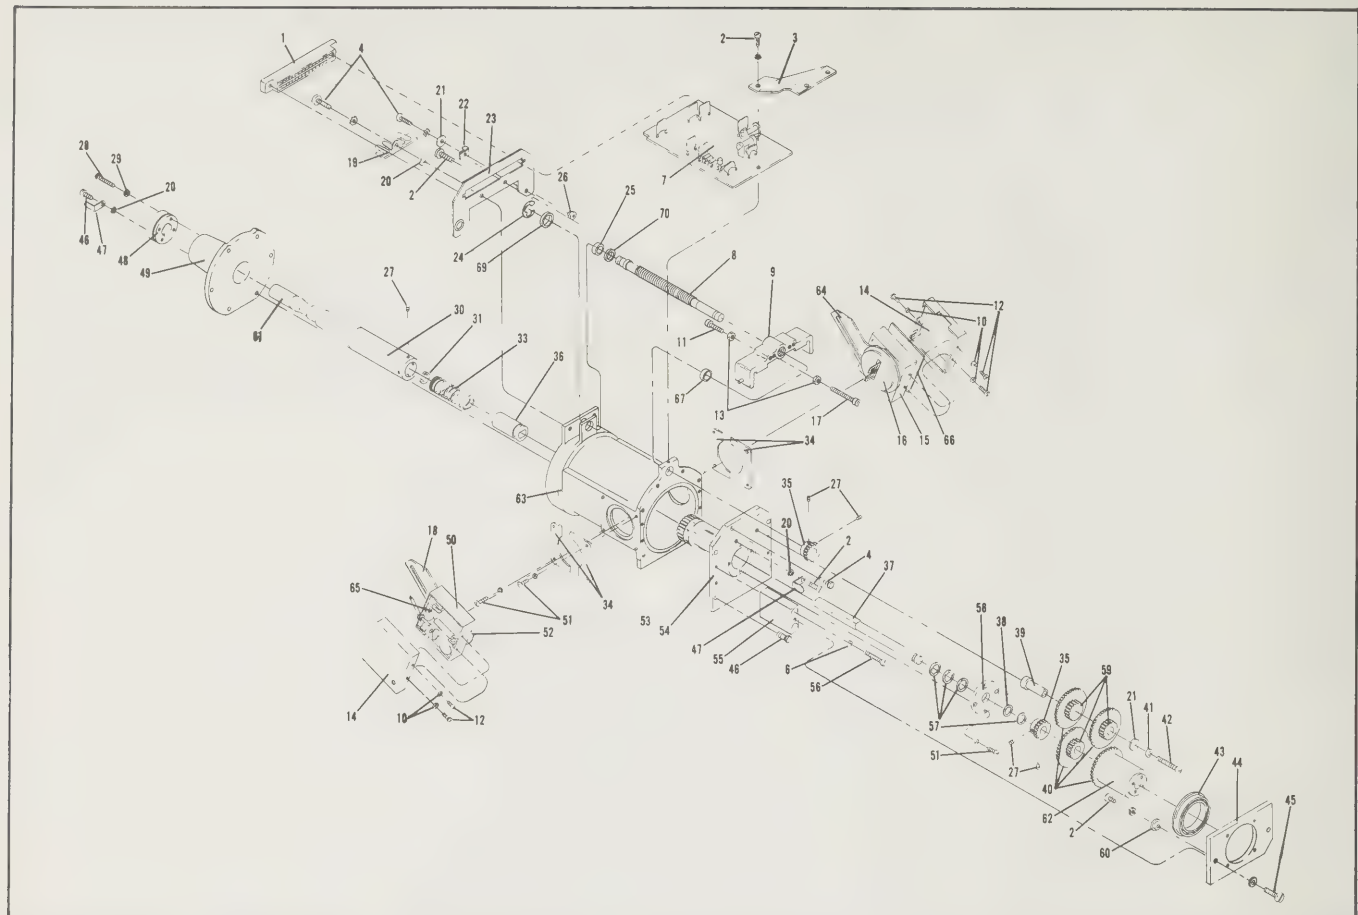

REF.	STOCK NO.	DESCRIPTION	QTY.	REF.	STOCK NO.	DESCRIPTION	QTY.	REF.	STOCK NO.	DESCRIPTION	QTY.
1	1251-0135	Connector, Printed Crt. 15	1	21	3050-0066	Washer Brass .375 OD .147 ID	2	42	2360-0013	Screw RH SS 6-32 x 1	1
2	2390-0007	Screw BH SS 6-32 x .312 with Lock	7	22	1400-0053	Clamp Cable for .188 Dia. Cable	1	43	1410-0021	Bearing Ball 1.5 OD 1.063 Bore	1
3	05253-0006	Bracket, Panel	1	23	5253A-12D	Bracket, Connector	1	44	5253A-17D	Holder	1
4	2390-0009	Screw BH SS 6-32 x .375 with Lock	4	24	0510-0083	Ring Retain Ext .025 Thk	1	45	2550-0009	Screw Mach BH SS 8-32 x .5 with Lock	2
5	2380-0003	Not Assigned		25	1410-0724	Bushing .252 ID	1	46	2390-0001	Screw BH SS 6-32 x .5	12
6	2190-0046	Washer Lock Split No. 6.141 ID	4	26	0510-0001	Fastener Steel .281 Dia. .063 Thk	1	47	0360-0042	Solder Lug - Brs .144 Mtg Hole 90 Deg Bend	2
7	05253-6007	Ass'y, Vidio Amplifier	1	27	3030-0022	Screw-Set Stl 6-32 x 1/8 HD LSS Hex Drive	8	48	05253-2002	Collar, Rear	1
8	525C-37A	Shaft, Loop Drive	1	28	2200-0009	Screw Mach RH SS 4-40 .5 LG	4	49	05253-2011	Flange, Cavity	1
9	5253A-12A	Yoke, Loop Drive	1	29	2190-0004	Washer Lock Internal No. 4	4	50	5253A-55B	Shield	1
10	2190-0014	Washer Lock Internal No. 2	6	30	05253-2004	Probe	1	51	2200-0004	Screw Mach RH SS 4-40 with Lock .250 LG	8
11	3030-0003	Screw Cap 6-32 x .375	2	31		Collar, Spring P/O MP68		52	05253-6004	Generator Bushing Ass'y	1
12	0520-0025	Screw Mach RH 2-56 .125 LG	6	32		Not Assigned		53	05253-2015	Cavity	1
13	2500-0001	Nuts - Hex BRS 6-32 x 1/4 x 3/32 In.	4	33		Spring Comp 1.5 LG .484 OD P/O MP68		54	05253-6001	Ass'y, Probe Positioning	1
14	5253A-41B	Cover	2	34	5253A-12B	Retainer	4	55	5253A-47B	Support	2
15	5253A-55A	Shield	1	35	525C-24B	Gear, Drive	2	56	2380-0004	Screw Fil H SS 6-32 x .750	4
16	5253A-17C	Bushing	1	36		P/O MP68		57	3050-0028	Washer Brass .4375 OD .25 ID	4
17	3030-0078	Screw Cap Hex Dr 6-32 x 1.125	2	37	5253A-37A	Shaft	1	58	05253-2009	Bushing, Probe Support	1
18	525C-108- AL	Left Cam	1	38	3050-0017	Washer Phos Br .375 OD .26 ID	1	59	525C-24C	Gear, Idler	3
19	0360-0018	Board-Terminal 4 Ins. 1 GRD Term A1A1GA1A1	1	39	5253A-37B	Shaft	1	60	565A-17A	Retainer, Bearing	4
20	2190-0008	Washer Lock External No. 6	3	40	5253A-24A	Gear	4	61	05253-6009	Support Cap P/O MP68	1
				41	2190-0006	Washer Lock Split Ring No. 6	1	62	5253A-40A	Hub	1
								63	1480-0061	Pin Cross .06 ID .312 LG	4
								64	525C-108- AR	Right Cam	1
								65	5253A-65B	Board Ass'y, Circuit	1
								66	5253A-65C	Board Ass'y, Circuit	1
								67	1410-0088	Bushing .252 ID	1
								68	05253-6005	Probe Ass'y	1
								69	2190-0390	Washer Nylon .28 ID .562 OD	1
								70	3050-0180	Washer .27 ID .375 OD	1

Figure 6-1. Mechanical Parts Location - 5253B

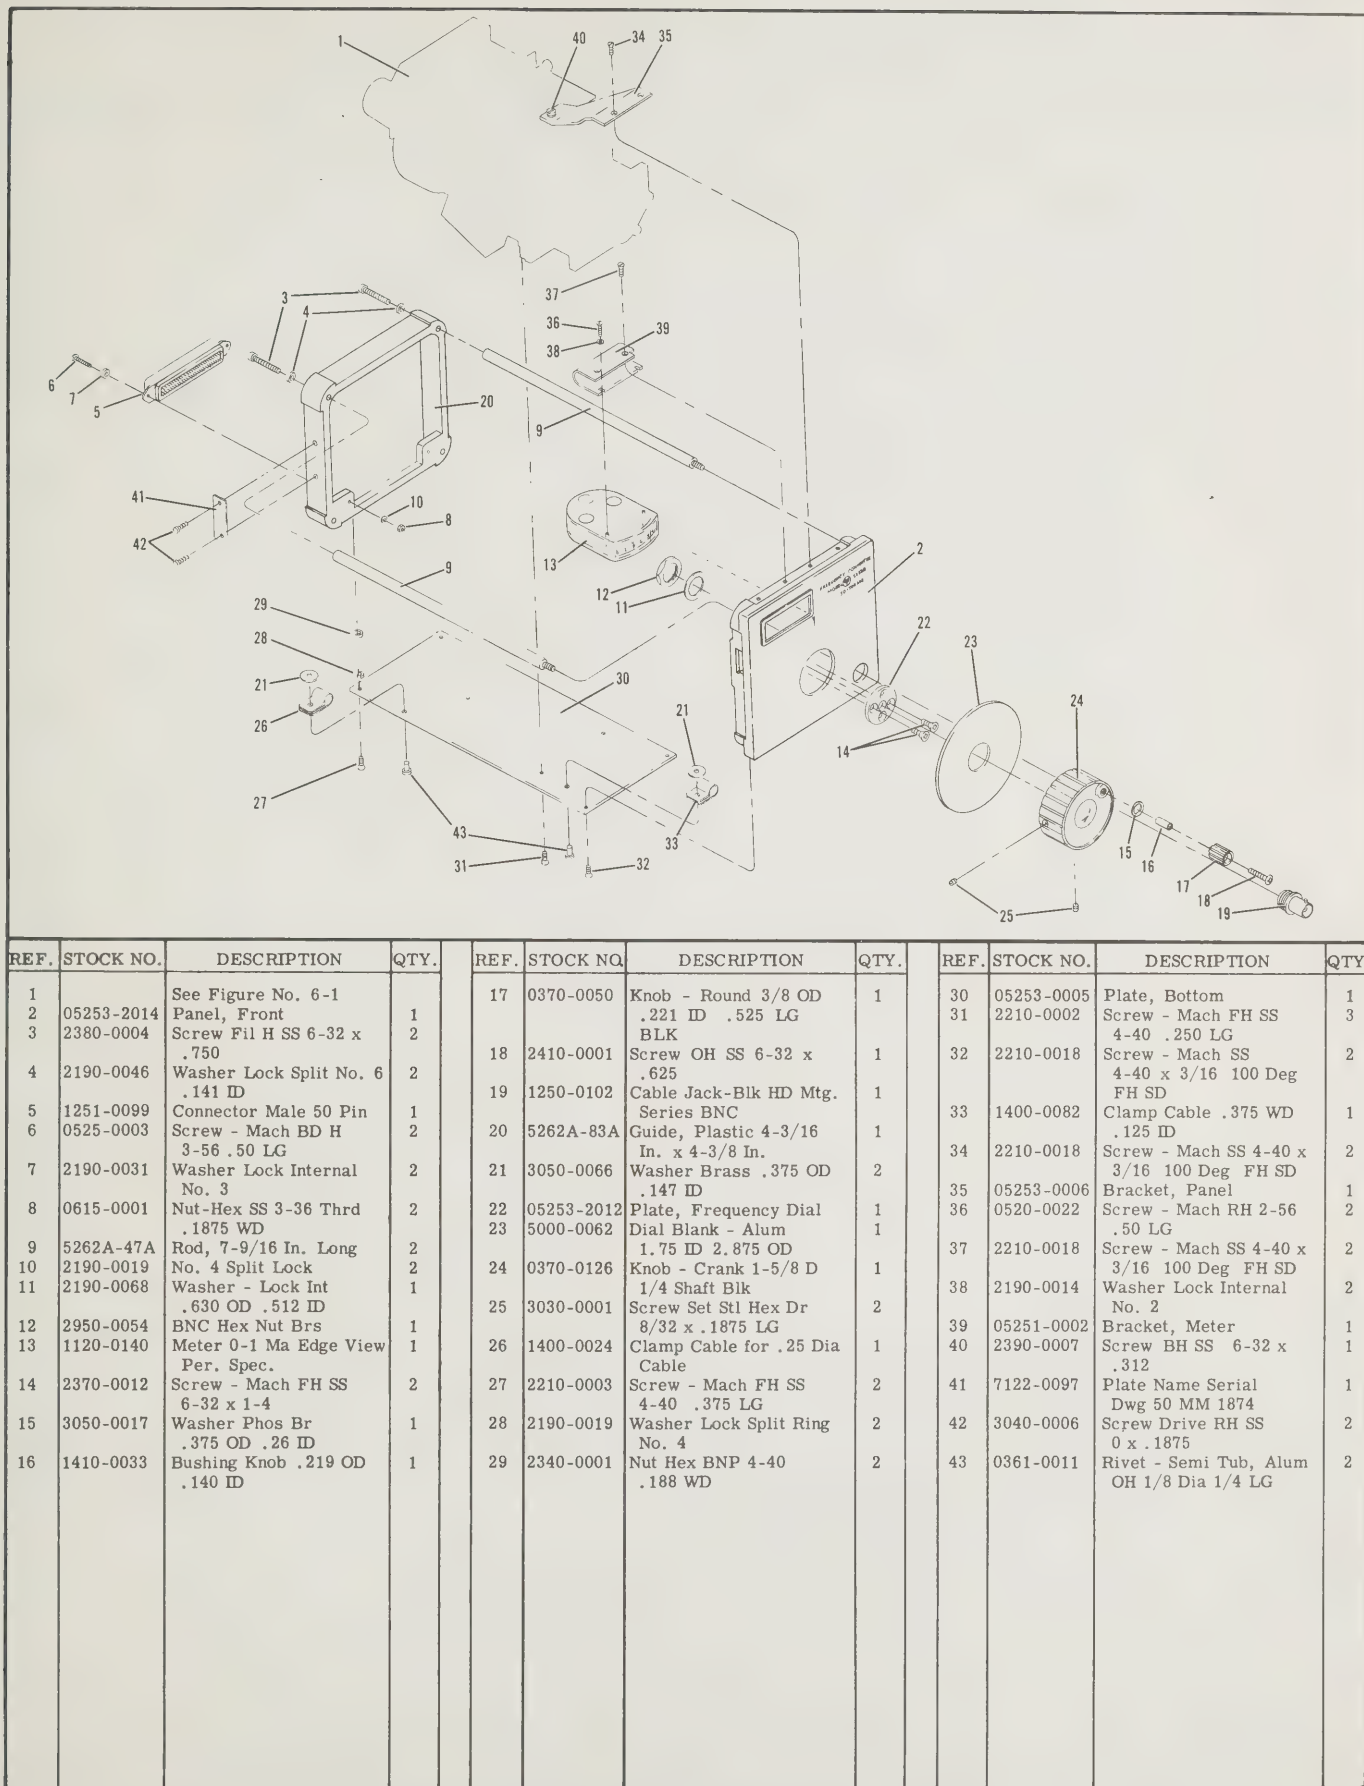


Figure 6-2. Mechanical Parts Location - 5253B

Table 6-1. Reference Designation Index

Reference Designation	Stock No.	Description #	Note
A1	05253-6007 05253-2007	ASSY:AMPLIFIER BOARD:BLANK P.C.	
A1C1	0160-0128	C:FXD CER 2.2UF 20% 25VDCW	
A1C2	0180-0100	C:FXD ELECT TA 4.7UF 10% 35VDCW	
A1C3	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C4	0160-0137	C:FXD CER 0.33UF 20% 25VDCW	
A1C5	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C6	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C7	0140-0194	C:FXD MICA 110 PF 5% 300 VDCW	
A1C8	0160-0178	C:FXD MICA 27PF 5% 300VDCW	
A1C9	0160-0332	C:FXD MICA 133PF 1%	
A1C10	0140-0214	C:FXD MICA 60PF 5% 300VDCW	
A1C11	0140-0192	C:FXD MICA 68PF 5% 300VDCW	
A1C12	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C13	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C14	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C15	0160-0161	C:FXD MY 0.01 UF 10% 200VDCW	
A1C16	0150-0121	C:FXD CER 0.1UF +80%-20% 50VDCW	
A1CR1	1910-0022	SEMICON DEVICE:DIODE GE 100MA 6PIV 3.5NS	
A1CR2	1910-0022	SEMICON DEVICE:DIODE GE 100MA 6PIV 3.5NS	
A1CR3	1910-0022	SEMICON DEVICE:DIODE GE 100MA 6PIV 3.5NS	
A1L1	9140-0137	COIL:FXD RF 1000UH	
A1L2	9140-0138	COIL:FXD RF 180UH 5%	
A1L3	9140-0126	COIL:VAR 1.76-4.02	
A1L4	9140-0125	COIL:VAR 0.9-1.9 UH	
A1L5	9140-0143	COIL:FXD RF 3.3 UH	
A1Q1	1854-0005	TRANSISTOR:2N708 NPN SILICON	
A1Q2	1853-0009	TRANSISTOR:SILICON PNP	
A1Q3	1854-0005	TRANSISTOR:2N708 NPN SILICON	
A1Q4	1853-0009	TRANSISTOR:SILICON PNP	
A1Q5	1854-0005	TRANSISTOR:2N708 NPN SILICON	
A1R1	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R2	0683-3925	R:FXD COMP 3900 OHM 5% 1/4W	
A1R3	0683-4305	R:FXD COMP 43 OHM 5% .25W	
A1R4	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R5	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R6	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R7	0683-4315	R:FXD COMP 430 OHM 5% 1/4W	
A1R8	0683-1315	R:FXD COMP 130 OHM 5% 1/4W	
A1R9	0683-1815	R:FXD COMP 180 OHM 5% 1/4W	
A1R10	0683-4305	R:FXD COMP 43 OHM 5% .25W	
A1R11	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R12	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R13	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R14	0683-4315	R:FXD COMP 430 OHM 5% 1/4W	
A1R15	0683-5125	R:FXD COMP 5100 OHM 5% 1/4W	
A1R16	0683-2725	R:FXD COMP 2700 OHM 5% 1/4W	
A1R17	0683-7515	R:FXD COMP 750 OHM 5% 1/4W	

See list of abbreviations in introduction to this section

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
A1R18 A1R19 A1R20	0683-3915 0683-1525 0683-4305	R:FXD COMP 390 OHM 5% 1/4W R:FXD COMP 1500 OHM 5% 1/4W R:FXD COMP 43 OHM 5% .25W FACTORY SELECTED COMP: TYPICAL VALUE GIVEN	
A2	05253-6003	ASSY: STEP RECOVERY DIODE	
A2C1 A2CR1	0150-0061	C:FXD CER 20 PF 100 VDCW SPECIALLY SELECTED PART NOT RECOMMENDED FOR FIELD REPLACEMENT	
A2E1 A2E2	9170-0029 9170-0029	CORE: FERRITE BEAD CORE: FERRITE BEAD	
A2L1	9140-0170	COIL: FXD .15 UH 20% 350 MA	
A2R1	0683-3315	R:FXD COMP 330 OHM 5% 1/4W FACTORY SELECTED PART: TYPICAL VALUE GIVEN	
A3	5253A-65B	ASSY: HARMONIC GENERATOR	
A3C1 A3C2 A3C3 A3C4 A3C5	0150-0093 0170-0094 0140-0151 0140-0200 0130-0016	C:FXD CER 0.01UF +80-20% 100VDCW C:FXD MY 0.047UF 20% 50VDCW C:FXD MICA 820PF 2% 300VDCW C:FXD MICA 390PF 5% 300VDCW C:VAR CER 5-25 PF NPO	
A3C6	0140-0191	C:FXD MICA 56 PF 5% 300 VDCW	
A3L1 A3L2 A3Q1 A3R1 A3R2 A3R3	9140-0107 9140-0025 1854-0005 0686-2425 0683-2205 0683-5625	COIL: FXD RF 27 UH COIL: FXD RF 4.7 UH TRANSISTOR: SILICON NPN 2N708 R:FXD COMP 2400 OHM 5% 1/2W R:FXD COMP 22 OHM 5% 1/4W R:FXD COMP 5600 OHM 5% 1/4W FACTORY SELECTED PART: TYPICAL VALUE GIVEN	
A4	5253A-65C	ASSY: MIXER	
A4C1 A4C2 A4C3	0140-0069 0150-0050 0170-0040	C:FXD MICA 550 PF 10% 500 VDCW C:FXD CER 1000PF 600 VDCW C:FXD MY .047 UF 10% 200VDCW	
A4CR1 A4CR2	1900-0011 1910-0016	SEMICON DEVICE: DIODE 1N4168M MATCH PAIR DIODE, GERMANIUM: 100MA ATO.85V 60PIV	
A4L1	9140-0142	COIL: FXD RF 2.2 UH	
A4R1 A4R2 A4R3 A4R4 A4R5	0683-3305 0683-3305 0684-5621 0683-2245 0683-2245	R:FXD COMP 33 OHM 5% 1/4W R:FXD COMP 33 OHM 5% 1/4W R:FXD COMP 5.6K OHM 10% 1/4W R:FXD COMP 220K OHM 5% 1/4W R:FXD COMP 220K OHM 5% 1/4W	
A4R6 A4R7	0683-2715 0683-6205	R:FXD COMP 270 OHM 5% 1/4W R:FXD COMP 62 OHM 5% 1/4W FACTORY SELECTED PART: TYPICAL VALUE GIVEN	
C21 C22	0160-0127 0140-0069	C:FXD CER 1UF 20% 25VDCW C:FXD MICA 550 PF 10% 500 VDCW NOT RECOMMENDED FOR FIELD REPLACEMENT	

See list of abbreviations in introduction to this section

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
C23	0160-0127	C:FXD CER 1UF 20% 25VDCW	
C24	0160-0127	C:FXD CER 1UF 20% 25VDCW	
E1	9170-0059	MAGNETIC CORE:TOROID FERRITE	
E2	9170-0059	MAGNETIC CORE:TOROID FERRITE	
E3	9170-0059	MAGNETIC CORE:TOROID FERRITE	
J1	1250-0102	CONNECTOR:BNC	
J2	1251-0099	CONNECTOR:50 PIN MINAT	
M1	1120-0140	METER:0-1 MILLIAMPERE EDGE-VIEW	
R21	0684-5621	R:FXD COMP 5.6K OHM 10% 1/4W	
XA1	1251-0135	CONNECTOR:PRINTED CIRCUIT 15 CONTACTS	
		MISCELLANEOUS	
	05251-0002	BRACKET:METER	
	05253-0006	BRACKET:PANEL	
	05253-2014	PANEL:FRONT	
	05253-0005	PLATE:BOTTOM	
	5040-0185	BEZEL:METER	

See list of abbreviations in introduction to this section

Table 6-2. Replaceable Parts

Stock No.	Description #	Mfr.	Mfr. Part No.	TQ
0130-0016	C:VAR CER 5-25 PF NPO	28480	0130-0016	1
0140-0069	C:FXD MICA 550 PF 10% 500 VDCW	00853	TYPE M 100 E10	2
0140-0151	C:FXD MICA 820PF 2% 300VDCW	04062	RDM15F821G3S	1
0140-0191	C:FXD MICA 56 PF 5% 300 VDCW	04062	RDM15E560J3C	1
0140-0192	C:FXD MICA 68PF 5% 300VDCW	04062	RDM15E680J3C	1
0140-0194	C:FXD MICA 110 PF 5% 300 VDCW	04062	RDM15F111J3C	1
0140-0200	C:FXD MICA 390PF 5% 300VDCW	04062	RDM15F391J3C	1
0140-0214	C:FXD MICA 60PF 5% 300VDCW	04062	RDM15E600J3C	1
0150-0050	C:FXD CER 1000PF 600 VDCW	84411	TYPE E	1
0150-0061	C:FXD CER 20 PF 100 VDCW	56289	53C47	1
0150-0093	C:FXD CER 0.01UF +80-20% 100VDCW	91418	TA	1
0150-0121	C:FXD CER 0.1UF +80%-20% 50VDCW	56289	5C50A	1
0160-0127	C:FXD CER 1UF 20% 25VDCW	56289	5C13	6
0160-0128	C:FXD CER 2.2UF 20% 25VDCW	56289	5C15	1
0160-0137	C:FXD CER 0.33UF 20% 25VDCW	56289	5C10	1
0160-0161	C:FXD MY 0.01 UF 10% 200VDCW	28480	0160-0161	1
0160-0178	C:FXD MICA 27PF 5% 300VDCW	04062	RDM15E270J3S	1
0160-0332	C:FXD MICA 133PF 1%	28480	0160-0332	1
0170-0040	C:FXD MY .047 UF 10% 200VDCW	28480	0170-0040	1
0170-0094	C:FXD MY 0.047UF 20% 50VDCW	84411	TYPE 602	1
0180-0100	C:FXD ELECT TA 4.7UF 10% 35VDCW	56289	150D475X903582	1
0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	01121	CB 1025	3
0683-1315	R:FXD COMP 130 OHM 5% 1/4W	01121	CB 1315	1
0683-1525	R:FXD COMP 1500 OHM 5% 1/4W	01121	CB 1525	1
0683-1815	R:FXD COMP 180 OHM 5% 1/4W	01121	CB 1815	1
0683-2205	R:FXD COMP 22 OHM 5% 1/4W	01121	CB 2205	1
0683-2245	R:FXD COMP 220K OHM 5% 1/4W	01121	CB 2245	2
0683-2715	R:FXD COMP 270 OHM 5% 1/4W	01121	CB 2715	1
0683-2725	R:FXD COMP 2700 OHM 5% 1/4W	01121	CB-2725	1
0683-3305	R:FXD COMP 33 OHM 5% 1/4W	01121	CB 3305	2
0683-3315	R:FXD COMP 330 OHM 5% 1/4W	01121	CB 3315	1
0683-3915	R:FXD COMP 390 OHM 5% 1/4W	01121	CB 3915	2
0683-3925	R:FXD COMP 3900 OHM 5% 1/4W	01121	CB 3925	1
0683-4305	R:FXD COMP 43 OHM 5% .25W	01121	CB 4305	3
0683-4315	R:FXD COMP 430 OHM 5% 1/4W	01121	CB 4315	2
0683-5115	R:FXD COMP 510 OHM 5% 1/4W	01121	CB 5115	4
0683-5125	R:FXD COMP 5100 OHM 5% 1/4W	01121	CB 5125	1
0683-5625	R:FXD COMP 5600 OHM 5% 1/4W	01121	CB 5625	1
0683-6205	R:FXD COMP 62 OHM 5% 1/4W	01121	CB 6205	1
0683-7515	R:FXD COMP 750 OHM 5% 1/4W	01121	CB 7515	1

See list of abbreviations in introduction to this section

Table 6-2. Replaceable Parts (Cont'd)

Stock No.	Description #	Mfr.	Mfr. Part No.	TQ
0684-5621	R:FXD COMP 5.6K OHM 10% 1/4W	01121	CB 5621	2
0686-2425	R:FXD COMP 2400 OHM 5% 1/2W	01121	EB 2425	1
1120-0140	METER:0-1 MILLIAMPERE EDGE-VIEW	28480	1120-0140	1
1250-0102	CONNECTOR:BNC	91737	7011	1
1251-0099	CONNECTOR:50 PIN MINAT	28480	1251-0099	1
1251-0135	CONNECTOR:PRINTED CIRCUIT 15 CONTACTS	95354	SD-615UR	1
1853-0009	TRANSISTOR:SILICON PNP	28480	1853-0009	2
1854-0005	TRANSISTOR:2N708 NPN SILICON	07263	2N708	4
1900-0011	SEMICON DEVICE:DIODE 1N4168M MATCH PAIR	93332	1N4168M	1
1910-0016	DIODE:GERMANIUM:100MA ATO.85V 60PIV	28480	1901-0040	1
1910-0022	SEMICON DEVICE:DIODE GE 100MA 6PIV 3.5NS	28480	1910-0016	3
9140-0025	COIL:FXD RF 4.7 UH	28480	1910-0022	1
9140-0107	COIL:FXD RF 27 UH	99800	28480 9140-0025	1
		28480	1840-38	
		99800	9140 0111	
		99800	2500-14	
9140-0125	COIL:VAR 0.9-1.9 UH	28480	9140-0125	1
9140-0126	COIL:VAR 1.76-4.02	28480	9140-0126	1
9140-0137	COIL:FXD RF 1000UH	28480	9140-0137	1
9140-0138	COIL:FXD RF 180UH 5%	99800	9140-0138	1
9140-0142	COIL:FXD RF 2.2 UH	28480	9140-0142	1
9140-0143	COIL:FXD RF 3.3 UH	28480	9140-0143	1
9140-0170	COIL-FXD .15 UH 20% 350 MA	78526	11503M	1
9170-0029	CORE: FERRITE BEAD	02114	56-590-65/4A	2
9170-0059	MAGNETIC CORE:TOROID FERRITE	02114	396T125-303	3
05253-2007	BOARD:BLANK P.C. AMPLIFIER	28480	05253-2007	1
05253-6003	ASSY:STEP RECOVERY DIODE	28480	05253-6003	1
05253-6007	ASSY:AMPLIFIER	28480	05253-6007	1
5253A-65B	ASSY:HARMONIC GENERATOR	28480	5253A-65B	1
5253A-65C	ASSY:MIXER	28480	5253A-65C	1
05251-0002	BRACKET:METER	28480	05251-0002	1
05253-0005	PLATE:BOTTOM	28480	05253-0005	1
05253-0006	BRACKET:PANEL	28480	05253-0006	1
05253-2014	PANEL:FRONT	28480	05253-2014	1

See list of abbreviations in introduction to this section

Table 6-3. Manufacturer's Code

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 handbooks.

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
00000	U.S.A. Common	Any supplier of U.S.	07115	Corning Glass Works	Bradford, Pa.	24655	General Radio Co.	West Concord, Mass.	73293	Hughes Products Division of	Newport Beach, Calif.
00136	McCoy Electronics	Mount Holly Springs, Pa.		Electronic Components Dept.		26365	Gries Reproducer Corp.	New Rochelle, N.Y.		Hughes Aircraft Co.	
00213	Sage Electronics Corp.	Rochester, N. Y.	07126	Digitran Co.	Pasadena, Calif.	26462	Grobet File Co. of America, Inc.	Carlstadt, N.J.	73445	Amperex Electronic Co., Div. of North	Hicksville, N.Y.
00334	Humidail Co.	Colton, Calif.	07137	Transistor Electronics Corp.	Minneapolis, Minn.	26992	Hamilton Watch Co.	Lancaster, Pa.		American Phillips Co., Inc.	
00335	Westrex Corp.	New York, N.Y.	07138	Westinghouse Electric Corp.	Elmira, N.Y.	28480	Hewlett-Packard Co.	Palo Alto, Calif.	73490	Beckman Helipot Corp.	So. Pasadena, Calif.
00373	Garlock Packing Co.,			Electronic Tube Div.		33173	G.E. Receiving Tube Dept.	Owensboro, Ky.	73506	Bradley Semiconductor Corp.	Hamden, Conn.
	Electronic Products Div.	Camden, N.J.	07149	Filmohm Corp.	New York, N.Y.	35434	Lectrohn Inc.	Chicago, Ill.	73559	Carling Electric, Inc.	Hartford, Conn.
00656	Aerovox Corp.	New Bedford, Mass.	07233	Cinch-Graphik Co.	City of Industry, Calif.	36196	Stanwick Corp.	Hawkesbury, Ontario, Canada	73682	George K. Garrett Co., Inc.	Philadelphia, Pa.
00779	Amp, Inc.	Harrisburg, Pa.	07261	Avnet Corp.	Los Angeles, Calif.	37942	P.R. Mallory & Co., Inc.	Indianapolis, Ind.	73734	Federal Screw Prod. Co.	Chicago, Ill.
00781	Aircraft Radio Corp.	Bounton, N.J.	07263	Fairchild Semiconductor Corp.	Mountain View, Calif.	39543	Mechanical Industries Prod. Co.	Akron, Ohio	73743	Fischer Special Mfg. Co.	Cincinnati, Ohio
00815	Northern Engineering Laboratories, Inc.	Burlington, Wis.				40920	Miniature Precision Bearings, Inc.	Keene, N.H.	73793	The General Industries Co.	Ellyria, Ohio
			07322	Minnesota Rubber Co.	Minneapolis, Minn.	42190	Muter Co.	Chicago, Ill.	73846	Goshen Stamping & Tool Co.	Goshen, Ind.
00853	Sangamo Electric Company,	Marion, Ill.	07387	The Birtcher Corp.	Los Angeles, Calif.	43990	C.A. Norgren Co.	Englewood, Colo.	73899	JFD Electronics Corp.	Brooklyn, N.Y.
	Ordill Division (Capacitors)		07700	Technical Wire Products	Springfield, N.J.	44655	Ohmte Mfg. Co.	Skokie, Ill.	73905	Jennings Radio Mfg. Co.	San Jose, Calif.
00866	Goe Engineering Co.	Los Angeles, Calif.	07910	Continental Device Corp.	Hawthorne, Calif.	47904	Polaroid Corp.	Cambridge, Mass.	74276	Signalite Inc.	Neptune, N.J.
00891	Carl E. Holmes Corp.	Los Angeles, Calif.	07933	Rheem Semiconductor Corp.	Mountain View, Calif.	48620	Precision Thermometer and		74455	J.H. Winns and Sons	Winchester, Mass.
01121	Allen Bradley Co.	Milwaukee, Wis.	07966	Shockley Semi-Conductor Laboratories	Palo Alto, Calif.		Inst. Co.	Philadelphia, Pa.	74861	Industrial Condenser Corp.	Chicago, Ill.
01255	Litton Industries, Inc.	Beverly Hills, Calif.	07980	Bounton Radio Corp.	Bounton, N.J.	49956	Raytheon Company	Lexington, Mass.	74868	R.F. Products Division of Amphenol-	Danbury, Conn.
01281	TRW Semiconductors Inc.	Lawndale, Calif.	08145	U.S. Engineering Co.	Los Angeles, Calif.	52090	Rowan Controller Co.	Baltimore, Md.		Borg Electronics Corp.	
01295	Texas Instruments, Inc.		08289	Blinn, Delbert, Co.	Pomona, Calif.	63743	Ward Leonard Electric	Mt. Vernon, N.Y.	74970	E.F. Johnson Co.	Waseca, Minn.
	Transistor Products Div.	Dallas, Texas	08358	Burgess Battery Co.	Niagara Falls, Ontario, Canada	54294	Shallcross Mfg. Co.	Selma, N.C.	75042	International Resistance Co.	Philadelphia, Pa.
01349	The Alliance Mfg. Co.	Alliance, Ohio				55026	Simpson Electric Co.	Chicago, Ill.	75173	Jones, Howard B., Division	
01561	Chassi-Trak Corp.	Indianapolis, Ind.	08717	Sloan Company	Burbank, Calif.	55933	Sonotone Corp.	Elsford, N.J.		of Cinch Mfg. Corp.	Chicago, Ill.
01589	Pacific Relays, Inc.	Van Nuys, Calif.	08718	Cannon Electric Co., Phoenix Div.	Phoenix, Ariz.	55938	Sorenson & Co., Inc.	So. Norwalk, Conn.	75378	James Knights Co.	Sandwich, Ill.
01930	Amerock Corp.	Rockford, Ill.	08792	CBS Electronics Semiconductor Operations, Div. of C.B.S., Inc.	Lowell, Mass.	56137	Spaulding Fibre Co., Inc.	Tonawanda, N.Y.	75382	Kulka Electric Corporation	Mt. Vernon, N.Y.
01961	Pulse Engineering Co.	Santa Clara, Calif.	08894	Mel-Rain	Indianapolis, Ind.	56289	Sprague Electric Co.	North Adams, Mass.	75818	Lenz Electric Mfg. Co.	Chicago, Ill.
02114	Ferroxcube Corp. of America	Saugerties, N.Y.	09026	Babcock Relays, Inc.	Costa Mesa, Calif.	59446	Telex, Inc.	St. Paul, Minn.	75915	Littlefuse Inc.	Des Plaines, Ill.
02286	Colo Mfg. Co.	Palo Alto, Calif.	09134	Texas Capacitor Co.	Houston, Texas	59730	Thomas & Betts Co.	Elizabeth 1, N.J.	76005	Lord Mfg. Co.	Erie, Pa.
02660	Amphenol-Borg Electronics Corp.	Chicago, Ill.	09145	Atohm Electronics	Sun Valley, Calif.	60741	Tripplett Electrical Inc.	Bluffton, Ohio	76210	C.W. Marwedel	San Francisco, Calif.
02735	Radio Corp. of America, Semiconductor and Materials Div.	Somerville, N.J.	09250	Electro Assemblies, Inc.	Chicago, Ill.	61775	Union Switch and Signal, Div. of Westinghouse Air Brake Co.	Swissvale, Pa.	76433	Micamold Electronic Mfg. Corp.	Brooklyn, N.Y.
02771	Vocaline Co. of America, Inc.		09569	Mallory Battery Co. of Canada, Ltd.	Toronto, Ontario, Canada	62119	Universal Electric Co.	Owosso, Mich.	76487	James Millen Mfg. Co., Inc.	Malden, Mass.
02777	Hopkins Engineering Co.	San Fernando, Calif.	09664	The Bristol Co.	Waterbury, Conn.	63743	Ward-Leonard Electric Co.	Mt. Vernon, N.Y.	76493	J.W. Miller Co.	Los Angeles, Calif.
03058	G.E. Semiconductor Products Dept.	Syracuse, N.Y.	10214	General Transistor Western Corp.	Los Angeles, Calif.	64959	Western Electric Co., Inc.	New York, N.Y.	76530	Mondnock Mills	San Leandro, Calif.
03705	Apex Machine & Tool Co.	Dayton, Ohio	10411	Ti-Tal, Inc.	Berkeley, Calif.	65092	Weston Inst. Div. of Daystrom, Inc.	Newark, N.J.	76545	Mueller Electric Co.	Cleveland, Ohio
03797	Elidema Corp.	El Monte, Calif.	10466	Carborundum Co.	Niagara Falls, N.Y.	66295	Wittek Manufacturing Co.	Chicago 23, Ill.	76854	Oak Manufacturing Co.	Crystal Lake, Ill.
03877	Transitron Electronic Corp.	Wakefield, Mass.	11236	CTS of Berne, Inc.	Berne, Ind.	66346	Wallensack Optical Co.	Rochester, N.Y.	77068	Bendix Pacific Division of	
03888	Pyrofilm Resistor Co.	Morristown, N.J.	11237	Chicago Telephone of California, Inc.	So. Pasadena, Calif.	70276	Allen Mfg. Co.	Hartford, Conn.		Bendix Corp.	No. Hollywood, Calif.
03954	Air Marine Motors, Inc.	Los Angeles, Calif.				70309	Allied Control Co., Inc.	New York, N.Y.	77075	Pacific Metals Co.	San Francisco, Calif.
04009	Arrow, Hart and Hegeman Elect. Co.	Hartford, Conn.	11312	Microwave Electronics Corp.	Palo Alto, Calif.	70319	Allmetal Screw Prod. Co., Inc.	Garden City, N.Y.	77201	Phaoston Instrument and Electronic Co.	South Pasadena, Calif.
04013	Taurus Corp.	Lambertville, N.J.	11534	Duncan Electronic, Inc.	Santa Ana, Calif.				77250	Phoeil Mfg. Co.	Chicago, Ill.
04062	Elmenco Products Co.	New York, N.Y.	11711	General Instrument Corporation Semiconductor Division	Newark, N.J.	70485	Atlantic India Rubber Works, Inc.	Chicago, Ill.	77252	Philadelphia Steel and Wire Corp.	Philadelphia, Pa.
04222	Hi-Q Division of Aerovox	Myrtle Beach, S.C.	11717	Imperial Electronic, Inc.	Buena Park, Calif.	70563	Amperite Co., Inc.	New York, N.Y.	77342	Potter and Brumfield, Div. of American	
04298	Elgin National Watch Co., Electronics Division	Burbank, Calif.	11870	Melabs, Inc.	Palo Alto, Calif.	70903	Belden Mfg. Co.	Chicago, Ill.		Machine and Foundry	Princeton, Ind.
04354	Precision Paper Tube Co.	Chicago, Ill.	12136	Philadelphia Handle Co.	Camden, N.J.	70998	Bird Electronic Corp.	Cleveland, Ohio	7630	Radio Condenser Co.	Camden, N.J.
04404	Dymec Division of Hewlett-Packard Co.	Palo Alto, Calif.	12697	Claroat Mfg. Co.	Dover, N.H.	71002	Birnbach Radio Co.	New York, N.Y.	7638	Radio Receptor Co., Inc.	Brooklyn, N.Y.
04651	Sylvania Electric Prods., Inc.	Mountain View, Calif.	12859	Nippon Electric Co., Ltd.	Tokyo, Japan	71021	Boston Gear Works Div. of Murray Co. of Texas	Quincy, Mass.	7764	Resistance Products Co.	Harrisburg, Pa.
04713	Motorola, Inc., Semiconductor Prod. Div.	Phoenix, Arizona	12930	Delta Semiconductor Inc.	Newport Beach, Calif.	71218	Bud Radio Inc.	Cleveland, Ohio	77969	Rubbercraft Corp. of Calif.	Torrance, Calif.
04732	Filtcon Co., Inc., Western Div.	Culver City, Calif.	13103	Thermolloy	Dallas, Texas	71286	Camloc Fastener Corp.	Paramus, N.J.	78189	Shakeproof Division of Illinois	
04773	Automatic Electric Co.	Northlake, Ill.	13396	Telefunken (G.M.B.H.)	Hannover, Germany	71313	Allen D. Cardwell Electronic Prod. Corp.	Plainville, Conn.		Tool Works	Elgin, Ill.
04777	Automatic Electric Sales Corp.	Northlake, Ill.	13835	Midland Mfg. Co.	Kansas City, Kansas	71400	Bussmann Fuse Div. of McGraw-Edison Co.	St. Louis, Mo.	78283	Signal Indicator Corp.	New York, N.Y.
04796	Sequoia Wire & Cable Co.	Redwood City, Calif.	14099	Sem-Tech	Newbury Park, Calif.	71436	Chicago Condenser Corp.	Chicago, Ill.	78290	Struthers-Dunn Inc.	Pittman, N.J.
04811	Precision Coil Spring Co.	El Monte, Calif.	14193	Calif. Resistor Corp.	Santa Monica, Calif.	71450	CTS Corp.	Elkhart, Ind.	78452	Thompson-Bremer & Co.	Chicago, Ill.
04870	P. M. Motor Company	Chicago 44, Ill.	14298	American Components, Inc.	Conshohocken, Pa.	71468	Cannon Electric Co.	Los Angeles, Calif.	78471	Tilley Mfg. Co.	San Francisco, Calif.
05006	Pwentieth Century Plastics, Inc.	Los Angeles, Calif.	14655	Cornell Dubilier Elec. Corp.	So. Plainfield, N.J.	71471	Cinema Engineering Co.	Burbank, Calif.	78488	Stackpole Carbon Co.	St. Marys, Pa.
			14960	Williams Mfg. Co.	San Jose, Calif.	71482	C.P. Clare & Co.	Chicago, Ill.	78493	Standard Thomson Corp.	Waltham, Mass.
05277	Westinghouse Electric Corp., Semi-Conductor Dept.	Youngwood, Pa.	15203	Webster Electronics Co. Inc.	Brooklyn, N.Y.	71590	Centralab Div. of Globe Union Inc.	Milwaukee, Wis.	78553	Tinnerman Products, Inc.	Cleveland, Ohio
05347	Ultratronics, Inc.	San Mateo, Calif.	15291	Adjustable Bushing Co.	N. Hollywood, Calif.				78790	Transformer Engineers	Pasadena, Calif.
05593	Illumitronics Engineering Co.	Sunnyvale, Calif.	15772	Coil Spring Co.	Santa Clara, Calif.	71616	Commercial Plastics Co.	Chicago, Ill.	78947	Ucinite Co.	Newtonville, Mass.
05616	Cosmo Plastic (c/o Electrical Spec. Co.)	Cleveland, Ohio	15909	The Daven Co.	Livingston, N.J.	71700	The Cornish Wire Co.	New York, N.Y.	79142	Veeder Root, Inc.	Hartford, Conn.
05624	Barber Colman Co.	Rockford, Ill.	16037	Spruce Pine Mica Co.	Spruce Pine, N.C.	71744	Chicago Miniature Lamp Works	Chicago, Ill.	79251	Wenco Mfg. Co.	Chicago, Ill.
05728	Tiffen Optical Co.	Roslyn Heights, Long Island, N.Y.	16688	De Jur-Amsco Corporation	Long Island City 1, N.Y.	71753	A.O. Smith Corp., Crowley Div.	West Orange, N.J.	79727	Continental-Wirt Electronics Corp.	Philadelphia, Pa.
05729	Metropolitan Telecommunications Corp., Metro Cap. Division	Brooklyn, N.Y.	16758	Delco Radio Div. of G.M. Corp.	Kokomo, Ind.				79963	Zierick Mfg. Corp.	New Rochelle, N.Y.
05783	Stewart Engineering Co.	Santa Cruz, Calif.	17109	Thermometrics Inc.	Canoga Park, Calif.	71785	Cinch Mfg. Corp.	Chicago, Ill.	80031	Mecco Division of Sessions	Morristown, N.J.
05820	Wakefield Engineering Inc.	Wakefield, Mass.	17474	Tranex Company	Mountain View, Calif.	71984	Dow Corning Corp.	Midland, Mich.	80120	Schnitzer Alloy Products	Elizabeth, N.J.
06004	The Bassick Co.	Bridgeport, Conn.	18486	Radio Industries	Des Plaines, Ill.	72092	Eitel-McCullough, Inc.	San Bruno, Calif.	80130	Times Facsimile Corp.	New York, N.Y.
06175	Bausch and Lomb Optical Co.	Rochester, N.Y.	18583	Curtis Instrument Inc.	Mt. Kisco, N.Y.	72136	Electro Motive Mfg. Co., Inc.	Willimantic, Conn.	80131	Electronic Industries Association, any brand	Washington, D.C.
06402	E.T.A. Products Co. of America	Chicago, Ill.	18873	E.I. DuPont and Co., Inc.	Wilmington, Del.					tube meeting EIA standards	
06475	Western Devices, Inc.	Inglewood, Calif.	19315	Eclipse Pioneer, Div. of Bendix Aviation Corp.	Teterboro, N.J.	71707	Coto Coil Co., Inc.	Providence, R.I.	80207	Unimax Switch, Div. of	Wallingford, Conn.
06540	Amatom Electronic Hardware Co. Inc.	New Rochelle, N.Y.	19500	Thomas A. Edison Industries, Div. of McGraw-Edison Co.	West Orange, N.J.	72354	John E. Fast & Co.	Chicago, Ill.	80223	United Transformer Corp.	New York, N.Y.
06555	Beede Electrical Instrument Co., Inc.	Penacook, N.H.	19701	Electra Manufacturing Co.	Kansas City, Mo.	72619	Diallight Corp.	Brooklyn, N.Y.	80248	Oxford Electric Corp.	Chicago, Ill.
06751	U.S. Semicor Division of Nuclear Corp. of America	Phoenix, Arizona	20183	Electronic Tube Corp.	Philadelphia, Pa.	72656	General Ceramics Corp.	Kearney, N.J.	80294	Bourns Laboratories, Inc.	Riverside, Calif.
06812	Torrington Mfg. Co., West Div.	Van Nuys, Calif.	21226	Executive, Inc.	New York, N.Y.	72699	General Instrument Corp., Semiconductor Div.	Newark, N.J.	80411	Acro Div. of Robertshaw	Columbus 16, Ohio
07088	Kelvin Electric Co.	Van Nuys, Calif.	21520	Fanstee Metallurgical Corp.	No. Chicago, Ill.	72758	Girard-Hopkins	Oakland, Calif.		Fulton Controls Co.	
			21335	The Fafar Bearing Co.	New Britain, Conn.	72765	Drake Mfg. Co.	Chicago, Ill.	80486	All Star Products Inc.	Defiance, Ohio
			21964	Fed. Telephone and Radio Corp.	Clifton, N.J.	72825	Hugh H. Eby Inc.	Philadelphia, Pa.	80509	Avery Adhesive Label Corp.	Monrovia, Calif.
			24446	General Electric Co.	Schenectady, N.Y.	72928	Gudeman Co.	Chicago, Ill.	80583	Hammerlund Co., Inc.	New York, N.Y.
			24455	G.E., Lamp Division Nela Park, Cleveland, Ohio		72964	Robert M. Hadley Co.	Los Angeles, Calif.	80640	Stevens, Arnold, Co., Inc.	Boston, Mass.
						72982	Erie Resistor Corp.	Erie, Pa.	81030	International Instruments, Inc.	New Haven, Conn.
						73061	Hansen Mfg. Co., Inc.	Princeton, Ind.	81073	Grayhill Co.	LaGrange, Ill.
						73076	H.M. Harper Co.	Chicago, Ill.	81095	Triad Transformer Corp.	Venice, Calif.
						73138	Helipot Div. of Beckman Instruments, Inc.	Fullerton, Calif.	81312	Winchester Electronics Co., Inc.	Norwalk, Conn.

00015-39
Revised: February, 1965

From: FSC, Handbook Supplements
H4-1 Dated DECEMBER 1964
H4-2 Dated MARCH 1962

Table 6-3. Manufacturer's Code (cont'd)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
81349	Military Specification	85474	R.M. Bracamonte & Co.	San Francisco, Calif.	93929	G. V. Controls	Livingston, N. J.	98220	Francis L. Mosley	Pasadena, Calif.
81415	Wilkor Products, Inc.	Cleveland, Ohio	85660	Koiled Kords, Inc.	New Haven, Conn.	93983	Insuline-Van Norman Ind., Inc.	98278	Microdot, Inc.	So. Pasadena, Calif.
81453	Raytheon Mfg. Co., Industrial Components	85911	Seamless Rubber Co.	Chicago, Ill.	Electronic Division	Manchester, N.H.	98291	Sealectro Corp.	Mamaroneck, N.Y.
81483	Div., Industr. Tube Operations	Newton, Mass.	86197	Clifton Precision Products	Clifton Heights, Pa.	94137	General Cable Corp.	Bayonne, N.J.	98405	Carad Corp.	Redwood City, Calif.
81483	International Rectifier Corp.	El Segundo, Calif.	86579	Precision Rubber Products Corp.	Dayton, Ohio	94144	Raytheon Mfg. Co., Industrial Components	98731	General Mills	Minneapolis, Minn.
81541	The Airpax Products Co.	Cambridge, Mass.	86684	Radio Corp. of America, RCA	Div., Receiving Tube Operation	Quincy, Mass.	98821	North Hills Electric Co.
81860	Barry Controls, Inc.	Watertown, Mass.	Electron Tube Div.	Harrison, N.J.	94145	Raytheon Mfg. Co., Semiconductor Div.,	98925	Clevite Transistor Prod.
82042	Carter Parts Co.	Skokie, Ill.	87216	Philco Corporation (Lansdale Division)	Lansdale, Pa.	California Street Plant	Newton, Mass.	Div. of Clevite Corp.	Waltham, Mass.
82142	Jeffers Electronics Division of	87473	Western Fibrous Glass Products Co.	94148	Scientific Radio Products, Inc.	98978	International Electronic
.....	Speer Carbon Co.	Du Bois, Pa.	San Francisco, Calif.	Loveland, Colo.	Research Corp.	Burbank, Calif.
82170	Allen B. DuMont Labs, Inc.	Clifton, N.J.	87664	Van Waters & Rogers Inc.	Seattle, Wash.	94154	Tung-Sol Electric, Inc.	Newark, N.J.	99109	Columbia Technical Corp.	New York, N.Y.
82209	Maguire Industries, Inc.	Greenwich, Conn.	87930	Tower Mfg. Corp.	Providence, R. I.	94197	Curtiss-Wright Corp.,	99313	Varian Associates	Palo Alto, Calif.
82219	Sylvania Electric Prod., Inc.	88140	Cutler-Hammer, Inc.	Lincoln, Ill.	Electronics Div.	East Paterson, N.J.	99515	Marshall Industries, Electron
.....	Electronic Tube Div.	Emporium, Pa.	88220	Gould-National Batteries, Inc.	St. Paul, Minn.	94222	Southco Div. of S. Chester Corp.	Lester, Pa.	Products Division	Pasadena, Calif.
82376	Astron Co.	East Newark, N.J.	88698	General Mills, Inc.	Buffalo, N.Y.	94310	Tru Ohm Prod. Div. of Model	99707	Control Switch Division, Controls Co.
82389	Switchcraft, Inc.	Chicago, Ill.	89231	Graybar Electric Co.	Oakland, Calif.	Engineering and Mfg. Co.	Chicago, Ill.	of America	El Segundo, Calif.
82647	Metals and Controls, Inc., Div. of	89462	Waldes Kohinor, Inc.	Cambridge, Mass.	94330	Wire Cloth Products Inc.	Chicago, Ill.	99800	Delevan Electronics Corp.	East Aurora, N.Y.
.....	Texas Instruments, Inc.,	89473	General Electric Distributing Corp.	94682	Worcester Pressed Aluminum Corp.	99848	Wilco Corporation	Indianapolis, Ind.
.....	Spencer Prods.	Attleboro, Mass.	Schenectady, N.Y.	Worcester, Mass.	99934	Renbrandt, Inc.	Boston, Mass.
82866	Research Products Corp.	Madison, Wis.	89636	Carter Parts Div. of Economy Baler Co.	95023	Philbrick Researchers, Inc.	Boston, Mass.	99942	Hoffman Semiconductor Div. of
82877	Rotron Manufacturing Co., Inc.	Woodstock, N.Y.	Chicago, Ill.	95236	Allies Products Corp.	Miami, Fla.	Hoffman Electronics Corp.	Evanston, Ill.
82893	Vector Electronic Co.	Glendale, Calif.	89665	United Transformer Co.	Chicago, Ill.	95238	Continental Connector Corp.	Woodside, N.Y.	99957	Technology Instrument Corp
83053	Western Washer Mfr. Co.	Los Angeles, Calif.	90179	U.S. Rubber Co., Mechanical	95263	Leecraft Mfg. Co., Inc.	New York, N.Y.	of Calif.	Newbury Park, Calif.
83058	Carr Fastener Co.	Cambridge, Mass.	Goods Div.	Passaic, N.J.	95264	Lercio Electronics, Inc.	Burbank, Calif.			
83086	New Hampshire Ball Bearing, Inc.	90970	Bearing Engineering Co.	San Francisco, Calif.	95265	National Coil Co.	Sheridan, Wyo.			
83125	Pyramid Electric Co.	Darlington, S.C.	91260	Connor Spring Mfg. Co.	San Francisco, Calif.	95275	Vitramon, Inc.	Bridgeport, Conn.			
83148	Electro Cords Co.	Los Angeles, Calif.	91345	Miller Dial & Nameplate Co.	El Monte, Calif.	95348	Gordas Corp.	Bloomfield, N.J.			
83186	Victory Engineering Corp.	Springfield, N.J.	91418	Radio Materials Co.	Chicago, Ill.	95354	Methode Mfg. Co.	Chicago, Ill.			
83298	Bendix Corp., Red Bank Div.	Red Bank, N.J.	91506	Augal Brothers', Inc.	Attleboro, Mass.	95712	Dage Electric Co., Inc.	Franklin, Ind.			
83315	Hubbell Corp.	Mundelein, Ill.	91537	Dale Electronics, Inc.	Columbus, Nebr.	95987	Weckesser Co.	Chicago, Ill.			
83330	Smith, Herman H., Inc.	Brooklyn, N.Y.	91662	Elco Corp.	Philadelphia, Pa.	96067	Huggins Laboratories	Sunnyvale, Calif.			
83385	Central Screw Co.	Chicago, Ill.	91737	Grenar Mfg. Co., Inc.	Wakefield, Mass.	96095	Hi-Q Division of Aerovox	Olean, N.Y.			
83501	Gavitt Wire and Cable Co.,	91827	K F Development Co.	Redwood City, Calif.	96256	Thordarson-Meissner Div. of			
.....	Div. of Amerace Corp.	Brookfield, Mass.	91929	Minneapolis-Honeywell Regulator Co.,	Maguire Industries, Inc.	Mt. Carmel, Ill.			
83594	Burroughs Corp.,	Microswitch Div.	Freeport, Ill.	86296	Solar Manufacturing Co.	Los Angeles, Calif.			
.....	Electronic Tube Div.	Plainfield, N.J.	91961	Nahne-Bros. Spring Co.	Oakland, Calif.	86330	Carlton Screw Co.	Chicago, Ill.			
83740	Eveready Battery	New York, N.Y.	92180	Tru-Connector Corp.	Peabody, Mass.	86341	Microwave Associates, Inc.	Burlington, Mass.			
83777	Model Eng. and Mfg., Inc.	Huntington, Ind.	92196	Universal Metal Prod., Inc.	Bassett Puente, Calif.	86501	Excel Transformer Co.	Oakland, Calif.			
83821	Loyd Scruggs Co.	Festus, Mo.	92367	Elget Optical Co., Inc.	Rochester, N.Y.	87464	Industrial Retaining Ring Co.	Irvington, N.J.			
84171	Arco Electronics, Inc.	New York, N.Y.	92607	Tinsolite Insulated Wire Co.	Tarrytown, N.Y.	87539	Automatic and Precision Mfg. Co.	Yonkers, N.Y.			
84396	A. J. Giesener Co., Inc.	San Francisco, Calif.	93332	Sylvania Electric Prod., Inc.,	97966	CBS Electronics,			
84411	Good All Electric Mfg. Co.	Ogallala, Neb.	Semiconductor Div.	Woburn, Mass.	Div. of C.B.S., Inc.	Danvers, Mass.			
84970	Sarkes Tarzian, Inc.	Bloomington, Ind.	93369	Robbins and Myers, Inc.	New York, N.Y.	97979	Reon Resistor Corp.	Yonkers, N.Y.			
85454	Bounton Molding Company	Bounton, N.J.	93410	Stevens Mfg. Co., Inc.	Mansfield, Ohio	98141	Axel Brothers Inc.	Jamaica, N.Y.			
85471	A.B. Boyd Co.	San Francisco, Calif.	93788	Howard J. Smith Inc.	Port Monmouth, N. J.	98159	Rubber Teck, Inc.	Gardena, Calif.			

THE FOLLOWING H-P VENDORS HAVE NO NUMBER ASSIGNED IN THE LATEST SUPPLEMENT TO THE FEDERAL SUPPLY CODE FOR MANUFACTURERS HANDBOOK.

10000	Winchester Electronics, Inc.
0000F	Malco Tool and Die	Santa Monica, Calif.
0000M	Western Coil Div. of Automatic	Los Angeles, Calif.
.....	Ind., Inc.	Redwood City, Calif.
0000P	Ty-Car Mfg. Co., Inc.	Holliston, Mass.
0000Z	Willow Leather Products Corp.	Newark, N.J.
0000A	British Radio Electronics Ltd.	Washington, D.C.
000AB	ETA	England
000AC	Indiana General Corp., Elect. Div.	Indiana
000BB	Precision Instrument Components Co.
000MM	Rubber Eng. & Development	Van Nuys, Calif.
000NN	A "N" D Manufacturing Co.	Hayward, Calif.
000QQ	Contron	San Jose 27, Calif.
000SS	Control of Elgin Watch Co.	Oakland, Calif.
000WW	California Eastern Lab.	Burbank, Calif.
000YY	S.K. Smith Co.	Burlingame, Calif.
.....	Los Angeles 45, Calif.

APPENDIX I - MANUAL CHANGES

This manual applies directly to the 5253B Frequency Converter having serial prefix 716. This manual with the following changes also applies to the 5253B Frequency Converters having serial prefix numbers 513, 450, 321, and 311.

Instrument Serial Prefix No.	Change No.
311, 321	1, 2, 3
450	2, 3
513	3

- CHANGE 1: Figure 5-5, Table 6-1:
Change: A1 from 05253-6007 to 5253A-65A
Replace schematic with Figure IA-1.
Replace A1 portion of parts list with Table IA-1
- CHANGE 2: Tables 6-1, Misc., Table 6-2:
Change: Plate: Bottom from 05253-0005 to HP Part No. 5253A-12E.
Bracket: Meter from 05251-0002 to HP Part No. 5253A-12F.
Bracket: Panel from 05253-0006 to HP Part No. 05253-0002.
Panel: Front from 05253-2014 to HP Part No. 05253-2003.
- CHANGE 3: Figure 6-1, Page 6-2:
Change MP5 to HP Part No. 2380-0003, Qty. 4.
Change MP25 to HP Part No. 1410-0047, Qty. 2.
Change MP53 to HP Part No. 5253A-20A.
Delete MP67.

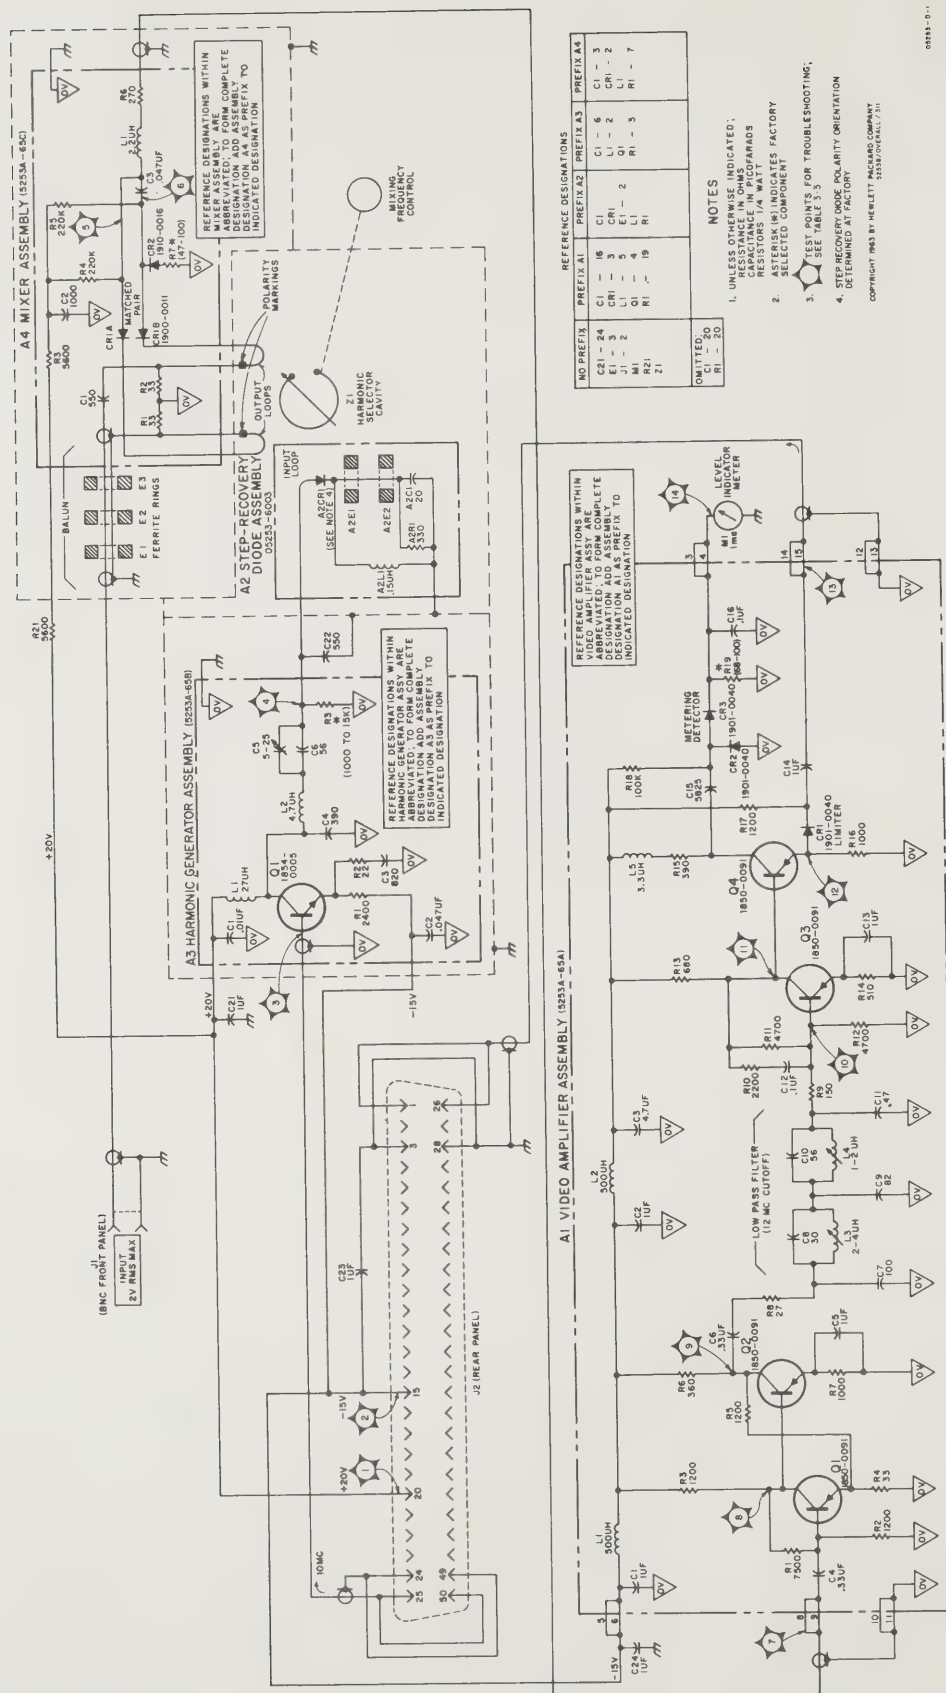


Figure IA-1

Table IA-1. Reference Designation Index

Reference Designation	Stock No.	Description #	Note
A1	5253A-65A	ASSY:VIDEO AMPLIFIER	
A1C1	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C2	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C3	0180-0100	C:FXD ELECT TA 4.7UF 10% 35VDCW	
A1C4	0160-0137	C:FXD CER 0.33UF 20% 25VDCW	
A1C5	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C6	0160-0137	C:FXD CER 0.33UF 20% 25VDCW	
A1C7	0140-0176	C:FXD MICA 100 PF 2% 300 VDCW	
A1C8	0140-0203	C:FXD MICA 30PF 5% 500VDCW	
A1C9	0140-0193	C:FXD MICA 82 PF 5% 300 VDCW	
A1C10	0140-0191	C:FXD MICA 56 PF 5% 300 VDCW	
A1C11	0140-0204	C:FXD 47PF 5% NPO 500 VDCW	
A1C12	0150-0121	C:FXD .1MF 50VDCW	
A1C13	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C14	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C15	0140-0189	C:FXD MICA 5825 PF 2% 300 VDCW	
A1C16	0150-0121	C:FXD .1MF 50VDCW	
A1CR1	1901-0040	DIODE:SILICON	
A1CR2	1901-0040	DIODE:SILICON	
A1CR3	1901-0040	DIODE:SILICON	
L1	9140-0118	COIL:FXD 500 UH 5%	
L2	9140-0118	COIL:FXD 500 UH 5%	
A1L3	9140-0126	COIL:VAR 1.76-4.02	
A1L4	9140-0125	COIL:VAR 0.9-1.9 UHY	
A1L5	9140-0111	COIL:FXD RF 3.3UHY	
A1Q1	1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	
A1Q2	1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	
A1Q3	1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	
A1Q4	1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	
A1R1	0683-7525	R:FXD COMP 7500 OHMS 5% 1/4W	
A1R2	0683-1225	R:FXD 1200 OHM 5% 1/4W	
A1R3	0683-1225	R:FXD 1200 OHM 5% 1/4W	
A1R4	0683-3305	R:FXD COMP 33 OHMS 5% 1/4W	
A1R5	0683-1225	R:FXD COMP 1200 OHMS 5% 1/4W	
A1R6	0683-3615	R:FXD COMP 360 OHMS 5% 1/4W	
A1R7	0683-1025	R:FXD COMP 1000 OHMS 5% 1/4W	
A1R8	0684-2701	R:FXD 27 OHM 10% 1/4 W	
A1R9	0684-1511	R:FXD COMP 15K OHMS 10% 1/4W	
A1R10	0683-2225	R:FXD 2.2K OHM 5% 1/4W	
A1R11	0683-4725	R:FXD COMP 4700 OHMS 5% 1/4W	
A1R12	0683-4725	R:FXD COMP 4700 OHMS 5% 1/4W	
A1R13	0683-6815	R:FXD COMP 680 OHMS 5% 1/4W	
A1R14	0683-5115	R:FXD COMP 510 OHMS 5% 1/4W	
A1R15	0683-3915	R:FXD COMP 390 OHMS 5% 1/4W	
A1R16	0683-1025	R:FXD COMP 1000 OHMS 5% 1/4W	
A1R17	0683-1225	R:FXD 1200 OHM 5% 1/4W	
A1R18	0684-1041	R:FXD 100 K OHM 10% 1/4 W	
A1R19	0683-8205	R:FXD COMP 82 OHMS 5% 1/4W	

See list of abbreviations in introduction to this section

APPENDIX II - 5253A

IIA-1. INTRODUCTION.

IIA-2. The 5253A is basically the same as the 5253B except for frequency range. The 5253A measures from 100 to 500 Mc. The 5253B measures from 50 to 500 Mc. The frequency range of the 5253B was extended by changing the pick-up loop in the cavity. The 5353B manual will apply for most applications. Appendix II covers the differences between the two models and contains the necessary information for the operation and maintenance of the 5253A.

IIA-3. DESCRIPTION.

IIA-4. The Hewlett-Packard Model 5253A Frequency Converter is a plug-in unit which converts a Hewlett-Packard Model 5243L or 5245L Electronic Counter into a direct reading counter from 88 to 512 Mc.

IIA-5. The stability and accuracy of the basic counter are retained by multiplying a 10-Mc signal, derived from the 1-Mc internal time base of the counter, to a selectable harmonic frequency between 100 and 500 Mc. This known harmonic of 10 Mc is then heterodyned with the INPUT signal. If the resulting difference frequency is between 100 kc and 12 Mc (bandwidth of amplifier in plug-in), it is counted and displayed by the counter. The frequency of the INPUT signal is then indicated by the combination of the MIXING FREQUENCY control (in megacycles; front panel of plug-in) and the digital display of the counter (in megacycles).

IIA-6. A front panel meter, by monitoring the difference-frequency output of the plug-in to the counter,

aids in selecting the desired MIXING FREQUENCY and also in determining if INPUT signal amplitude is adequate for accurate frequency measurement.

IIA-7. OPERATING PROCEDURE.

IIA-8. NORMAL RANGE MEASUREMENTS.

IIA-9. Figure IIA-1 is the procedure to be used for measurement of frequencies from 100.1 to 512 Mc with INPUT signal amplitudes from 50 mv to 1 v RMS.

IIA-10. EXTENDED RANGE MEASUREMENTS.

IIA-11. The frequency of signals not within the normal range of 100.1 to 512 Mc, 50 mv to 1 v RMS, may be measured using the following procedures:

IIA-12. 88 TO 100.1 MC, 50 MV TO 1 V RMS. Perform steps 1 through 5 of Figure IIA-1. Then:

a. Set mixing frequency control to slightly more than 110 Mc.

b. Turn mixing frequency control slowly clockwise until level indicator meter first reaches a maximum reading in the green portion of the scale.

c. Subtract counter display (in Mc) from reading of mixing frequency control (in Mc) for frequency of INPUT signal.

Table IIA-1. Specifications*

RANGE: As converter for 5243L or 5245L counter, 88 Mc to 512 Mc, using mixing frequencies of 100 Mc to 500 Mc in 10 Mc steps

ACCURACY: Retains accuracy of 5243L or 5245L counter

INPUT VOLTAGE RANGE: 50 mv to 1 v RMS

MAXIMUM INPUT: 2 v RMS or 100 vdc will not damage the instrument

INPUT IMPEDANCE: Approximately 50 ohms


LEVEL INDICATOR: Meter aids frequency selection; indicates output voltage level to counter

REGISTRATION: Counter display is added to the converter dial reading

WEIGHT: Net 5-1/2 lbs, shipping 9 lbs

ACCESSORY FURNISHED: ϕ 10503A (AC-16K) Cable, 4 ft long, male BNC connectors

*When installed in Hewlett-Packard Model 5243L or Model 5245L Electronic Counter.

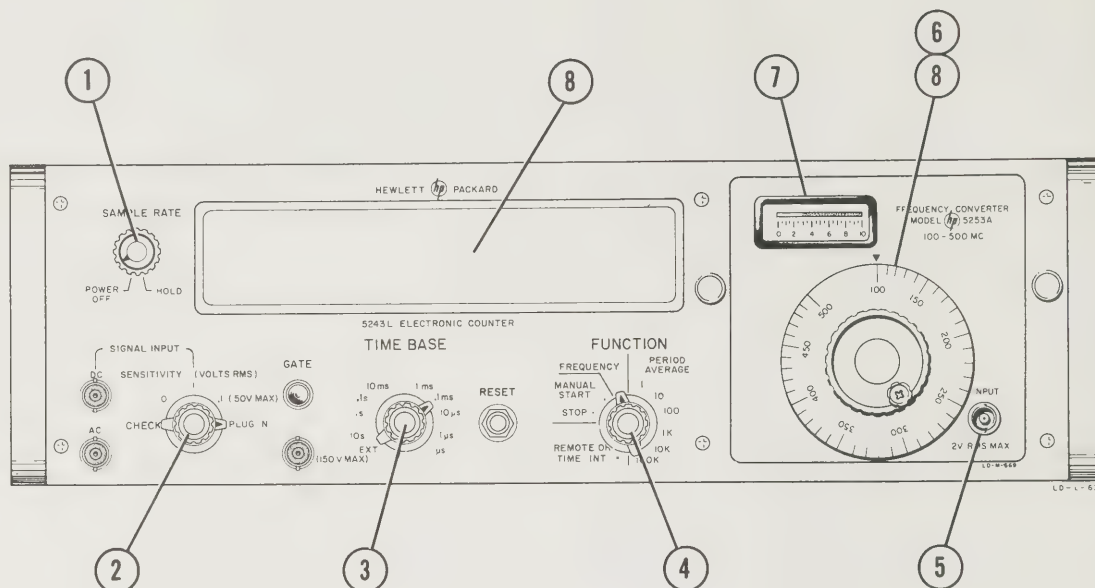

1. Turn SAMPLE RATE control slightly out of POWER OFF position.
2. Set SENSITIVITY to PLUG IN.
3. Set TIME BASE to .1 ms.*
4. Set FUNCTION to FREQUENCY.
5. Connect signal whose frequency is to be measured to INPUT of converter.
6. Set mixing frequency control to read slightly less than 100 mc.

7. Slowly turn mixing frequency control counter-clockwise until level indicator meter first reaches a maximum reading in the green portion of its scale.
8. Add counter display (in mc) to mixing frequency control reading (in mc) for frequency of INPUT signal.

* TIME BASE setting may vary, depending on desired resolution of INPUT signal frequency. See table 3-1.

Figure IIA-1. Frequency Measurement Procedure

IIA-13. 88 TO 512 MC, AMPLITUDE LESS THAN 50 MV RMS. The front panel level indicator meter indicates in the green portion of its scale only when converter is properly tuned and amplitude of INPUT signal is adequate for accurate frequency measurement. However, because of conservative specifications of both the converter and counter, frequencies may often be accurately measured when meter reads in the red portion of its scale. To make these extended range measurements:

a. Follow normal procedure (Figure IIA-1 or Paragraph IIA-12, depending upon frequency range) except that mixing frequency control should be tuned for first maximum reading on the level indicator meter, regardless of the color of region maximum.

b. Insert an external variable attenuator (such as Hewlett-Packard Model 355A or 355C) in the transmission line between the converter and the source of INPUT signal. Vary attenuation from 0 to 1db during final step of frequency measurement procedure. If counter display does not change more than momentarily (during switching of attenuator), INPUT signal is above noise threshold and frequency measurement result is valid.

IIA-14. VIDEO AMPLIFIER ASSEMBLY (A1).

IIA-15. The output of the mixer circuit is amplified by transistors A1Q1 and A1Q2 and is fed to the 12-Mc low-pass filter network (see Figure IIA-2). This filter passes any signal frequency below approximately 12 Mc and attenuates all higher frequency signals. The low-pass filter output is amplified by A1Q3 and fed to the last transistor amplifier, A1Q4, which provides both the output to the counter and the drive for the level indicator meter. The limiter diode, A1CR1, prevents the amplitude of the video amplifier output signal from exceeding approximately 300 mv RMS so that counter input circuits will not be overloaded. The low frequency limit of the video amplifier, determined by the bypass and interstage coupling networks, is approximately 100 kc. The converter output signal to the counter, when converter is properly tuned, will be between approximately 100 kc and 12 Mc and will have an amplitude that is less than approximately 300 mv RMS.

IIA-16. LEVEL INDICATOR METER .

IIA-17. The dc current supply for the meter is produced by metering detector A1CR3 and smoothed by capacitor A1C16 (see Figure IIA-3). The value of shunt resistor A1R19 is selected to make level indicator meter M1 read at red-green border when amplitude of converter output to counter is in excess of the 100-mv RMS minimum signal amplitude normally required by the counter for accurate frequency measurement.

IIA-18. HARMONIC GENERATOR ADJUSTMENT.

IIA-19. To adjust the harmonic generator assembly, proceed as follows:

a. Remove converter from counter and reconnect to counter with Extension Cable, CP 10506A.

b. Connect VHF Signal Generator to converter INPUT and set to 472 Mc, CW, at 100 mv.

c. Connect RF Millivoltmeter to Test Point #13 (see Figure IIA-5).

d. Set converter mixing frequency control to 470 Mc, and tune for maximum reading on RF Millivoltmeter.

e. Vary output of VHF Signal Generator to make converter level indicator meter read at red-green border.

f. Using plastic tuning tool, tune A3C5 (see Figure IIA-5) for maximum reading on RF Millivoltmeter. Tune A3C5 through hole in harmonic generator assembly shield cover.

IIA-20. LOW PASS FILTER ADJUSTMENT.

IIA-21. To adjust the low pass filter in the video amplifier assembly, proceed as follows:

a. Remove converter from counter and reconnect to counter with Extension Cable, CP 10506A.

b. Connect VHF Signal Generator to converter INPUT and set to 110 Mc, CW, at 50 mv.

c. Connect RF Millivoltmeter to Test Point #13 (see Figure IIA-7).

d. Set converter mixing frequency control to 100 Mc and tune for maximum reading on RF Millivoltmeter.

e. Set Signal Generator to 118 Mc, CW, at 1 v.

f. Using plastic tool, adjust variable inductor A1L4 (see Figure IIA-4) for minimum reading of RF Millivoltmeter.

g. Set Signal Generator to 117 Mc, CW, at 1 v.

h. Using plastic tool, adjust variable inductor A1L3 (see Figure IIA-4) for minimum reading of RF Millivoltmeter.

i. Set Signal Generator to 115 Mc, CW, at 1 v.

j. Reading of RF Millivoltmeter should be less than 100 mv. If reading is above 100 mv, troubleshoot video amplifier assembly.

IIA-22. METER ADJUSTMENT.

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, CP 10506A.

b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set counter controls as shown in Figure IIA-1. Counter should display approximately 2 Mc.

d. Vary VHF Generator output to make level indicator meter read at red-green border.

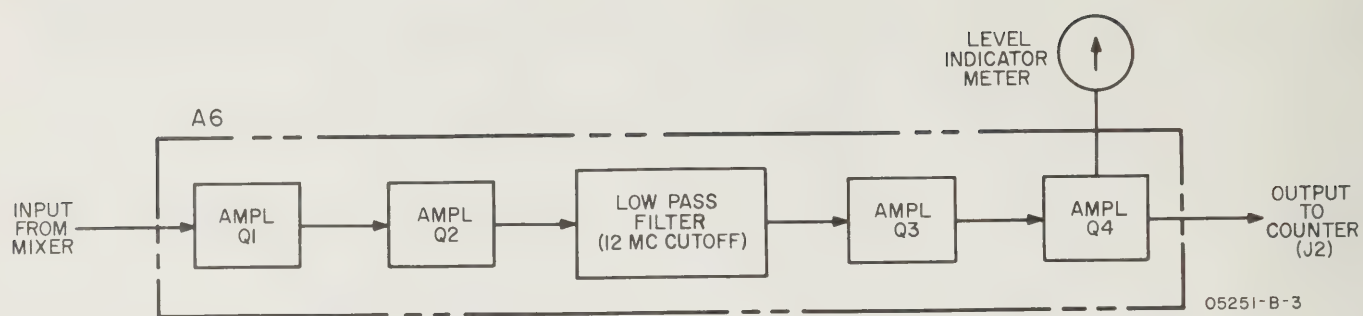


Figure IIA-2. Video Amplifier (A6)

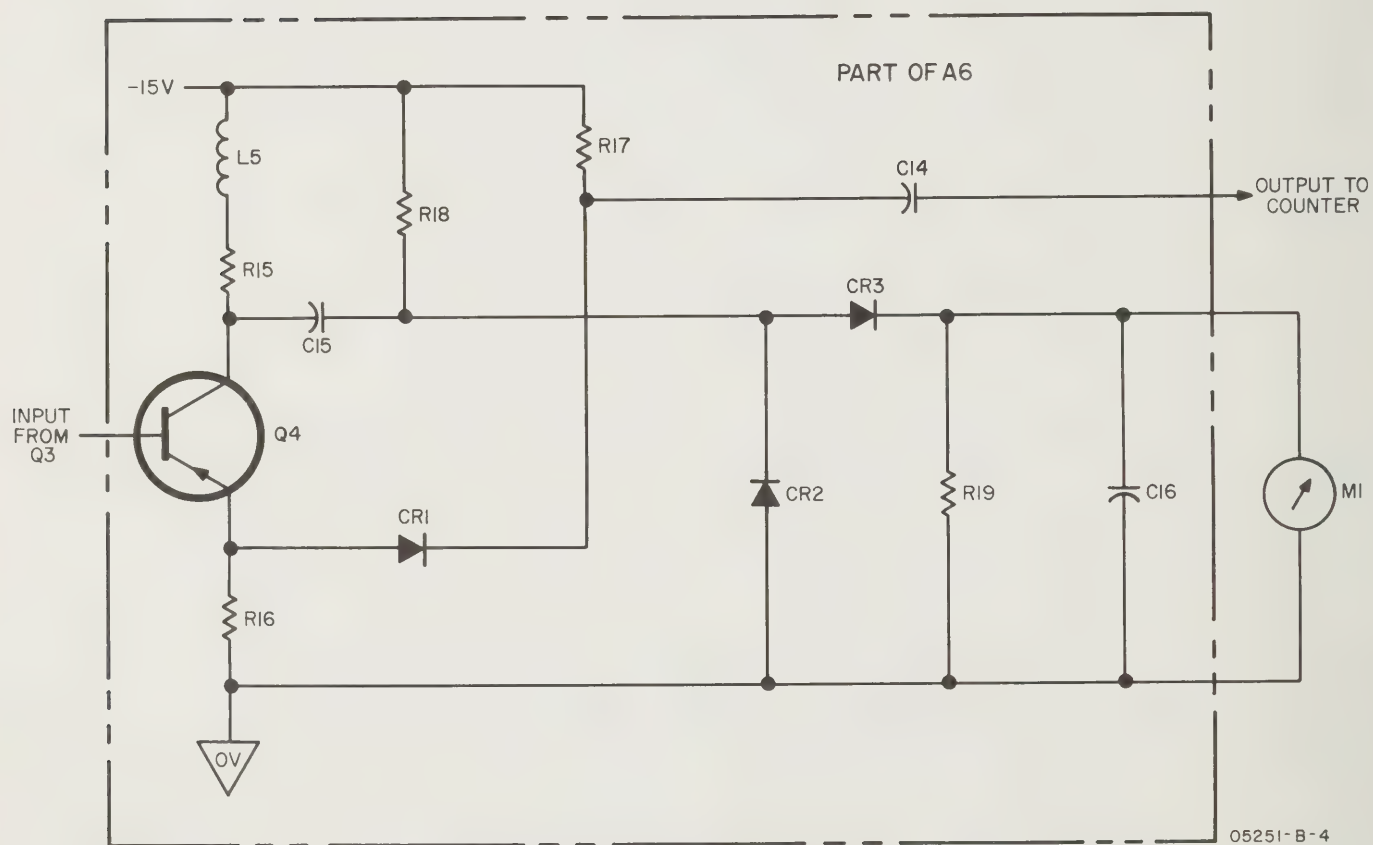


Figure IIA-3. Level Indicator Meter Circuit

e. Using RF Millivoltmeter, measure voltage at Test Point #13. Voltage should be between 100 mv and 130 mv. If not, change value of resistor A1R19 to change voltage to between 100 mv and 130 mv. If voltage is too high, increase value of A1R19. If voltage is too low, decrease value of A1R19. Repeat steps d and e after changing value of A1R19.

IIA-23. MECHANICAL ADJUSTMENT OF METER ZERO .

IIA-24. TRUE SIGNAL LEVEL INDICATION. Level indicator meter is adjusted at the factory for proper mechanical zero. However, normal aging of meter components may change indicated zero level. To insure accuracy of input signal level indication, periodic adjustment of meter zero may be necessary.

IIA-25. ZERO-SET. When meter is properly zero-set, pointer rests over the zero calibration mark at the left-hand end of meter scale when converter is (1) at normal operating temperature, (2) in normal operating position, and (3) without power. Proceed as follows:

- a. Allow counter and converter to operate for one hour to permit meter movement to reach normal operating temperature.
- b. Turn counter off and allow one minute for all capacitors to discharge.
- c. Remove converter from counter to enable access to rear of meter.
- d. Remove adhesive-backed-paper cover from meter zero-adjustment access hole on top-rear of meter.
- e. Carefully insert small tool in access hole and engage adjustment fork.
- f. Vary setting of adjustment fork until meter reads zero.
- g. Remove tool and replace adhesive-backed paper cover on access hole. This completes meter zero adjustment procedure.

IIA-26. SENSITIVITY CHECK.

- a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, Φ 10506A.
- b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.
- c. Adjust controls as shown in Figure IIA-2.
- d. Set converter mixing frequency control to 100 Mc. Counter should display approximately 2 Mc.
- e. Using RF Millivoltmeter, measure output of converter at Test Point #13 (see Figure IIA-7). Voltage should be at least 100 mv.

f. Repeat above steps c, d, and e with VHF Generator frequency of 472 Mc and converter mixing frequency control set to 470 Mc. Converter output to counter, as measured by RF Millivoltmeter, should be at least 100 mv.

g. A similar check may be made at any frequency within the range of the Model 5253A. Converter output to counter should be at least 100 mv when difference frequency is between 100 kc and 12 Mc and converter is properly tuned.

IIA-27. METER ACCURACY CHECK.

- a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, Φ 10506A.
- b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.
- c. Set controls as shown in Figure IIA-1. Set converter mixing frequency control to 100 Mc. Counter should display approximately 2 Mc.

d. Vary output of VHF Signal Generator for converter level indicator to make meter read at red-green border.

e. Using RF Millivoltmeter, measure converter output to counter at Test Point #13. Voltage should be between 100 mv and 130 mv. If not, see Paragraph IIA-22 for meter calibration adjustment procedure.

IIA-28. LOW PASS FILTER CHECK.

- a. Turn counter power off, remove converter from counter and reconnect to counter with Extension Cable, Φ 10506A.
- b. Set VHF Signal Generator to 110 Mc, CW, at 50 mv and connect to INPUT of converter.
- c. Set controls as shown in Figure IIA-1. Set converter mixing frequency control to 100 Mc. Counter should display approximately 10 Mc.
- d. Connect RF Millivoltmeter to Test Point #13. Vary output of VHF Signal Generator for RF Millivoltmeter reading of 100 mv. Note output level of VHF Signal Generator.
- e. Set VHF Signal Generator to 115 Mc at same output level as noted in step d above. Converter output to counter, as shown on RF Millivoltmeter, should not exceed 50 mv. If converter output to counter is greater than 50 mv, see Paragraph IIA-20 for low pass filter adjustment procedure.

IIA-29. IN-CABINET PERFORMANCE CHECK.

- a. Turn counter power off and install converter.
- b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure IIA-1. Counter should display approximately 2 Mc.

d. Set VHF Signal Generator to any frequency between 88 Mc and 512 Mc with output of 50 mv. Counter should display correct frequency at any frequency within this range.

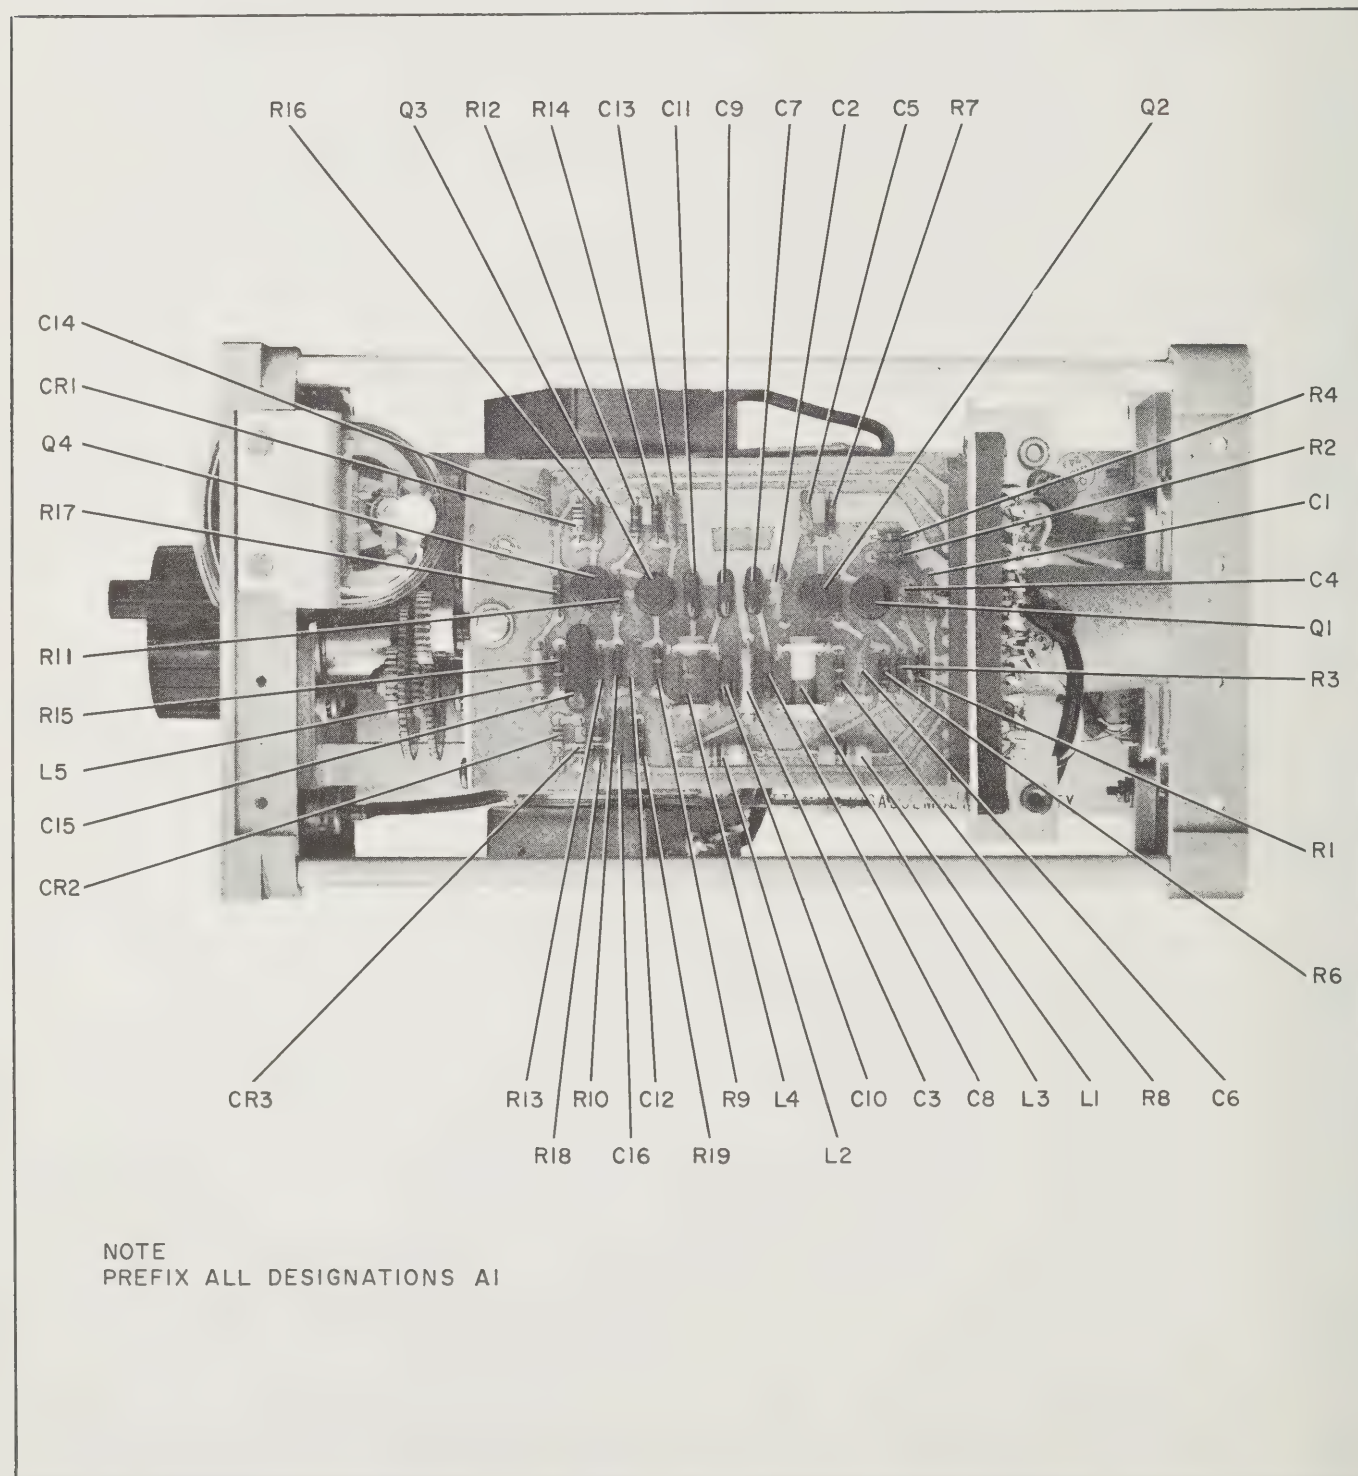


Figure IIA-4. Model 5253A, Top View

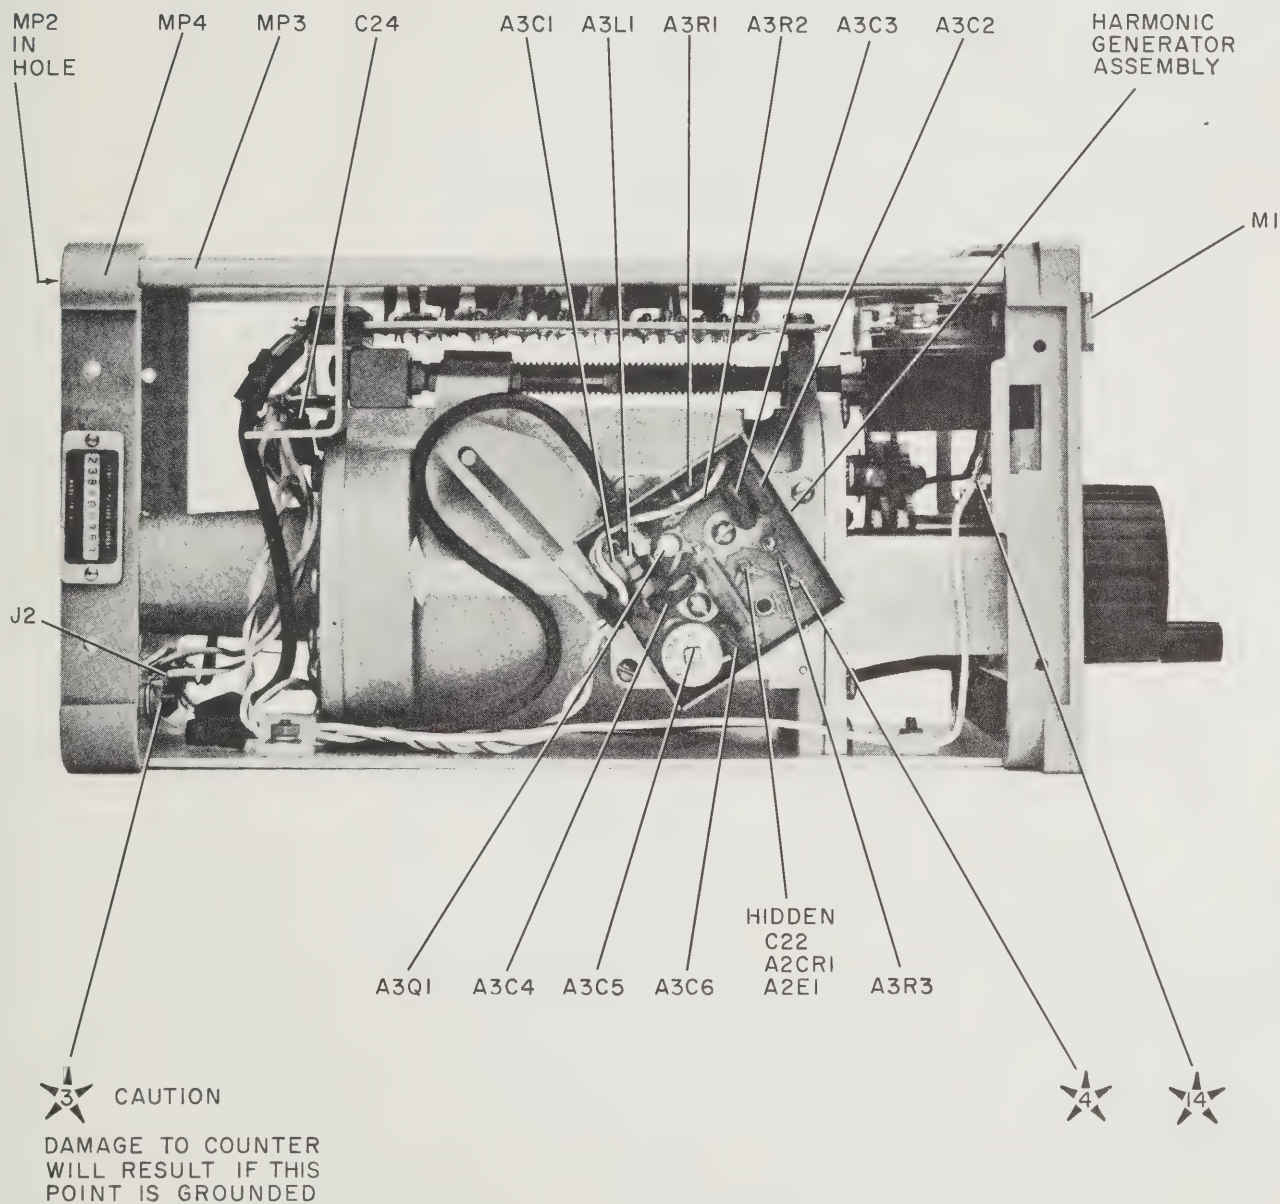


Figure IIA-5. Left Side View

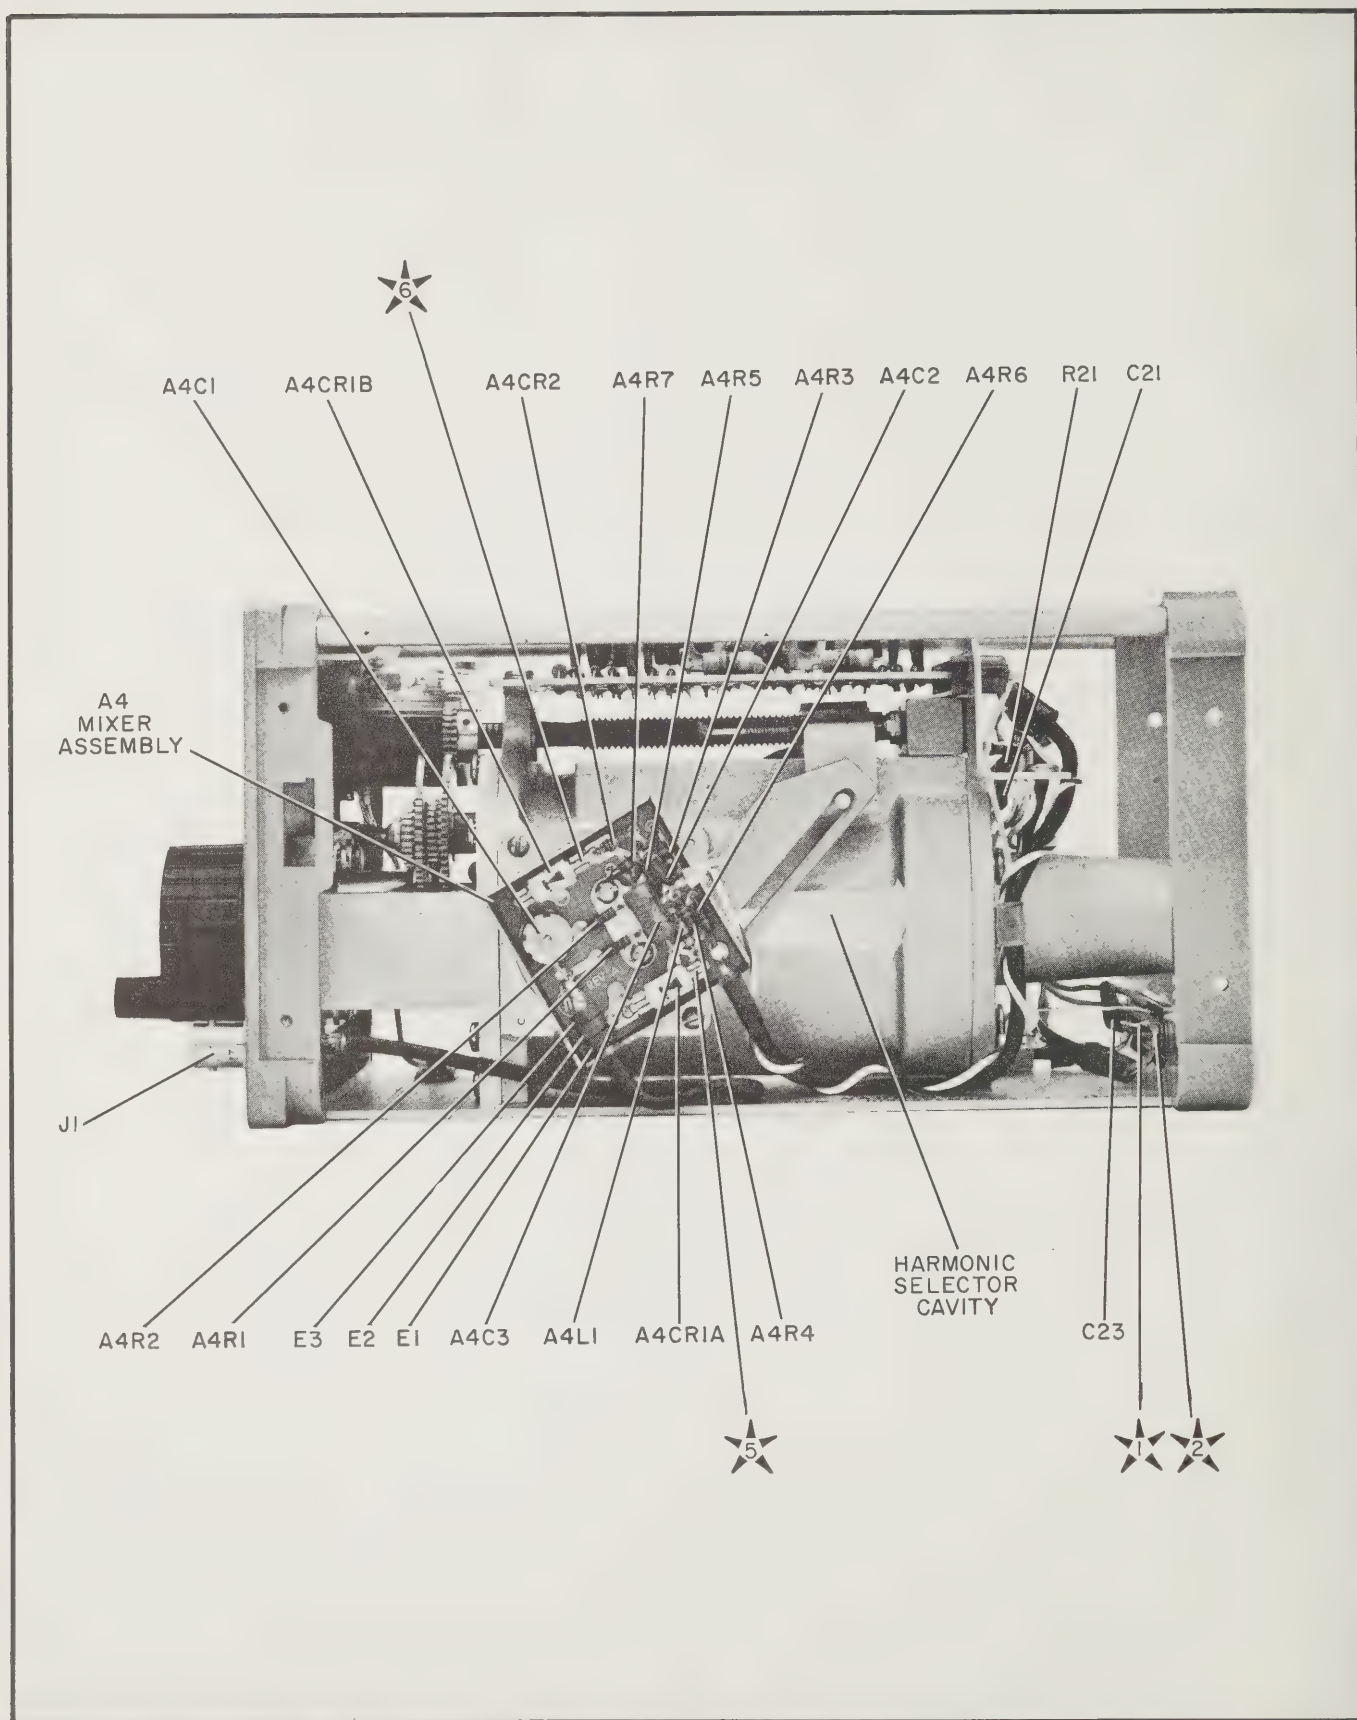


Figure IIA-6. Right Side View

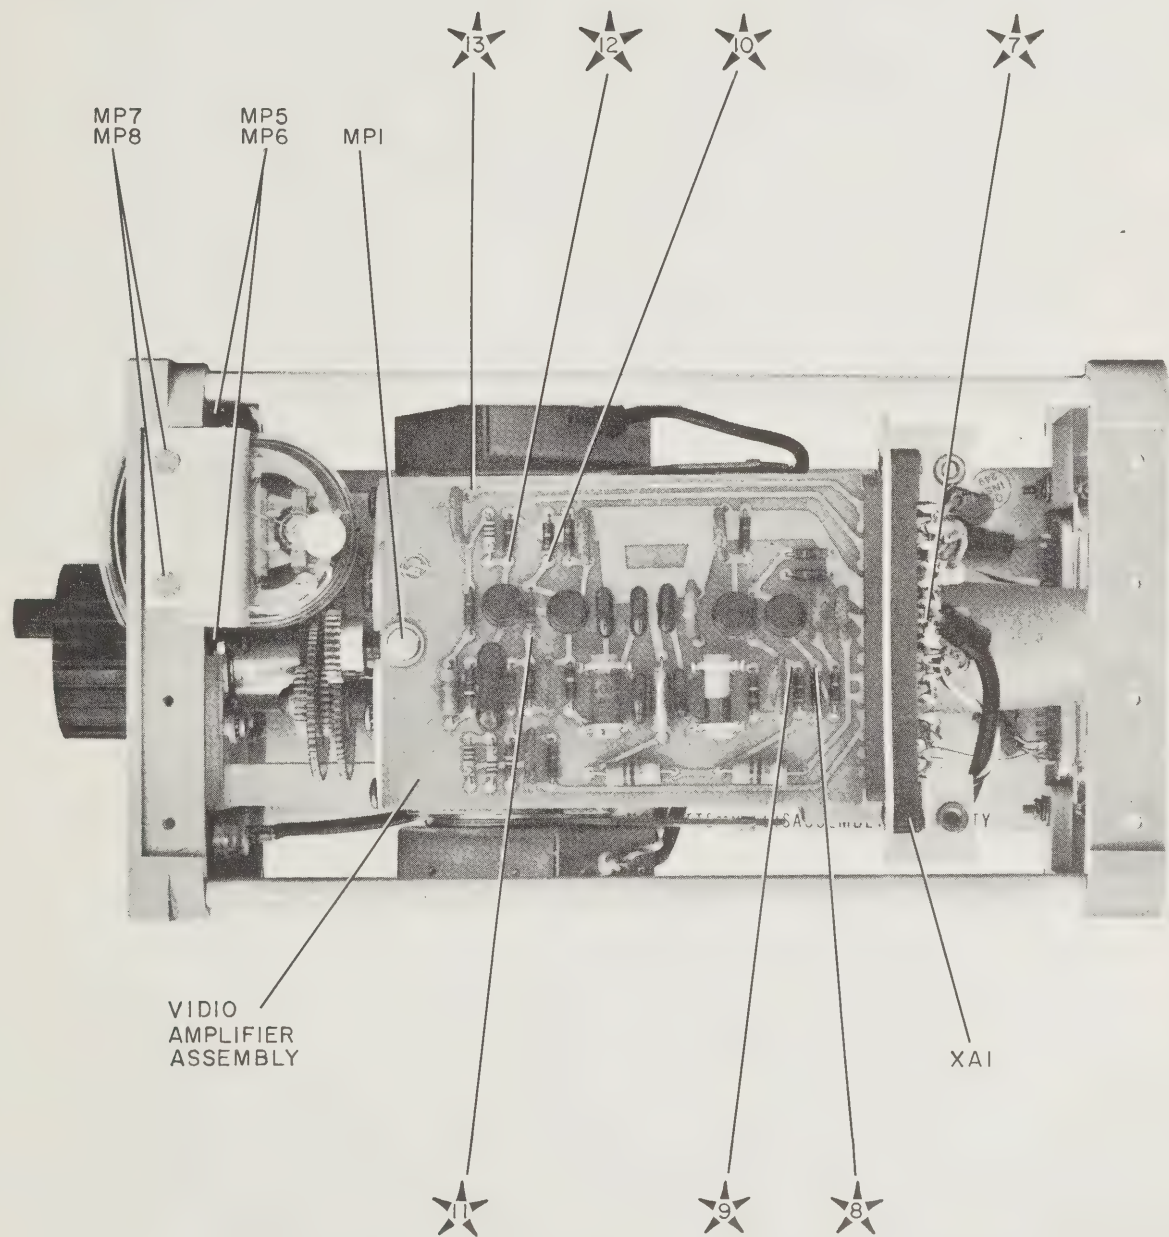


Figure IIA-7. Top View - Test Points

Table IIA-2. Troubleshooting Procedure

All voltages given are approximate and may vary from instrument to instrument because of variations in component characteristics.

TEST EQUIPMENT: $\text{\textcircled{hp}}$ Model 411A RF Millivoltmeter with $\text{\textcircled{hp}}$ 11022A (formerly 411A-21B) Pen Type Probe Tip,
 $\text{\textcircled{hp}}$ Model 412A DC VTVM

REMOVE $\text{\textcircled{hp}}$ 5253A FROM COUNTER; SELF-CHECK COUNTER	See counter manual for self-check procedure.
CONNECT $\text{\textcircled{hp}}$ 5253A TO COUNTER WITH EXTENSION CABLE, $\text{\textcircled{hp}}$ 10506A (formerly AC-16Y)	Extension cable available from $\text{\textcircled{hp}}$; see parts list.
① +20 VDC ② -15 VDC	Checks power supplied to plug-in from counter; see counter manual for power supply adjustment procedure.
③ + 6 VDC 2 VAC	Checks 10-Mc drive of harmonic generator.
④ + 2 VDC - 2 VAC	Checks generator diode drive. Voltages vary widely because of both the detuning effect of volt-meter probe and the variable value of A3R3. DC voltage may be either + or -, depending upon factory determined generator diode orientation.
⑤ +100 MV DC ⑥ +100 MV DC	Voltages vary widely because of diode characteristics. Voltages are 0 VDC when diode shorted, and +20 VDC when diode open. Voltages should be approximately equal because of matched characteristics.

CONNECT SIGNAL GENERATOR TO $\text{\textcircled{hp}}$ 5253A.
 SET GENERATOR TO 102 MC, CW, 100 MV.
 SET COUNTER CONTROLS AND 5253A TO
 MEASURE FREQUENCY OF INPUT SIGNAL.

⑦ 5 MV RMS	This voltage is total harmonic energy output of mixer and varies widely.
⑧ -6 VDC 15 MV RMS	Checks bias and amplification of A1Q1
⑨ -10 VDC 200 MV RMS	Checks bias and amplification of A1Q2
⑩ -4 VDC 15 MV RMS	General check of low pass filter section
⑪ -9 VDC 500 MV RMS	Checks bias and amplification of A1Q3
⑫ -8.5 VDC 300 MV RMS	Checks operation of A1Q4
⑬ 0 VDC 200 MV RMS	Checks operation of limiter, A1CR1
⑭ 0 MV DC WHEN METER READS AT LEFT END OF SCALE; 50 MV DC WHEN METER READS FULL SCALE; 15 MV DC WHEN TEST POINT #13 IS 100 MV RMS, AND METER READS AT RED-GREEN BORDER.	Checks accuracy of meter circuit in relation to output to counter

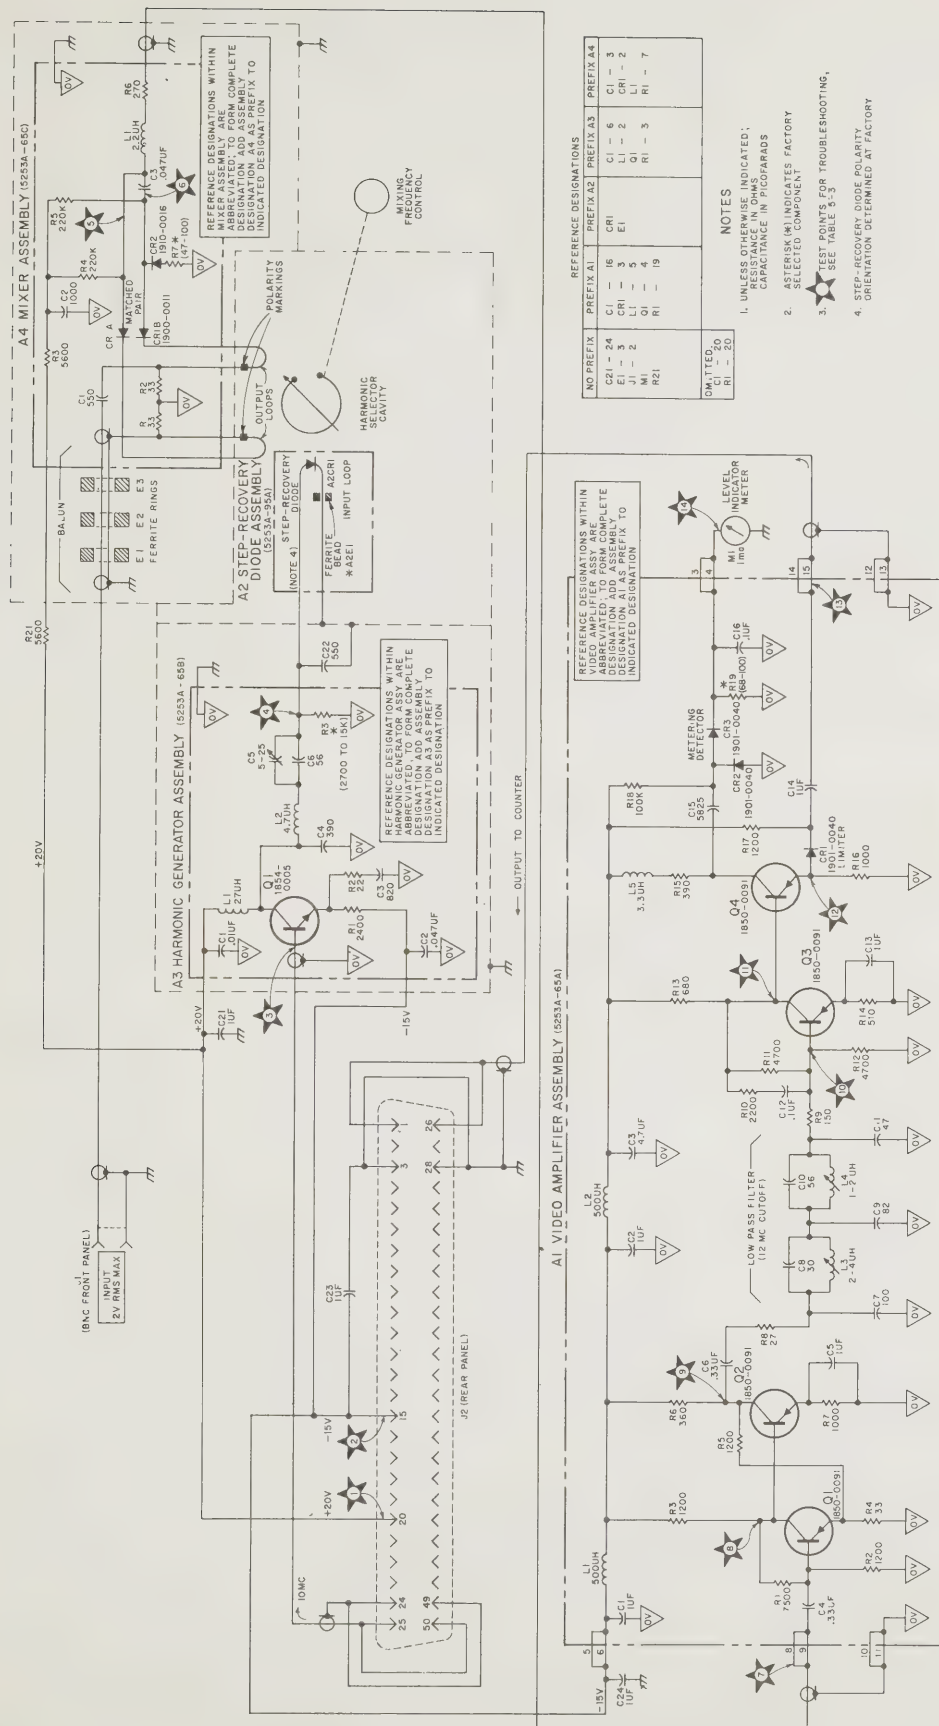


Figure IIA-8. Schematic Diagram

Table IIA-3. Reference Designation Index

Reference Designation	Stock No.	Description #	Note
A1	5253A-65A	ASSY:VIDEO AMPLIFIER	
A1C1	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C2	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C3	0180-0100	C:FXD ELECT TA 4.7 UF 10% 350VDCW	
A1C4	0160-0137	C:FXD CER 0.33 UF 20% 25VDCW	
A1C5	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C6	0160-0137	C:FXD CER 0.33 UF 20% 25VDCW	
A1C7	0140-0176	C:FXD MICA 100 PF 2% 300VDCW	
A1C8	0140-0203	C:FXD MICA 30 PF 5% 500VDCW	
A1C9	0140-0193	C:FXD MICA 82 PF 5% 300VDCW	
A1C10	0140-0191	C:FXD MICA 56 PF 5% 300VDCW	
A1C11	0140-0204	C:FXD MICA 47 PF 5% NPO 500VDCW	
A1C12	0150-0121	C:FXD CER 0.1 UF +80-20% 50VDCW	
A1C13	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C14	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C15	0140-0189	C:FXD MICA 5825 PF 2% 300VDCW	
A1C16	0150-0121	C:FXD CER 0.1 UF +80-20% 50VDCW	
A1CR1	1901-0040	DIODE:SILICON	
A1CR2	1901-0040	DIODE:SILICON	
A1CR3	1901-0040	DIODE:SILICON	
A1L1	9140-0118	COIL:500MH 5%	
A1L2	9140-0118	COIL:500 MH 5%	
A1L3	9140-0126	COIL:VAR 1.76-4.02 UH	
A1L4	9140-0125	COIL:VAR 0.9-1.9 UH	
A1L5	9140-0111	COIL:FXD RF 3.3 UH	
A1Q1	1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	
A1Q2	1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	
A1Q3	1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	
A1Q4	1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	
A1R1	0683-7525	R:FXD COMP 7500 OHM 5% 1/4W	
A1R2	0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	
A1R3	0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	
A1R4	0683-3305	R:FXD COMP 33 OHM 5% 1/4W	
A1R5	0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	
A1R6	0683-3615	R:FXD COMP 360 OHM 5% 1/4W	
A1R7	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R8	0684-2701	R:FXD COMP 27 OHM 10% 1/4W	
A1R9	0684-1511	R:FXD COMP 150 OHM 10% 1/4W	
A1R10	0683-2225	R:FXD COMP 2.2K OHM 5% 1/4W	
A1R11	0683-4725	R:FXD COMP 4700 OHM 5% 1/4W	
A1R12	0683-4725	R:FXD COMP 4700 OHM 5% 1/4W	
A1R13	0683-6815	R:FXD COMP 680 OHM 5% 1/4W	
A1R14	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R15	0683-3915	R:FXD COMP 390 OHM 5% 1/4W	
A1R16	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R17	0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	
A1R18	0684-1041	R:FXD COMP 100K OHM 10% 1/4W	
A1R19	0683-8205	R:FXD COMP 82 OHM 5% 1/4W	
		FACTORY SELECTED PART;TYPICAL VALUE GIVEN	

See list of abbreviations in introduction to this section

Table IIA-3. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
A2	5253A-95A	ASSY:STEP RECOVERY DIODE NOT RECOMMENDED FOR FIELD REPLACEMENT	
A2CR1	1901-0120	DIODE:STEP RECOVERY,SPECIALLY SELECTED PART.	
A2E1		CORE:TOROID,SPECIALLY SELECTED PART.	
A3	5253A-65B	ASSY:HARMONIC GENERATOR	
A3C1	0150-0093	C:FXD CER 0.01 UF +80-20% 100VDCW	
A3C2	0170-0094	C:FXD MY 0.047 UF 20% 50VDCW	
A3C3	0140-0151	C:FXD MYCA 820 PF 2% 300VDCW	
A3C4	0140-0200	C:FXD MICA 390 PF 5% 300VDCW	
A3C5	0130-0016	C:VAR CER 5-25 PF NPO	
A3C6	0140-0191	C:FXD MICA 56 PF 5% 300VDCW	
A3L1	9140-0107	COIL:FXD RF 27 UH	
A3L2	9140-0025	COIL:FXD RF 4.7 UH	
A3R1	0686-2425	R:FXD COMP 2400 OHM 5% 1/2W	
A3R2	0683-2205	R:FXD COMP 22 OHM 5% 1/4W	
A3R3	0683-5625	R:FXD COMP 5600 OHM 5% 1/4W FACTORY SELECTED PART;TYPICAL VALUE GIVEN	
A4	5253A-65C	ASSY:MIXER DOES NOT CONTAIN A4CR1, ORDER SEPARATELY	
A4C1	0140-0069	C:FXD MICA 550 PF 10% 500VDCW	
A4C2	0150-0050	C:FXD CER 1000 PF 600VDCW	
A4C3	0170-0040	C:FXD MY 0.047 UF 10% 200VDCW	
A4CR1	1900-0011	DIODE:SILICON 1N4168M, MATCHED PAIR	
A4CR2	1910-0016	DIODE:GERMANIUM 1 MICROSEC 60 WIV	
A4L1	9140-0142	COIL:FXD RF 2.2 UH	
A4R1	0683-3305	R:FXD COMP 33 OHM 5% 1/4W	
A4R2	0683-3305	R:FXD COMP 33 OHM 5% 1/4W	
A4R3	0684-5621	R:FXD COMP 5.6K OHM 10% 1/4W	
A4R4	0683-2245	R:FXD COMP 220K OHM 5% 1/4W	
A4R5	0683-2245	R:FXD COMP 220K OHM 5% 1/4W	
A4R6	0683-2715	R:FXD COMP 270 OHM 5% 1/4W	
A4R7	0683-6205	R:FXD COMP 62 OHM 5% 1/4W FACTORY SELECTED APRT;TYPICAL VALUE GIVEN	
C21	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
C22	0140-0069	C:FXD MICA 550 PF 10% 500VDCW	
C23	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
C24	0160-0227	C:FXD CER 1.0 UF 20% 25VDCW	
E1	9170-0059	CORE:TOROID	
E2	9170-0059	CORE:TOROID	
E3	9170-0059	CORE:TOROID	
J1	1250-0102	CONNECTOR:BNC	
J2	1251-0099	CONNECTOR:50-PIN MINIATURE	
R21	0684-5621	R:FXD COMP 5600 OHM 10% 1/4W	
XA1	1251-0135	CONNECTOR:15 CONTACTS	

See list of abbreviations in introduction to this section

Table IIA-4. Replaceable Parts

Stock No.	Description #	Mfr.	Mfr. Part No.	TQ
5253A-65A	ASSY:VIDEO AMPLIFIER	28480	5253A-65A	1
5253A-65B	ASSY:HARMONIC GENERATOR	28480	5253A-65B	1
5253A-65C	ASSY:MIXER	28480	5253A-65C	1
5253A-95A	ASSY:STEP RECOVERY DIODE	28480	5253A-95A	1
0130-0016	C:VAR CER 5-25 PF NPO	28480	0130-0016	1
0140-0069	C:FXD MICA 550 PF 10% 500VDCW	00853	TYPE M100 E10	2
0140-0151	C:FXD MICA 820 PF 2% 300VDCW	04062	DM15F 821G	1
0140-0176	C:FXD MICA 100 PF 2% 300VDCW	04062	DM15F 101G 300V	1
0140-0189	C:FXD MICA 5825 PF 2% 300VDCW	04062	DM20F 5825G	1
0140-0191	C:FXD MICA 56 PF 5% 300VDCW	04062	DM15E 560J 300V	2
0140-0193	C:FXD MICA 82 PF 5% 300VDCW	04062	DM15E 820J 300V	1
0140-0200	C:FXD MICA 390 PF 5% 300VDCW	04062	DM15F 391J 300V	1
0140-0203	C:FXD MICA 30 PF 5% 500VDCW	04062	DM15E 300J 500V	1
0140-0204	C:FXD MICA 47 PF 5% NPO 500VDCW	04062	DM15E 470J	1
0150-0050	C:FXD CER 1000 PF 600VDCW	18486	TYPE E	1
0150-0093	C:FXD CER 0.01 UF +80-20% 100VDCW	91418	TA	1
0150-0121	C:FXD CER 0.1 UF +80-20% 50VDCW	56289	5C50A	2
0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	56289	5C13	8
0160-0137	C:FXD CER 0.33 UF 20% 25VDCW	56289	5C10	2
0170-0040	C:FXD MY 0.047 UF 10% 200VDCW	56289	192P47392	1
0170-0094	C:FXD MY 0.047 UF 20% 50VDCW	84411	TYPE 602	1
0180-0100	C:FXD ELECT TA 4.7 UF 10% 35VDCW	56289	150D475X9035B2	1
0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	01121	CB 1025	2
0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	01121	CB 1225	4
0683-2205	R:FXD COMP 22 OHM 5% 1/4W	01121	CB 2205	1
0683-2225	R:FXD COMP 2.2K OHM 5% 1/4W	01121	CB 2225	1
0683-2245	R:FXD COMP 220K OHM 5% 1/4W	01121	CB 2245	2
0683-2715	R:FXD COMP 270 OHM 5% 1/4W	01121	CB 2715	1
0683-3305	R:FXD COMP 33 OHM 5% 1/4W	01121	CB 3305	3
0683-3615	R:FXD COMP 360 OHM 5% 1/4W	01121	CB 3615	1
0683-3915	R:FXD COMP 390 OHM 5% 1/4W	01121	CB 3915	1
0683-4725	R:FXD COMP 4700 OHM 5% 1/4W	01121	CB 4725	2
0683-5115	R:FXD COMP 510 OHM 5% 1/4W	01121	CB 5115	1
0683-5625	R:FXD COMP 5600 OHM 5% 1/4W	01121	CB 5625	1
0683-6205	R:FXD COMP 62 OHM 5% 1/4W	01121	CB 6205	1
0683-6815	R:FXD COMP 680 OHM 5% 1/4W	01121	CB 6815	1
0683-7525	R:FXD COMP 7500 OHM 5% 1/4W	01121	CB 7525	1
0683-8205	R:FXD COMP 82 OHM 5% 1/4W	01121	CB 8205	1
0684-1041	R:FXD COMP 100K OHM 10% 1/4W	01121	CB 1041	1
0684-1511	R:FXD COMP 150 OHM 10% 1/4W	01121	CB 1511	1
0684-2701	R:FXD COMP 27 OHM 10% 1/4W	01121	CB 2701	1
0684-5621	R:FXD COMP 5600 OHM 10% 1/4W	01121	CB 5621	2
0686-2425	R:FXD COMP 2400 OHM 5% 1/2W	01121	EB 2425	1
1250-0102	CONNECTOR:BNC	91737	1250-0102	1
1251-0099	CONNECTOR:50-PIN MINIATURE	02660	57-10500	1
1251-0135	CONNECTOR:15-CONTACTS	95354	SD 615UR	1
1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	87216	2N2048	4
1900-0011	DIODE:SILICON 1N4168M MATCHED PAIR	93332	1N4168M	1
1901-0040	DIODE:SILICON	28480	1901-0040	3
1910-0016	DIODE:GERMANIUM 1 MICROSEC 60 WIV	28480	1910-0016	1
9140-0025	COIL:FXD RF 4.7 UH	28480	9140-0025	1
9140-0107	COIL:FXD RF 27 UH	28480	9140-0107	1
9140-0111	COIL:FXD RF 3.3 UH	28480	9140-0111	1
9140-0118	COIL:500 MH 5%	99800	2500-14	2
9140-0125	COIL:VAR 0.9-1.9 UH	28480	9140-0125	1
9140-0126	COIL:VAR 1.76-4.02 UH	28480	9140-0126	1
9140-0142	COIL:FXD RF 2.2 UH	28480	9140-0142	1
9170-0059	CORE:TOROID	02114	396T125-102	3

See list of abbreviations in introduction to this section

ELECTRONIC INSTRUMENTATION SALES AND SERVICE

UNITED STATES

ALABAMA P.O. Box 4207 2003 Byrd Spring Road S.W. Huntsville 35802 Tel: (205) 881-4591 TWX: 810-726-2204 ARIZONA 3009 North Scottsdale Road Scottsdale 85251 Tel: (602) 945-7601 TWX: 910-950-1282 232 South Tucson Boulevard Tucson 85716 Tel: (602) 623-2564 TWX: 910-952-1162 CALIFORNIA 3939 Lankershim Boulevard North Hollywood 91604 Tel: (213) 877-1282 TWX: 910-499-2170 1101 Embarcadero Road Palo Alto 94303 Tel: (415) 327-6500 TWX: 910-373-1280 2591 Carlsbad Avenue Sacramento 95821 Tel: (916) 482-1463 TWX: 910-367-2092 1055 Shafter Street San Diego 92106 Tel: (714) 223-8103 TWX: 910-335-2000 COLORADO 7965 East Prentice Englewood 80110 Tel: (303) 771-3455 TWX: 910-935-0705	CONNECTICUT 508 Tolland Street East Hartford 06108 Tel: (203) 289-9394 TWX: 710-425-3416 111 East Avenue Norwalk 06851 Tel: (203) 853-1251 TWX: 710-468-3750 DELAWARE 3941 Kennett Pike Wilmington 19807 Tel: (302) 655-6161 TWX: 510-666-2214 FLORIDA Suite 106 9999 N.E. 2nd Avenue Miami Shores 33138 Tel: (305) 758-3626 TWX: 810-848-7262 P.O. Box 20007 Herndon Station 32814 621 Commonwealth Avenue Orlando Tel: (305) 841-3970 TWX: 810-850-0113 P.O. Box 8128 Madeira Beach 33708 410 150th Avenue St. Petersburg Tel: (813) 391-0211 TWX: 810-863-0366 GEORGIA P.O. Box 28234 2340 Interstate Parkway Atlanta 30328 Tel: (404) 436-6181 TWX: 810-766-4890	ILLINOIS 5500 Howard Street Skokie 60076 Tel: (312) 677-0400 TWX: 910-223-3613 INDIANA 4002 Meadows Drive Indianapolis 46205 Tel: (317) 546-4891 TWX: 810-341-3263 LOUISIANA P.O. Box 856 1942 Williams Boulevard Kenner 70062 Tel: (504) 721-6201 TWX: 810-955-5524 MARYLAND 6707 Whitestone Road Baltimore 21207 Tel: (301) 944-5400 TWX: 710-862-0850 P.O. Box 727 Twinbrook Station 20851 12303 Twinbrook Parkway Rockville Tel: (301) 427-7560 TWX: 710-828-9684 MASSACHUSETTS Middlesex Turnpike Burlington 01803 Tel: (617) 272-9000 TWX: 710-332-0382 MICHIGAN 24315 Northwestern Highway Southfield 48075 Tel: (313) 353-9100 TWX: 810-232-1532 MINNESOTA 2459 University Avenue St. Paul 55114 Tel: (612) 645-9461 TWX: 910-563-3734	MISSOURI 5500 Wyoming Place Kansas City 64114 Tel: (816) 333-2445 TWX: 910-771-2087 2812 South Brentwood Blvd. St. Louis 63144 Tel: (314) 644-0220 TWX: 910-760-1670 NEW JERSEY 391 Grand Avenue Englewood 07631 Tel: (201) 567-3933 TWX: 710-991-9707 NEW MEXICO P.O. Box 8366 Station C 87108 6501 Lomas Boulevard N.E. Albuquerque Tel: (505) 255-5586 TWX: 910-989-1665 156 Wyatt Drive Las Cruces 88001 Tel: (505) 526-2485 TWX: 910-983-0550 NEW YORK 1702 Central Avenue Albany 12205 Tel: (518) 869-8462 1219 Campville Road Endicott 13760 Tel: (607) 754-0050 TWX: 510-252-0890 236 East 75th Street New York 10021 Tel: (212) 879-2023 TWX: 710-581-4376	82 Washington Street Poughkeepsie 12601 Tel: (914) 454-7330 TWX: 510-248-0012 39 Saginaw Drive Rochester 14623 Tel: (716) 473-9500 TWX: 510-253-5981 1025 Northern Boulevard Roslyn, Long Island 11576 Tel: (516) 869-8400 TWX: 510-223-0811 5858 East Molloy Road Syracuse 13211 Tel: (315) 454-2486 TWX: 710-541-0482 NORTH CAROLINA P.O. Box 5187 1923 North Main Street High Point 27262 Tel: (919) 882-6873 TWX: 510-926-1516 OHIO 5579 Pearl Road Cleveland 44129 Tel: (216) 884-9209 TWX: 810-421-8500 2460 South Dixie Drive Dayton 45439 Tel: (513) 298-0351 TWX: 810-459-1925 OREGON Westhills Mall, Suite 158 4475 S.W. Scholls Ferry Road Portland 97225 Tel: (503) 292-9171 TWX: 910-464-6103	PENNSYLVANIA 2500 Moss Side Boulevard Monroeville 15146 Tel: (412) 271-0724 TWX: 710-797-3650 144 Elizabeth Street West Conshohocken 19428 Tel: (215) 248-1600, 828-6200 TWX: 510-660-8715 TEXAS P.O. Box 7166 3605 Inwood Road Dallas 75209 Tel: (214) 357-1881 TWX: 910-861-4081 P.O. Box 22813 4242 Richmond Avenue Houston 77027 Tel: (713) 667-2407 TWX: 910-881-2645 GOVERNMENT CONTRACT OFFICE 225 Billy Mitchell Road San Antonio 78226 Tel: (512) 434-4171 TWX: 910-871-1170 UTAH 2890 South Main Street Salt Lake City 84115 Tel: (801) 486-8166 TWX: 910-925-5681 VIRGINIA P.O. Box 6514 2111 Spencer Road Richmond 23230 Tel: (703) 282-5451 TWX: 710-956-0157 WASHINGTON 11656 N.E. Eighth Street Bellevue 98004 Tel: (206) 454-3971 TWX: 910-443-2303
--	---	--	---	---	--

FOR AREAS NOT LISTED, CONTACT: Hewlett-Packard; 1501 Page Mill Road; Palo Alto, California 94304; Tel: (415) 326-7000; TWX: 910-373-1267; Telex: 34-8461

CANADA

ALBERTA 10010 - 105th Street Edmonton Tel: (403) 424-0718 TWX: 610-831-2431	BRITISH COLUMBIA Hewlett-Packard (Canada) Ltd. 2184 West Broadway Vancouver Tel: (604) 738-7520 TWX: 610-922-5050	NOVA SCOTIA 7001 Mumford Road Suite 356 Halifax Tel: (902) 455-0511 TWX: 610-271-4482	ONTARIO Hewlett-Packard (Canada) Ltd. 880 Lady Ellen Place Ottawa 3 Tel: (613) 722-4223 TWX: 610-562-1952	Hewlett-Packard (Canada) Ltd. 1415 Lawrence Avenue West Toronto Tel: (416) 249-9196 TWX: 610-492-2382	QUEBEC Hewlett-Packard (Canada) Ltd. 275 Hymus Boulevard Pointe Claire Tel: (514) 697-4232 TWX: 610-422-3022 Telex: 01-2819
--	---	---	---	---	--

FOR AREAS NOT LISTED, CONTACT: Hewlett-Packard Inter-Americas; 1501 Page Mill Road; Palo Alto, Calif. 94304; Tel: (415) 326-7000; TWX: 910-373-1267; Telex: 034-8461; Cable: HEWPACK Palo Alto

CENTRAL AND SOUTH AMERICA

ARGENTINA Mauricio A. Suárez Telecomunicaciones Carlos Calvo 224 Buenos Aires Tel: 30-6312, 34-9087 Cable: TELEPILOT Buenos Aires	CHILE Héctor Calcagni Casilla 13942 Santiago Tel: 490.505, 393.119	ECUADOR Laboratorios de Radio-Ingeniería Calle Guayaquil 1246 Post Office Box 3199 Quito Tel: 12496 Cable: HORVATH Quito	MEXICO Hewlett-Packard Mexicana, S.A. de C.V. Eugenia 408, Dept. 1 Mexico 12, D.F. Tel: 43-03-79	PERU Fernando Ezeta B. Av. Petit Thouars 4719 Miraflores Casilla 3061 Lima Tel: 50346 Cable: FEPERU Lima	URUGUAY Pablo Ferrando S.A. Comercial e Industrial Avenida Italia 2877 Casilla de Correo 370 Montevideo Tel: 40-3102 Cable: RADIUM Montevideo
BRAZIL Ciental, Importacao e Comércio Ltda. Avenida 13 de Maio, 13-22° andar Rio de Janeiro G.B. Tel: 42-9483	COLOMBIA Instrumentacion Henrik A. Langebaek & Cia. Ltda. Cra. 7A N° 48-51/59 Apartado Aereo 6287 Bogotá, 1 D.E. Tel: 45-78-06, 45-55-46 Cable: AARIS Bogota	EL SALVADOR Electrónica 27 Avenida Norte 1133 Apartado Postal 1589 San Salvador Tel: 25-74-50 Cable: ELECTRONICA San Salvador	NICARAGUA Roberto Terán G. Edificio Terán Apartado Postal 689 Managua Tel: 3451, 3452 Cable: ROTERAN Managua	PUERTO RICO San Juan Electronics, Inc. P.O. Box 5167 Ponce de León 150, Stop 3 Puerta de Tierra Santa San Juan 00906 Tel: (809) 725-3342 Cable: SATRONICS San Juan	VENEZUELA Citec, C.A. Edif. Arisan-Of. #4 Avda. Francisco de Miranda Apartado del Este 10934 Chacaito Caracas Tel: 71.88.05 Cable: CITECAL Caracas
Ciental, Importacao e Comércio Ltda. Rua Des. Eliseu Guilherme, 62 Sao Paulo 8 Tel: 70-2318 Cable: CIENTALCO, Sao Paulo	COSTA RICA Lic. Alfredo Gallegos Gurdian Apartado 3243 San José Tel: 21-86-13 Cable: GALGUR San José	GUATEMALA Olander Associates Latin America Apartado 1226 7a. Calle, 0-22, Zona 1 Guatemala City Tel: 22812 Cable: OLALA Guatemala City	PANAMA Electrónica Balboa, S.A. P.O. Box 4929 Ave. Manuel Espinosa No. 13-50 Bldg. Alina Panama City Tel: 30833 Cable: ELECTRON Panama City		

FOR AREAS NOT LISTED, CONTACT: Hewlett-Packard Inter-Americas; 1501 Page Mill Road; Palo Alto, Calif. 94304; Tel: (415) 326-7000; TWX: 910-373-1267; Telex: 034-8461; Cable: HEWPACK Palo Alto

ELECTRONIC INSTRUMENTATION SALES AND SERVICE

EUROPE

AUSTRIA

Unilabor H.m.b.H.
Wissenschaftliche Instrumente
Rummelhardtgasse 6/3
P.O. Box 33
Vienna IX/71
Tel: 426 181
Cable: LABORINSTRUMENT
Vienna

BELGIUM

Hewlett-Packard Benelux S.A.
20-24 rue de l'Hôpital
Brussels
Tel: 11 22 20
Tel: 29 48 00
Cable: TOCOPEN Brussels

DENMARK

Tage Olsen A/S
Rønnegade 1
Copenhagen O
Tel: 29 48 00
Cable: TOCOPEN Copenhagen

FINLAND

INTO O/Y
Meritullinkatu 11
P.O. Box 10153
Helsinki 10
Tel: 61 133
Cable: INTO Helsinki

FRANCE

Hewlett-Packard France
2 rue Tête d'Or
Lyon, 6 - Rhône
Tel: 52 35 66
Hewlett-Packard France
150 Boulevard Massena
Paris 13e
Tel: 707 97 19
Cable: HEWPACK Paris

GERMANY

Hewlett-Packard Vertriebs-GmbH
Lietzenburger Strasse 30
1 Berlin W 30
Tel: 24 86 36

Hewlett-Packard Vertriebs-GmbH
Herrenberger Strasse 110
703 Böblingen, Württemberg
Tel: 07031-6971
Cable: HEPAG Böblingen

Hewlett-Packard Vertriebs-GmbH
Achenbachstrasse 15
4 Düsseldorf 1
Tel: 68 52 58/59

Hewlett-Packard Vertriebs-GmbH
Kurhessenstrasse 95
6 Frankfurt 50
Tel: 52 00 36
Cable: HEWPACKSA Frankfurt

Hewlett-Packard Vertriebs-GmbH
Beim Strohause 26
2 Hamburg 1
Tel: 24 05 51/52
Cable: HEWPACKSA Hamburg

Hewlett-Packard Vertriebs-GmbH
Reginfriedstrasse 13
8 Munich 9
Tel: 69 51 21/22
Cable: HEWPACKSA Munich

GREECE

Kostos Karayannis
18, Ermou Street
Athens 126
Tel: 230 301
Cable: RAKAR Athens

IRELAND

Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks, England
Tel: Slough 28406-9, 29486-9
Cable: HEWPIE Slough

ITALY

Hewlett-Packard Italiana S.p.A.
Viale Lunigiana 46
Milan
Tel: 69 15 84
Cable: HEWPACIT Milan

Hewlett-Packard Italiana S.p.A.
Palazzo Italia
Piazza Marconi 25
Rome - Eur
Tel: 591 2544
Cable: HEWPACIT Rome

NETHERLANDS

Hewlett-Packard Benelux, N.V.
de Boelelaan 1043
Amsterdam, Z.2
Tel: 42 77 77
Cable: PALOBEN Amsterdam

NORWAY

Morgenstjerne & Co. A/S
Ingenioffirma
6 Wessels Gate
Oslo
Tel: 20 16 35
Cable: MOROF Oslo

PORTUGAL

Telectra
Rua Rodrigo da Fonseca 103
P.O. Box 2531
Lisbon 1
Tel: 68 60 72
Cable: TELETRA Lisbon

SPAIN

Ataio Ingerieros
Urgel, 259
Barcelona, 11
Tel: 230-69-88
Ataio Ingenieros
Enrique Larreta 12
Madrid, 16
Tel: 235 43 44
Cable: TELEATAIO Madrid

SWEDEN

HP Instrument AB
Hagakergatan 7
Mölnådal
Tel: 031 - 27 68 00
HP Instrument AB
Centralvägen 28
Solna
Tel: 08 - 83 08 30
Cable: MEASUREMENTS
Stockholm

SWITZERLAND

HEWPAK AG
Zürcherstrasse
8952 Schlieren
Zurich
Tel: (051) 98 18 21
Cable: HEWPACKAG Zurich

TURKEY

Telekom Engineering Bureau
P.O. Box 376 - Galata
Istanbul
Tel: 49 40 40
Cable: TELEMATION Istanbul

UNITED KINGDOM

Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks
Tel: Slough 28406-9, 29486-9
Cable: HEWPIE Slough

YUGOSLAVIA

Belram S.A.
83 avenue des Mimosas
Brussels 15, Belgium
Tel: 35 29 58
Cable: BELRAMEL Brussels

FOR AREAS NOT LISTED, CONTACT: Hewlett-Packard S.A.; 54 Route des Acacias; Geneva, Switzerland; Tel: (022) 42 81 50; Telex: 2.24.86; Cable: HEWPACKSA Geneva

AFRICA, ASIA, AUSTRALIA

AUSTRALIA

Hewlett-Packard Australia
Pty. Ltd.
22-26 Weir Street
Glen Iris, S. E. 6
Victoria
Tel: 20-1371 (4 lines)
Cable: HEWPAK Melbourne
Hewlett-Packard Australia
Pty. Ltd.
4 Grose Street
Glebe, New South Wales
Tel: 211-2235, 211-2888
Cable: HEWPAK Sydney

CEYLON

United Electricals Ltd.
P.O. Box 681
Yahala Building
Staples Street
Colombo 2
Tel: 5496
Cable: HOTPOINT Colombo

ETHIOPIA

African Salespower & Agency
Private Ltd., Co.
P. O. Box 718
Addis Ababa
Tel: 44090
Cable: ASACO Addisababa

HONG KONG

Schmidt & Co. (Hong Kong) Ltd.
P.O. Box 297
1511, Prince's Building
10, Chater Road
Hong Kong
Tel: 240168, 232735
Cable: SCHMIDTCO Hong Kong

INDIA

The Scientific Instrument
Co., Ltd.
6, Tej Bahadur Sapru Road
Allahabad 1
Tel: 2451
Cable: SICO Allahabad
The Scientific Instrument
Co., Ltd.
240, Dr. Dadabhai Naoroji Road
Bombay 1
Tel: 26-2642
Cable: SICO Bombay
The Scientific Instrument
Co., Ltd.
11, Esplanade East
Calcutta 1
Tel: 23-4129
Cable: SICO Calcutta
The Scientific Instrument Co., Ltd.
30, Mount Road
Madras 2
Tel: 86339
Cable: SICO Madras

The Scientific Instrument Co., Ltd.
B-7, Ajmeri Gate Extn.
New Delhi 1
Tel: 27-1053
Cable: SICO New Delhi

IRAN

Telecom, Ltd.
P. O. Box 1812
Teheran
Tel: 43850, 48111
Cable: BASCOM Teheran

ISRAEL

Electronics & Engineering
Div. of Motorola Israel Ltd.
16, Kremenetski Street
Tel-Aviv
Tel: 35021/2/3
Cable: BASTEL Tel-Aviv

JAPAN

Yokogawa-Hewlett-Packard Ltd.
Shinhankyu Building
No. 8, Umeda
Kita-ku, Osaka City
Tel: 0726-23-1641
Yokogawa-Hewlett-Packard Ltd.
Ito Building
No. 59, Kotori-cho
Nakamura-ku, Nagoya City
Tel: 551-0215

Yokogawa-Hewlett-Packard Ltd.
Ohashi Building
No. 59, I-chome, Yoyogi
Shibuya-ku, Tokyo
Tel: 370-2281
Cable: YOKOHEWPAK Tokyo
Telex: 232-2034

KENYA

R. J. Tilbury Ltd.
P. O. Box 2754
Suite 517/518
Hotel Ambassadeur
Nairobi
Tel: 25670, 26803, 68206
Cable: ARJAYTEE Nairobi

KOREA

American Trading Co., Korea, Ltd.
Seoul P. O. Box 1103
112-35 Sokong-Dong
Jung-ku, Seoul
Tel: 3.7049, 3.7613
Cable: AMTRACO Seoul

LEBANON

Constantin E. Macridis
Clemenceau Street
Clemenceau Center
Beirut
Tel: 220846
Cable: ELECTRONUCLEAR Beirut

MALAYSIA

MECOMB Malaysia Ltd.
2 Lorong 13/6A
Section 13
Petaling Jaya, Selangor
Cable: MECOMB Kuala Lumpur

NEW ZEALAND

Sample Electronics (N.Z.) Ltd.
8 Matipo Street
Onehunga S.E. 5
Auckland
Tel: 667-356
Cable: ELPMAAS Auckland

PAKISTAN (EAST)

Mushko & Company, Ltd.
31, Jinnah Avenue
Dacca
Tel: 80058
Cable: COOPERATOR Dacca

PAKISTAN (WEST)

Mushko & Company, Ltd.
Oosman Chambers
Victoria Road
Karachi 3
Tel: 51027, 52927
Cable: COOPERATOR Karachi

SINGAPORE

Mechanical and Combustion
Engineering Company Ltd.
9, Jalan Kilang
Singapore, 3
Tel: 642361-3
Cable: MECOMB Singapore

SOUTH AFRICA

F. H. Flanter & Co. (Pty.), Ltd.
Rosella House
Buitencingle Street
Cape Town
Tel: 3-3817
Cable: AUTOPHONE Cape Town

F. H. Flanter & Co. (Pty.), Ltd.
104 Pharmacy House
80 Jorissen Street
Braamfontein, Johannesburg
Tel: 724-4172

TAIWAN

Hwa Sheng Electronic Co., Ltd.
P. O. Box 1558
21 Nanking West Road
Taipei
Tel: 46076, 45936
Cable: VICTRONIX Taipei

THAILAND

The International
Engineering Co., Ltd.
P. O. Box 39
614 Sukhumvit Road
Bangkok
Tel: 913460-1-2
Cable: GYSOM Bangkok

VIETNAM

Landis Brothers and Company,
Inc.
P.O. Box H-3
216 Hien-Vuong
Saigon
Tel: 20.805
Cable: LANBROCOMP Saigon

FOR AREAS NOT LISTED, CONTACT: Hewlett-Packard Export Marketing; 1501 Page Mill Road; Palo Alto, California 94304; Tel: (415) 326-7000; Telex: 034-8461; Cable: HEWPACK Palo Alto

